



Innovative Tile and Stone  
Installation Systems

# Tiled Swimming Pools, Fountains and Spas



Cover Photo: Anse Chastenet – Jade Mountain, Soufriere, St. Lucia

©2009 LATICRETE International, Inc. All rights reserved. No part of this publication (except for previously published articles and industry references) may be reproduced or transmitted in any form or by any means, electronic or mechanical, without the written permission of LATICRETE International, Inc.


The information and recommendations contained herein are based on the experience of the author and LATICRETE International, Inc. While we believe the information presented in these documents to be correct, LATICRETE International, Inc. and its employees assume no responsibility for its accuracy or for the opinions expressed herein. The information contained in this publication should not be used or relied upon for any specific application or project without competent examination by qualified professionals and verification of its accuracy, suitability, and applicability. Users of information from this publication assume all liability arising from such use.

# TILED SWIMMING POOLS, FOUNTAINS AND SPAS

## TECHNICAL DESIGN MANUAL

LATICRETE Technical Service Staff



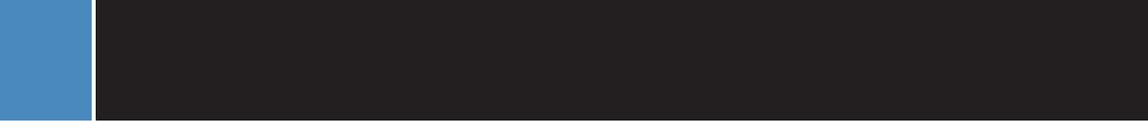

**SECTION 1 INTRODUCTION ..... 11**

- 1.1 Preface
- 1.2 History of Tile and Stone in Swimming Pools
- 1.3 Why Use Tile and Stone in Swimming Pools and Fountains?
- 1.4 Summary of Manual Content

**SECTION 2 TYPES OF POOLS AND FOUNTAINS ..... 15**

- 2.1 In Ground
- 2.2 Above Ground
- 2.3 Suspended Pools
- 2.4 Spa/Therapeutic

**SECTION 3 TYPES OF POOL CONSTRUCTION.....19**

- 3.1 Poured Concrete
  - Type of Concrete
  - Floor Flatness
  - Age of Concrete
  - Cracking
  - Contamination
- 3.2 Gunite/Shot-crete
- 3.3 Concrete Masonry Units
- 3.4 Steel Shell
- 3.5 Fiberglass Shell

**SECTION 4 POOL PROJECT DESIGN CONSIDERATIONS ..... 25**

- 4.1 Tile Industry Standards
  - Tile Council of North America (TCNA)
  - American National Standards Institute (ANSI)
- 4.2 Structural Considerations
  - Loads
  - Requirements of Design
  - Deflection
- 4.3 Types of Structural Movement
  - Thermal Movement
  - Moisture Movement
  - Differential Movement
- 4.4 Movement Joints
  - Controlling Stresses With Movement Joints
  - Guidelines for Movement Joints
  - Movement Joint Treatment

- 4.5 Swimming Pool/Fountain Construction Considerations
  - Layout and Positioning
  - Excavation
  - Hydrostatic Pressure Relief Valve
  - Vapor Retarder
  - Water Stop
  - Plumbing
  - Lights and Electrical
  - Observation Portals and Windows
- 4.6 Pool Deck
  - Pool Deck Substrates
  - Slope to Drain
  - Movement Joints
  - Cure Time
- 4.7 Building and Safety Code Considerations
  - Building Codes
  - Safety Codes
    - Solid Barrier
    - Fence Made Up Of Horizontal and Vertical Members
    - Chain Link Fence
    - Fence Made Up of Diagonal Members
    - Above Ground Pools With Barrier On Top of Pool
    - Gates
  - Standards

**SECTION 5 SELECTION OF POOL TILE OR FINISH ..... 39**

- 5.1 Considerations for Tile Selection
- 5.2 Placement of Tile in Swimming Pool and Pool Decks
- 5.3 Types of Tile for Submerged Applications
  - Porcelain
  - Stone
  - Glass
  - Mosaics
    - Paper Face Mounted
    - Plastic Face Mounted
    - Rear Dot Mounted
    - Rear Mesh Mounted
    - Rear Paper Mesh Back Mounted

5.4 Non-Tiled Pool Finish Types

Plaster

Pebble Tec

Paint

Epoxy Paint

Chlorinated Rubber Base Paint

Water-Based Acrylic Paint

Vinyl Liner

**SECTION 6 TILE INSTALLATION PREPARATION AND EQUIPMENT..... 49**

6.1 Installation Equipment, Substrate Preparation and Installation Procedures

Substrate and Finish Material Surface Preparation

Adhesive Compatibility

6.2 Inspection and Evaluation

Site Visit and Pre-Construction Conference

Job Site Conditions

Contamination

Surface and Ambient Temperatures

Weather Conditions and Substrate Protection

Hot Weather Applications

Cold Weather Applications

Dry, Windy Conditions

Wet Conditions

6.3 Moisture Content of Concrete

Concrete Curing and Age of Concrete

Cracking

Treating Shrinkage Cracks

Structural Cracks

6.4 Potential Bond Breaking Materials

Laitance

Curing Compounds, Sealers and Form Release Agents

6.5 Substrate Preparation Equipment and Procedures

Contamination Removal

Methods of Removal

6.6 Substrate Tolerances

Flatness and Levelness

6.7 Final Surface (Residue) Cleaning

- 6.8 Finish Material Preparation
  - Types of Finish Materials
    - Ceramic and Porcelain Tiles
    - Stone
    - Glass Tile
- 6.9 Adhesive Mixing Equipment and Procedures
  - Types of Adhesives and Equipment
    - Latex Portland Cement Based Adhesive Mortars
    - Epoxy Adhesive
    - Mortar Beds, Screeds and Renders
- 6.10 Installation Equipment and Procedures
- 6.11 Grout and Sealant Materials, Methods and Equipment
- 6.12 Post Installation Cleaning
- 6.13 Mechanical Means and Methods
  - Power Screeds
  - Power Grouting
  - Mortar Mixers and Pumps
  - Spraying Liquid Applied Waterproofing Membranes
- 6.14 References

**SECTION 7 POOL/FOUNTAIN/SPA TILE INSTALLATION ..... 69**

- 7.1 Adhesive and Mortar Performance and Selection
  - Criteria
- 7.2 Methods of Installation
  - Thin Bed Method
  - Medium Bed Method
  - Thick Bed Method
    - Templates
    - Gutters and Special Forms
- 7.3 Waterproofing
  - Importance
  - External “Sandwich” Type Roofing Membrane
  - Direct Bond
    - Sheet Membranes
    - Peel and Stick Membranes
    - Trowel Applied Membranes
    - Latex Cement Based Membranes
    - Epoxy Based Membranes
    - Liquid Applied Membranes
  - Detailing of Penetrations/Railing/Steps
  - Flood Testing

- 7.4 Tile Setting Mortars
  - Types of Adhesives
    - Liquid Latex-Fortified Cement Mortar
    - Types of Liquid Additives
    - Epoxy Resin Adhesives
  - Cure Time
- 7.5 Grout
  - Importance
  - Latex Cement Grout
  - Latex Cement Grout
- 7.6 Sealant
  - Importance
  - Backup Strip (Backer Rod)
  - Silicon
  - Urethane or Polyurethane
  - Acrylic
- 7.7 Post Installation
  - Cure Times
  - Inspection
- 7.8 Typical Renders and Details for Swimming Pools and Water Features
- 7.9 Warranty

**SECTION 8 POOL DECK AND NATATORIUM TILE INSTALLATIONS .....89**

- 8.1 Tile Installation Materials Performance Selection Criteria
- 8.2 Methods of Installation
- 8.3 Waterproofing/Anti-Fracture Membranes
- 8.4 Tile Setting Mortars
  - Redispersible Polymer-Fortified Cement Mortar and Liquid Latex Fortified Cement Mortar
  - Epoxy Resin Adhesives
- 8.5 Grout
  - Importance
    - Epoxy Grout
    - Cement Grout and Latex Cement Grout
- 8.6 Sealant
- 8.7 Typical Renders and Details for Swimming Pool and Natatorium Deck Applications

**SECTION 9 SPECIFICATIONS FOR SWIMMING POOL/FOUNTAIN/SPA INSTALLATIONS..... 95**

- 9.1 Specification Sections 1 and 2
- 9.2 ES-P601 Concrete – Swimming Pool Tank 9.3 ES-P601D Concrete – Swimming Pool Tank – Direct Bond Thin Bed
- 9.4 ES-P602 Steel/Metal – Thin Bed
- 9.5 ES-P603 Steel/Metal – Thick Bed
- 9.6 ES-P604 Fiberglass – Thin Bed Epoxy

**SECTION 10 SWIMMING POOL/FOUNTAINS/SPA DETAIL DRAWINGS ..... 141**

- ES-P601 Concrete – Swimming Pool Tank
- ES-P601A Concrete – Swimming Pool Gutter
- ES-P601B Concrete – Swimming Pool Roll out Rim
- ES-P601C Concrete – Pool Deck/Trench Drain
- ES-P601D Concrete – Swimming Direct Bond
- ES-P602 Stainless Steel – Pool/Spa Thin-Bed
- ES-P603 Stainless Steel – Pool/Spa Thick Bed
- ES-P604 Fiberglass – Pool/Spa Thin Bed
- ES-F101 Concrete – Slab-On-Grade – Bonded Thick Bed
- ES-F101B Concrete – Slab-On-Grade – Bonded Thick Bed with Waterproofing/Anti-Fracture Membrane
- ES-F102 Concrete – Slab-On-Grade – Thin Bed
- ES-F111 Concrete – Slab-On-Grade or Suspended – Unbonded Thick Bed
- ES-F111B Concrete – Slab-On-Grade or Suspended – Unbonded Thick Bed With Waterproofing Membrane
- ES-B417A Concrete Tub – Tubs, Fountains and Curbs
- ES-B417B Wood Form Tub – Tubs, Fountains and Curbs
- ES-W244 (E) Cement Backer Board – Steel Framing – Exterior
- ES-WP300 Typical Pipe Penetration
- ES-WP301 Typical Drain Detail
- ES-WP302 Drain Detail – Exploded View

**SECTION 11 POOL WATER AND TILE INSTALLATION MAINTENANCE .....163**


- 11.1 Fill and Drain Rates
- 11.2 Opening and Closing Pool
- 11.3 Water Treatment and Tile Installation
  - Water Chemistry
  - Sanitizers
  - Mineral Balance
  - pH
  - Alkalinity
  - Hardness
  - Total Dissolved Solids
- 11.4 Pool Water Chemistry and How It Affects Tile or Stone Installations
- 11.5 Repairing Tile or Stone Installations for Submerged Installations

**SECTION 12 TROUBLESHOOTING AND CASE STUDY ..... 175**

- 12.1 Troubleshooting
- 12.2 Case Study

**SECTION 13 APPENDIX .....185**

- 13.1 Swimming Pools/Fountains/Water Features/Frequently Asked Questions
- 13.2 Glossary
- 13.3 Resource Guide

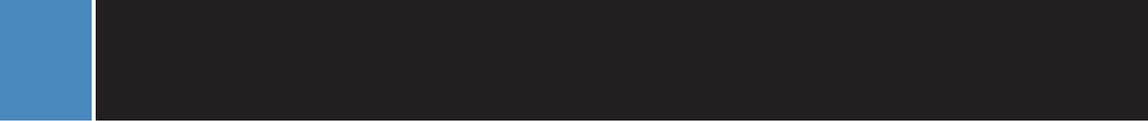

# Section 1 – Introduction



### 1.1 Preface

LATICRETE International, a manufacturer of ceramic tile, stone and thin brick masonry installation systems, has long recognized the need for a technical manual to provide guidelines and recommendations for the design, specification and installation of tile and stone in swimming pools, fountains, water features and spas. Technical advances in materials, manufacturing, and construction methods have expanded the role of tile and stone in this application type since the development of adhesive mortars in the 1950's. In keeping with their position as an industry leader, LATICRETE International is publishing this first edition of the Tiled Swimming Pool, Fountain and Spas Technical Design Manual to make state-of-the-art information and technology available to architects, engineers, construction professionals, tile contractors, and manufacturers of ceramic tile and stone. It is the goal of this publication to encourage new ideas, research and technology for the purpose of improving the future of submerged installations of tile and stone.

### 1.2 History of Tile and Stone In Swimming Pools and Fountains

The use of swimming pools, fountains and water tanks can be traced back to the ancient world. The Great Bath at Mohenjo-daro (in the south of what is now Pakistan) may well be the earliest example of a swimming pool in the world. This pool is approximately 40' (12 m) long and 23' (7 m) wide with a maximum depth of 8' (2.4 m) and had two staircases leading into it. This pool was constructed of brick which was laid over a thick layer of bitumen (natural tar) which acted as a waterproofing. On top of the tar was a gypsum plaster that acted as the finish coat.<sup>1</sup> This structure dates back to sometime during the third millennium BC (or between 2000 and 2500BC).

Evidence of the first use of tile and stone in pools, fountains and water features dates all the way back to the Roman Empire. Tiled fountains and bathing pools have been found in the ruins of Pompeii and Herculaneum. These tiled fountains and bathing pools were installed with ancient methods, have withstood the test of time (along with volcanic eruption and pyroclastic flow) and are still in place today.



Figure 1.1 – Stone water feature found in the ruins of Pompeii.



Figure 1.2 – Mosaic and Sea Shell fountain found in the ruins of Pompeii/Herculaneum.

The first recreational pools began to appear during the mid 1800's in England and the popularity of these "status symbols" increased significantly in the United States after WWII ended. With the evolution of materials and installation methods, swimming pools have become less of a status symbol and more of a way to stay cool in the summer. According to the Association of Pool and Spa Professionals (APSP) there are 4,134,610 swimming pools in the United States<sup>2</sup> and many more all over the world. The materials used to create these pools include concrete, fiberglass, steel, and vinyl and many of these have a tile or stone finish within the pool, fountain, spa or water feature.

Pools and fountains now range in size from a few square feet (m<sup>2</sup>) to the world's largest swimming pool located in Algarrobo, Chile – an amazing 3,323' long (1,010 m), which holds an astonishing 66,000,000 gallons (250,140,000 liters) of water which weighs 550,770,000 pounds (250,350,000 kilos)!

### **1.3 Why Use Tile and Stone In Swimming Pools and Fountains?**

Swimming pools, fountains, spas, potable water tanks, and any other vessel which are designed to hold water for extended periods, or permanently, are ideal for the use of tile or stone. Historically, man has desired to create pools and fountains that are both beautiful and durable. Tile and stone installations can easily provide both of these qualities. Swimming pools are subjected to one of the most aggressive environments a tiling system has to endure, and a properly installed and maintained tile or stone installation should last the life of the pool structure. Tiled swimming pools are regarded as not only aesthetically pleasing but also as being one of the most chemically inert finishes.<sup>3</sup>

It is important to make sure that the tile or stone chosen for each swimming pool or fountain project is suitable for use in submerged installations. Swimming pools will

often be exposed to different types of chemical treatments, varying pH levels, exposure to direct sunlight, regular usage, and other environmental factors. Porcelain tile, glass tile and certain other tiles which are specifically manufactured for submerged installations are the perfect choices. These tiles typically have a very low absorption rate, are impervious to pool chemicals and are available in a myriad of sizes, shapes, colors, and textures. The design potential with tile is virtually unlimited!

Stone is often utilized to provide a more natural look to a swimming pool or fountain installation. Granite, marble, slate, river rock, limestone and other stone have been used in fountains for many centuries, and more recently, in swimming pools around the world.

It is equally important to make sure that the tile and stone are installed with high quality setting and grouting materials manufactured by LATICRETE International, Inc. LATICRETE manufactures a variety of underlayments, membranes, thin-sets, grouts, and sealant that are ideal for use in permanently submerged applications. In fact, LATICRETE has been successfully used in these types of installations for over 50 years!

Where the tile is placed, along with the color and pattern, are the choices of the pool owner or design professional. Tile can be installed over the entire area of the pool and/or pool deck, just on the walls of the pool, just on the pool bottom, or along the water line or coping. Anywhere that tile or stone is placed it will provide a long lasting and beautiful finish.

### **1.4 Summary of Manual Content**

#### **Section 2 – Types of Pools and Fountains**

This section provides a brief overview of the types of swimming pools, fountains and spas that are used around the world today. These include in-ground, above ground and suspended pools and a brief description of the construct of each.

### **Section 3 – Types of Pool and Fountain Construction**

A more in-depth overview of the different types of pool and fountain construction that are used and how each type of construction is placed and how each type of construction relates to a tile or stone installation.

### **Section 4 – Pool Project Design Considerations**

Information about the different building codes, structural considerations, movement and movement joints, and construction considerations for swimming pools and pool decks.

### **Section 5 – Selection of Pool Tile or Finish**

Considerations for choosing the proper tile, and where it can be placed in a swimming pool or fountain. Different types of tile, including porcelain, stone and glass mosaics, are referenced as well as different types of alternative pool finishes.

### **Section 6 – Tile Installation Preparation and Equipment**

How to properly prepare and inspect the substrate prior to installation of tile or stone in a swimming pool or fountain installation. There is also a brief description of equipment and tool considerations.

### **Section 7 – Pool/Fountain/Spa Tile Installation**

A comprehensive overview of the tile installation methods including leveling, waterproofing, thin-setting, grouting, sealant application, and post installation.

### **Section 8 – Pool Deck and Natatorium Tile Installations**

A comprehensive overview of the tile installation methods, including leveling, waterproofing, thin-setting, grouting, sealant application, and post installation.

### **Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations**

Individual specifications for installation of tile in concrete, steel/metal, and fiberglass shell pools, fountains and spas.

### **Section 10 – Swimming Pool/Fountain/Spa Detail Drawings**

Individual details showing the installation of tile for different application types, as well as drain and pipe penetrations for pools and pool decks.

### **Section 11 – Pool Water and Tile Installation Maintenance**

A brief description of the general standards for fill and drain rates, opening and closing a pool, water treatment, inspection and repairs for tiled swimming pool.

### **Section 12 – Appendix**


Troubleshooting pictorial, case study, glossary, frequently asked questions, and resource guide.

1 <http://www.harappa.com/indus/8.html>

2 [http://www.accuratebuilding.com/publications/family\\_circle/swimming\\_pool\\_guide\\_circle1987.html](http://www.accuratebuilding.com/publications/family_circle/swimming_pool_guide_circle1987.html)

3 Gray, Fred (2006). Correctly Installing Tile in Swimming Pools. Footscray West, Victoria, Australia: SPLASH EXPO Conrad Jupiters.

## Section 2 – Types of Pools and Fountains

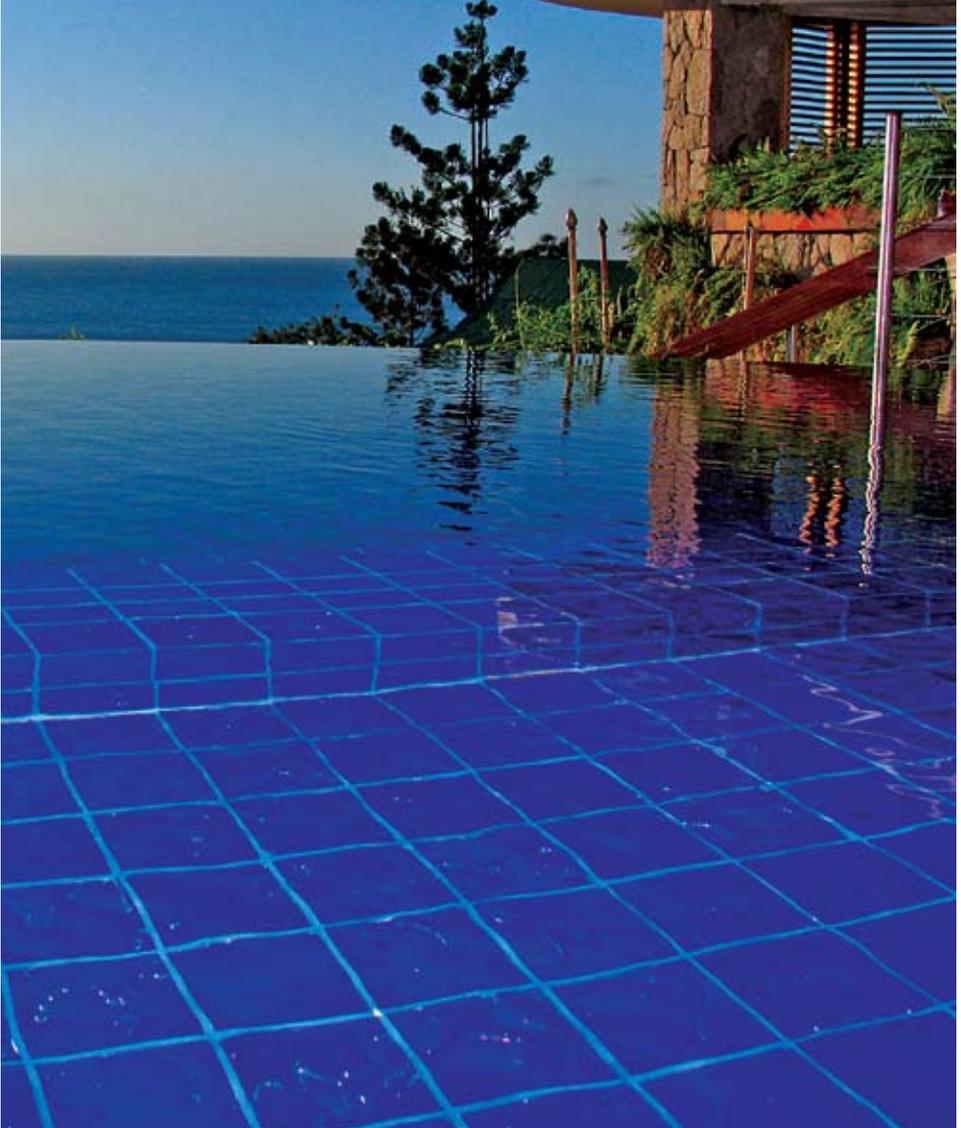

### 2.1 In-Ground

There are three types of in-ground pool constructions: fiberglass, vinyl, and concrete. Each type of in-ground pool needs a pump, filter, drains, returns, plastic piping, and a chemical feeder.

Fiberglass pools are noted for their relatively quick installation, non-abrasive finish that resists staining, and inert composition that inhibits algae formation. Fiberglass pools are manufactured in a variety of shapes and sizes and are shipped to the installation site in one piece. Once the pool is in place and leveled, heating, filtration, and other systems can be installed and set up. The installation crew then backfills the site and fills the pool with water. Fiberglass pools are rarely tiled completely, but many do have a decorative band installed around the waterline of the pool. The use of a 100% solids epoxy setting material (e.g. LATAPOXY® 300 Adhesive) is required for installation of tile to fiberglass.

Vinyl-lined pools, known for their smooth, stain-resistant surface, are a very popular choice for in-ground pools. Design options are typically limited, but they are less expensive than fiberglass or concrete pools. Depending on the soil composition, once the excavation is complete, a wall system is constructed of wood, poured concrete, steel, or polymer. Bottom material might be of packed sand that is free of stones or poured concrete. Once the vinyl liner is installed and the heating, filtration and other systems are set up, the site is backfilled and the pool is filled. Liners usually have to be replaced about every 10 years, depending on usage and geographic location. Tile should not be installed in a vinyl lined pool.

A concrete pool is, by far, the most popular choice for in-ground pools. Concrete pools can take several weeks to construct and set up, but the design possibilities are endless. There are basically 4 choices when choosing the type of concrete pool construction.

**Concrete Block** – In concrete block pool construction, a floor foundation is poured and a concrete block wall is constructed to the desired shape of the pool. After the filtration attachments are inserted into the structure the walls are typically reinforced with deformed steel bars and all internal cavities of the block are solid filled. Once the shell is completed the pool can be tiled or finished in any number of ways.<sup>1</sup>

**Poured Concrete** – In poured concrete construction, a form is typically created using plywood in the desired shape of the pool. The pool floor is poured first and the walls are constructed on top of the floor, around a steel reinforcing web. The cavities in the forms are filled with a high density concrete specifically designed and mixed for pool construction. A vibrating tool is utilized to fill any cavities and honeycomb voids and to make sure that the steel reinforcing is completely encapsulated. Once the forms are removed and the concrete is allowed to cure for a specified length of time, the pool can be tiled or finished using another method.<sup>2</sup>

**Gunite** – In Gunite pool construction, a wood form is created and installed inside the excavated pool hole. The shape and size of the wood form is made larger than the desired finished pool by the thickness of the walls. Steel reinforcement is constructed and installed at pre-determined distances based on local construction code requirements. This steel reinforcement is suspended away from the wood form which helps keep the reinforcement centered within the wall and away from the bottom of the drainage material layer underneath the pool. The Gunite concrete is then pneumatically sprayed onto and around the steel reinforcement and wood form to the desired thickness of the pool walls. The Gunite mix (cement and pool aggregate mix) is delivered down a hose as a dry mix under pressure and blended at the spray head with potable water. The Gunite operator is responsible for maintaining the proper water

to powder ratio to get the maximum strength from the concrete. Once sprayed in place the interior of the pool is troweled and formed to straighten the interior walls. Once cured, a Gunite pool can be tiled or finished using another method.<sup>3</sup>

**Shot-Crete** – In Shot-crete pool construction, the preparation of the form and steel reinforcement is similar to Gunite. The main difference is the way that the concrete is delivered and applied. Shot-crete arrives at the site as a ready-mix concrete from the batching plant and is delivered in a cement truck. Quality of the concrete is determined at the batching plant during mixing and the spray operator has no control over the final quality of the concrete. Once cured a shot-crete pool can be tiled or finished using another method.<sup>4</sup>

Finished cost of a concrete pool will vary depending on region, landscaping, construction type, and design. A concrete pool requires an interior surface finish which, with the various colors and textures to choose from, is limited only by your imagination. Concrete finishes typically need resurfacing about every 10–15 years. However, tile installations in a properly maintained swimming pool or fountain can last a lifetime.

### 2.2 Above Ground

Above ground pools function much the same way as an in ground pool but at a fraction of the cost.

There are two types of above ground swimming pools – pools with hard sides and pools with soft sides.

Hard sided above ground pools are normally round or oval and are available in a variety of sizes and depths. They have a sheet metal frame which has a one piece flexible metal wall fixed to it with a sheet metal rail attached to the top for stabilization. A vinyl liner is then inserted and attached to the top rail to contain the water. Although cheaper than a soft side above ground pool, a metal sided swimming

pool requires more elaborate ground preparation and is considerably more difficult to assemble.

Soft sided above ground pools are normally available in both round and the more popular rectangle shape. Although they have been around for some time, soft sided above ground swimming pools have become increasingly popular over the last 10 years. Like their metal wall predecessor, they are also available in a variety of sizes and depths. In fact, due to their strength and durability, they are quite often custom built in extremely large sizes for use in commercial applications. Soft sided pools can be placed on any surface, grass, dirt, concrete, even sand or gravel, and will normally tolerate up to 3" (75 mm) out of level. The pool liner material is similar to that used for bullet proof vests and therefore is extremely durable and puncture resistant. The average family can normally assemble a soft side pool in a relatively short amount of time and can move it as often as needed.

Both types of above ground pools require a filter and an electric pump to circulate the water and a ladder to get in and out of the pool. Other desirable accessories may include an automatic pool cleaner, an automatic chlorinator, a pool heater, lighting or a swimming pool slide. Due to the types of construction materials and the flexibility of the walls, tile is never used in above ground pools.

### 2.3 Suspended Pools

Pools and fountains do not necessarily have to be located in or on solid earth. In fact, many pools and fountains are located above ground level, either within a structure or on top of a structure, and are supported by the structure itself. This type of pool or fountain must be designed with critical factors in mind; the pool cannot leak and the structure must be able to support the total weight of the pool, the water and occupants within the pool. If the pool is located indoors then the structure must also

be designed and constructed to handle the excessive humidity created by the pool, and the chemicals used to sanitize and maintain the pool. In most cases, the pool mechanical room is located in a room below the pool level to better utilize gravity in the circulation of water.

Tile is a common feature inside of a suspended pool or fountain, and can be installed within the entire pool and deck area or just in a band around the waterline.



Figure 2.1 – Suspended pool on an upper floor of the Swissôtel in Chicago, IL.

### 2.4 Spa / Therapeutic

The use of spas, hot tubs and therapeutic pools has been consistently rising for several decades as new and less expensive manufacturing techniques have been established. Many of these installations contain tile. Some of the differences between a pool and a spa, hot tub or therapeutic pool are temperature (these vessels typically contain hot water or water that is routinely heated), and size (many of these vessels are designed to hold a small number of occupants). The construction of spas, hot tubs and therapeutic pools commonly consist of stainless steel or fiberglass. Water treatments are similar to what is used in a swimming pool (Bromine is the preferred treatment for

hot water) but the increased temperature can have an impact on the effectiveness of these treatments and how they react with fittings, tile or stone, plumbing, etc...

We will cover the methods of swimming pool and fountain construction in greater detail in Section 3 “Types of Pool and Fountain Construction”.

1, 2, 3, 4 [http://www.homehelp4u.net/services/concrete\\_pool\\_construction.php](http://www.homehelp4u.net/services/concrete_pool_construction.php)

## Section 3 – Types of Pool Construction



### 3.1 Poured Concrete

One type of in ground pool construction type is cast-in-place, reinforced concrete; in other words, concrete is poured around steel reinforcing (rebar) inside wooden formwork. Concrete placed or pumped on-site over steel reinforcing with floors and walls, contained by formwork, is generally used in large commercial pools, elevated pools or on-grade pools where poor sub-soil conditions exist.

Pool bottoms and walls should be cast monolithically in order to avoid cracking and reduce the need for extra movement joints. In poured concrete pool construction a mold is created using wood or plywood which will encase the finished pool shape. High-density concrete, specifically designed for pool applications, is then poured into the forms. A vibrating tool is used to make sure that the concrete fills all of the cavities and completely encapsulates all of the reinforcing steel. Once the concrete has set, the forms can be removed and the concrete allowed to reach full cure.

Typically, this form of construction requires a greater level of surface preparation for a tile installation than a pneumatically applied concrete (e.g. Gunit or Shot-crete). Vertically formed surfaces are especially prone to thin layers of weakened portland cement (laitance). Care should be taken to ensure that the concrete surface has a proper screed finish and no laitance or other condition that may inhibit bonding of a waterproofing membrane or tile thin-set. Any type of form release agent, curing compound, sealer, or other contaminant must be removed prior to the direct adhesion of any tile or stone. The use of concrete additives, such as super plasticizers allow for low water-to-cement ratios but can induce bleed water and increase the possible occurrence of laitance. The concrete should also not be treated with a crystalline type waterproofing membrane since this type of material closes the pore structure of the concrete to inhibit water from moving

through the capillaries. A crystalline type waterproofing membrane essentially seals the concrete and acts as a bond inhibitor for tile thin-sets or epoxy adhesives.

Cast-in-place concrete is more likely to experience shrinkage cracks after placement so proper placement and installation of reinforcing steel will help to reduce the occurrence of this type of cracking. The proper placement of a waterproofing/anti-fracture membrane (e.g. LATICRETE® 9235 Waterproofing Membrane or LATICRETE Hydro Ban™) will prevent any shrinkage cracks from transmitting through to the tile layer. It is important to note that waterproofing membrane, used in a submerged installation, must cover the entire inside shell of the pool or fountain.

There are certain considerations which must be taken into account before the installation of a membrane or tile/stone can commence;

- Type of Concrete
- Floor Flatness
- Concrete Curing
- Cracks
- Contamination

**Type of Concrete** – Concrete used in swimming pools and continuous submersion projects should be specially designed for this type of application. The concrete should be mixed to provide a high density, low porosity finished product and not have a water to cement ratio greater than 0.48. The concrete shell for a salt water pool or fountain should be poured using sulfate-resisting cement. The use of this type of concrete will help to protect the structural, reinforcing steel in the pool shell and prevent serious problems in the future.

**Floor Flatness** – Typical horizontal concrete applications must be finished to a floor flatness ( $F_f$ ) of 25 or greater. A floor flatness of 25 roughly correlates to 1/4" in 10' (6 mm in 3 m). Measurement of  $F_f$  is done using ASTM E1155 "Standard Test Method for Determining  $F_f$  Floor Flatness and  $F_L$  Floor Levelness Numbers" and

American Concrete Institute (ACI) “Standard Specification for Tolerances for Concrete Construction and Materials”.

**Age of Concrete** – Concrete pool shells must be cured for a minimum of 28 days and a minimum time interval should be allowed between each successive stage of the project to ensure full cure. These time intervals will vary by temperature and weather conditions, and should only be reduced if an adequate design solution is provided.

**Cracking** – Any cracks in the concrete shell should be effectively repaired prior to the application of any finish material on the sides and bottom of the pool or fountain and on the pool deck. The use of a superior waterproofing/anti-fracture membrane (e.g. LATICRETE Hydro Ban or LATICRETE 9235 Waterproofing Membrane) will provide protection not only against cracks in the concrete shell from transmitting through the tile installation, but also provide waterproofing as well. This keeps the water in the pool where it belongs!

**Contamination** – Keep in mind that poured concrete pool or fountain shells utilize wood forms during the construction process. In order to remove these forms after the concrete has set the installers spray the inside of the forms with either old motor oil, diesel fuel or a proprietary material that helps inhibit bond. Unfortunately, some of this form release agent may be left on the concrete surface as residue. As effective as these materials are at preventing bond of the concrete to the wood forms, they can be equally effective at inhibiting bond of a screed, membrane, tile, stone, or other finish coating to the concrete surface.<sup>1</sup> The proper removal of these contaminants and subsequent surface preparation will be covered in greater depth in Section 6.

Refer to Section 4.5 for more information on critical design elements (e.g. water stops, vapor retarders, hydrostatic relief valves, etc...) which are required to be installed or planned for prior to or during installation of the concrete.

### 3.2 Guniting/Shot-crete

The construction of a pool or fountain using the Guniting or Shot-crete installation method begins with the forming of the shell using wood or plywood forms. These forms are made larger than the actual, finished pool size by the thickness of the walls and must be substantial in construction. The area inside the forms is then lined with #3 (0.375" [9.5 mm]) steel reinforcing, usually on one foot (300 mm) centers (as noted in NSPI construction manuals or as dictated by local building code). The steel reinforcing is suspended away from the formwork by a device which keeps the reinforcing steel centered in the completed wall assembly, and away from the bottom of the excavation.

The pool recirculating system, and any other integral mechanics, is allowed for in the finished walls and floor of the pool or fountain prior to the installation of the Guniting or Shot-crete.

While Shot-crete and Guniting are pneumatically applied concrete, they both have differences in the way that they are mixed. In Guniting installations the “mix” is delivered down a hose as a dry mix under pressure and terminates at the spray head. As the dry mix leaves the spray head it mixes with water, which is being delivered under pressure through another hose attached to the dry hose, and is sprayed onto the wood forms and around the reinforced steel. The Guniting dry powder is a combination of portland cement, sand, fly ash (in many cases), and possibly some very small pebbles. In conditions that require faster setting of the concrete, some calcium or a proprietary material, designed for the purpose, is added to accelerate the curing.

The powder and water must be mixed to a critical ratio or the resulting concrete can lack strength. Therefore, the Guniting installer must be fully experienced with the installation process and have complete control over the

amount of water being used. Once the concrete has been placed in the pool, the interior of the pool is “straightened” by a team who use steel trowels and forms to float the wall to the proper finish.



Figure 3.1 – Guniting being sprayed and finished in a residential pool.

Shot-crete, while also pneumatically applied, is slightly different than Guniting. Shot-crete is mixed at the concrete production facility and delivered to the job site in a cement truck already mixed. The quality of the concrete is determined at the ready mix plant so the nozzle operator has no influence over the final strength of the concrete. Shot-crete pools tend to use less concrete than Guniting pools but can provide superior strength per volume.

Both methods of applying the concrete need special attention to the application, as the reinforcing steel may provide a barrier that can lead to cavities forming behind the re-bar. Rebound, or gravel in the mix rebounding off the wood forms or steel reinforcing, may also occur and can lead to a differential strength of the concrete. Whether Guniting or Shot-crete, both nozzle operators must be experienced and aware of the potential strength issues if the concrete is not placed as required by the pool's designer or engineer. Once the concrete has set for a minimum of 14 days at 70°F (21°C)

the form work may be removed and the exterior side of the pool wall is filled with a suitable drainage material.<sup>2</sup>

The design considerations for waterproofing and ceramic tile or stone installation over a Guniting or Shot-crete pool are:

1. Allows for the easier construction of continuous monolithic wall and floor elements characterized by a generally mandatory cove. This may make it difficult to install larger format tile or stone.
2. Reduces or eliminates movement joints in the pool shell. Typically, Guniting pools do not require movement joints in the shell because the tendency for cracking from thermal movement is reduced. However, movement joints in the tile surface are required to accommodate thermal and moisture movement of pool tile when the pool is emptied for maintenance.
3. Guniting and Shot-crete pools generally require less preparation for subsequent finishes due to the spray on surface texture providing mechanical keys (for the thin-set), and also have no laitance.
4. Lower water to cement ratio also means less susceptibility to drying shrinkage cracks.
5. Greater freedom of pool structure shapes is achievable over traditional formed structures and, as such, can be more difficult to produce precision tile or stone finishes.
6. Generally requires a screed or render for subsequent applications of membrane, tile or stone.<sup>3</sup>

Tile can be installed over a concrete shell by following methods; ES-P601 and ES-P601D (found in Section 9 – Specifications and Section 10 – Details, as well as at [www.laticrete.com/ag](http://www.laticrete.com/ag)).

### 3.3 Concrete Masonry Units

While concrete block swimming pool construction is used infrequently, it is more often used as a fish pond or water feature building technique and is a viable alternative to more costly and expensive construction

methods. The depth of concrete block construction is typically no deeper than 3' (1 m). In this type of pool or fountain construction, the bottom of the pool is created by pouring concrete around steel reinforcing to the outside dimensions of the pool footprint. The concrete is allowed to cure for a specified time and then steel reinforcing is constructed for the concrete block walls. The concrete block is installed over the steel reinforcing using a high strength masonry mortar and allowed to cure. The block is typically filled with concrete to create a solid structure for the pool.

Once the shell is completed, the pool may have a mortar bed (e.g. LATICRETE® 3701 Fortified Mortar Bed; or, LATICRETE 226 Thick Bed Mortar mixed with LATICRETE 3701 Mortar Admix) installed over the block wall and concrete floor, waterproofed with a high quality waterproofing membrane (e.g. LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban™), and then tile is installed with a high quality thin-set (e.g. LATICRETE 254 Platinum) designed to be used in submerged installations. The use of a superb, stain and chemical-resistant grout (e.g. LATICRETE SpectraLOCK® PRO Grout®) and 100% silicone sealant (e.g. LATICRETE Latasil™) will finish this tiled pool installation. A waterproofing membrane and tile or stone can also be installed directly to the floors and walls without a mortar bed (refer to ES-P601D found in Section 9 – Specifications and Section – 10 Details, as well as at [www.laticrete.com/ag](http://www.laticrete.com/ag)). Other finishes include spray-on, fiberglass strand reinforced coatings, vinyl liners, renders created from mixture of white cement and finely ground white marble dust (i.e. Marbleite or Marcite), or even painted.

Check with local building code for limitations or allowance to see if this type of pool or fountain construction is acceptable and what limitations may be in place.

### 3.4 Steel Shell

Stainless steel is fast becoming a widely used material for the construction of spas, pools and fountains. Stainless steel is an ideal material for spas, pools and fountains because it is durable, strong, chemical-resistant, moisture-resistant and stain-resistant. Stainless steel will not crack, blister, delaminate, or lose strength over time and can be fabricated into any size and shape. It can literally last forever!

The manufacturer of the pool or spa cuts high grade stainless steel panels, to the desired sizes and shapes, in a specific pattern. Around a steel frame the pieces of stainless steel are welded together with a material that will inhibit rusting or corrosion at the seams, thus forming the completed pool. The proper welding process would depend upon the exact type (austenitic, ferritic, martensitic, or duplex) and grade of stainless steel. Holes and other penetrations are cut into the steel to allow for filtration, circulation, lights, water jets, and drains at specific points. The plumbing, lights and other equipment may also be mounted prior to shipping.



Figure 3.2 – Tiled steel pool shell.

The spa or pool is then transported to the installation site and permanently installed. While the stainless steel finish is easy to maintain it may not be aesthetically pleasing to the owner. With this possibility in mind, tile is an excellent way to create a unique and functional design alternative. Tile can be installed over a steel shell by following two methods; ES-P602 and ESP603 (both found in Section 9 – Specifications and Section 10 – Details as well as at [www.laticrete.com/ag](http://www.laticrete.com/ag)) and can be done at the factory or after the spa or pool is installed.

### 3.5 Fiberglass Shell

Fiberglass is the last type of pool construction that we will mention. Fiberglass is a sprayed-on resin material that provides a smooth and durable surface. Fiberglass pools are manufactured in a factory, to a standard size and shape, and then shipped to site on a truck. A crane is required to place the pool into the pre-excavated ground (often lifted directly over a house), the plumbing is then connected, and tile is installed at and above the water line to protect against oxidation. Once the tile mortar has cured the pool is filled with water as it is back-filled against the pool shell. The top edge of the pool is typically covered with concrete to protect it and help prevent oxidation in this critical area.

Fiberglass pools are the least common type of pool structures because size and shape are determined at the factory, the size of the pool is limited to what will fit on a truck, and the initial cost is higher than that of a concrete pool.



Figure 3.3 – A fiberglass pool shell waiting installation of tile.

The fiberglass shell must be rigid and meet minimum deflection ratings of L/360 for tile and L/480 for stone. Tile is installed using a 100% solids epoxy (e.g. LATAPOXY® 300 Adhesive) for maximum bond to the fiberglass shell, and grouted with a high quality grouting material (e.g. LATICRETE® SpectraLOCK® PRO Grout\*). Tile can be installed over a rigid fiberglass shell by following method; ES-P604 (found in Section 9 – Specifications and Section 10 – Details as well as at [www.laticrete.com/ag](http://www.laticrete.com/ag)).


1 Gray, Fred (2006). Correctly Installing Tile in Swimming Pools. Footscray West, Victoria, Australia: SPLASH EXPO Conrad Jupiters.

2 [http://www.homehelp4u.net/services/concrete\\_pool\\_construction.php](http://www.homehelp4u.net/services/concrete_pool_construction.php)

3 Gray, Fred (2006). Correctly Installing Tile in Swimming Pools. Footscray West, Victoria, Australia: SPLASH EXPO Conrad Jupiters.

\* United States Invention Patent No.: 6881768 (and other Patents).

# Section 4 – Pool Project Design Considerations

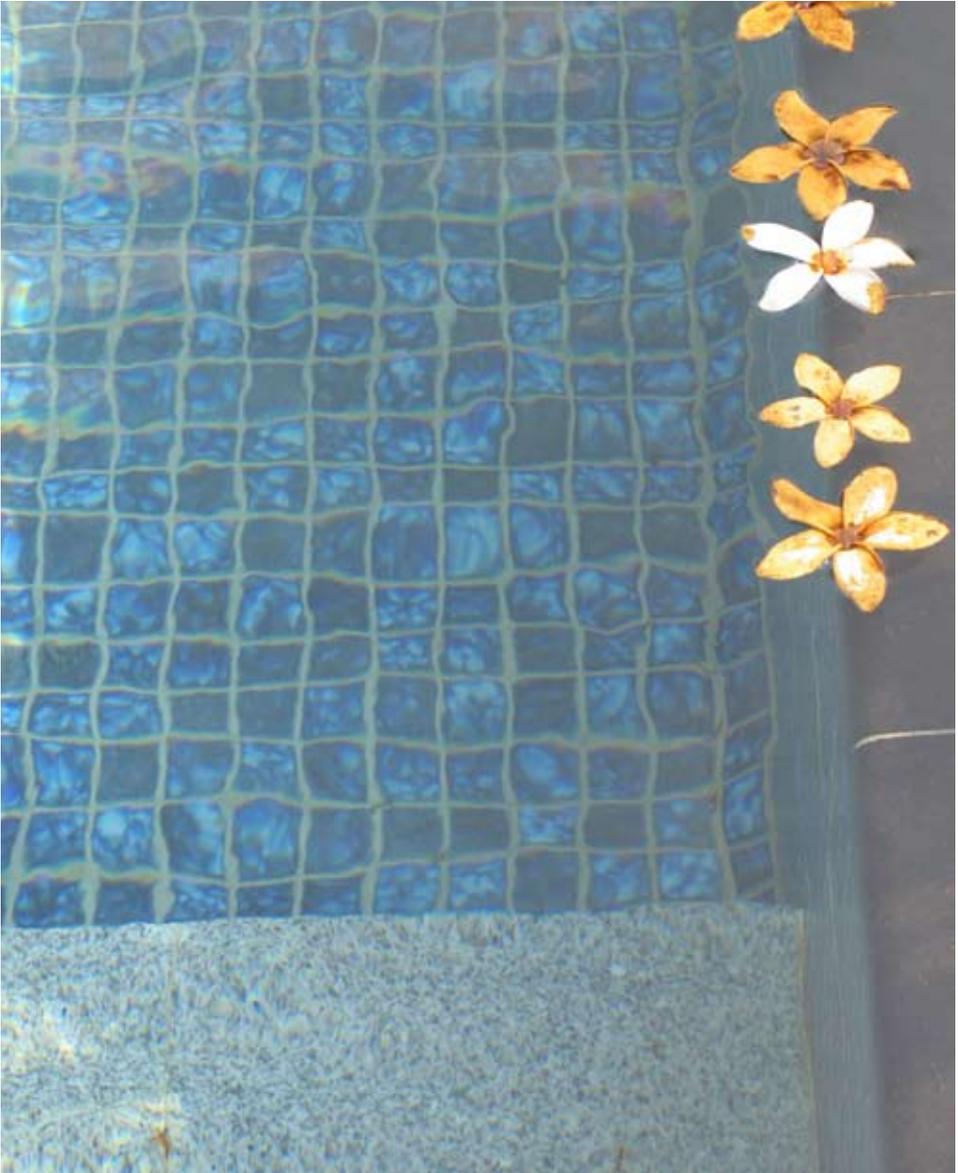

### 4.1 Tile Industry Standards

The Tile Council of North America (TCNA) provides an installation method for the proper installation of tile in swimming pools, fountains and water features. TCNA provides Method P601 for swimming pools and Method B417 for tile tubs, fountains and curbs which can be found in the current version of the TCA Handbook for Ceramic Tile Installation. To obtain a copy of the current TCA Handbook for Ceramic Tile Installation please contact TCNA at 100 Clemson Research Blvd., Anderson, SC 29625, +1.864.646.8453 (F) +1.864.646.2821 or by e-mail at [literature@tileusa.com](mailto:literature@tileusa.com).

The American National Standards Association (ANSI) provides guidelines for tile installation and requirements for product testing and performance in the American National Standard Specifications for the Installation of Ceramic Tile (A108 and A118). To obtain a copy of the current American National Standard Specifications for the Installation of Ceramic Tile please contact TCNA at 100 Clemson Research Blvd., Anderson, SC 29625, +1.864.646.8453 (F) +1.864.646.2821 or by e-mail at [literature@tileusa.com](mailto:literature@tileusa.com).

Please refer to International Residential Code, International Building Code and/or United States Consumer Product Safety Commission Publication No. 362 “Safety Barrier Guidelines for Home Pools” at [www.cpsc.gov](http://www.cpsc.gov) for more information, or, contact your local building officials for swimming pool codes and requirements.

LATICRETE International also provides installation methods and details for swimming pool and submerged installations and is available at [www.laticrete.com/ag](http://www.laticrete.com/ag), method ES-P601, ES-P601D, ES-P602, ES-P603, ES-P604, ES-B417A, and ES-B417B.

### 4.2 Structural Considerations

It is not unusual for people to look at an in-ground swimming pool and see nothing more than a hole in the ground, filled with water where people relax, have fun and enjoy life. But there is much more to it than just a “hole in the ground”. Out of sight is a solid foundation on which the pool is created, along with plumbing, lighting, and sanitation equipment. For swimming pools, fountains and water features located above grade within structures, there are more structural considerations to take into account.

**Loads** – The following aspects must be taken into account during the load calculations process; pool filling, alternating thermal loads, internal stress of the concrete pool shell with regard to the reduction of shrinkage cracks, support of other structural components during construction, and loads resulting from normal operation of the pool.

It is easy to forget, and therefore not to take into consideration, the weight of water and the effect this weight has on the structure containing that water. Water weighs 8.34 pounds per gallon (1 kg/L). For an average size swimming pool of 15' x 30' x 5' (4.5 x 9 x 1.5 m), the weight of the water comes to approximately 140,400 pounds (63,700 kg). For a 164' x 82' x 6.6' (50 x 25 x 2 m) Olympic size swimming pool the weight of the water comes to over 5,500,000 pounds (2,490,000 kg). No matter how you look at it, these are tremendous weights which create a constant force on the structure of the pool. If the pool is in-ground, the soil and the traffic (live) loads in the area immediately surrounding the pool must be taken into consideration. A properly designed and compacted drainage layer under the pool and a backfill with suitable soil, which is properly installed and compacted, is very important to the long term success of the pool.

A pool, fountain or water feature located on elevated floors within, or on a structure means

the proper detailing of the pool is not only critical to the pool structure but also to any spaces located underneath the pool. First, the structure must be designed to handle the weight; and second, provide waterproofing protection to any spaces below or adjacent to the pool.

Buildings with elevated swimming pools must be designed to accommodate the excess live load provided by the weight of the water within the structure of the pool. For example, a pool that is 15' x 30' x 5' (4.5 x 9 x 1.5 m) and contains water that weighs 140,400 lbs (63,700 kg) equates to a live load of 312 psf (1,532 kg/m<sup>2</sup>) for just the water. Most commercial buildings are designed for a live load of 70 – 130 psf (344 – 640 kg/m<sup>2</sup>) so the design professional must take into consideration the weight of the water, on top any additional anticipated live load minus the water. If the pool is in a room that is 30' x 60' (9 x 18 m) and the designed live load is 70 psf (344 kg/m<sup>2</sup>) then the room has a total live load capacity of 126,000 lbs (57,270 kg). The weight of the water itself exceeds the designed live load of the structure and does not include any other anticipated live loads.

Consideration for excess dead load should also be taken into consideration. In most cases the mass of the structure and its supporting members, and therefore the dead load, are increased to handle the excessive loads created by the water.

**Requirements of Design** – Swimming pools, fountains and water features are complex in nature. Although they appear to be simple (essentially a vessel filled with water) they are far more than that. These pools have to take into consideration the proper design and, placement and installation of the plumbing, electrical/lighting, and, if the pool is indoors, proper air circulation and dehumidification.

Swimming pools, fountains and water features should also be waterproofed to keep the water within the vessel and from causing damage to

surrounding areas. The proper placement of a suitable waterproofing product is essential to keeping water where it belongs. Swimming pools located in elevated floors or on the roof of a building may require the placement of a “sandwich” type waterproofing membrane. Typically, this sandwich type membrane is an alkali-resistant, bladder type product and is placed between pours of concrete to provide a permanent barrier against water penetration to the structure below.

**Deflection** – Systems over which tile or stone will be installed, shall be in conformance with the International Building Code (IBC) or applicable building codes for the desired application. Historically, for ceramic tile and paver applications, the maximum allowable deflection should not exceed L/360 under total anticipated load; and, for stone the maximum allowable deflection should not exceed L/480 of the total anticipated load.

The ceramic tile industry abides by the following note on deflection: the owner should communicate in writing to the project design professional and general contractor the intended use of the tile installation, in order to enable the project design professional and general contractor to make necessary allowances for the expected live load, concentrated loads, impact loads, and dead loads including the weight of the tile and setting bed. The tile installer shall not be responsible for any floor framing or sub-floor installation not compliant with applicable building codes, unless the tile installer or tile contractor designs and installs the floor framing or sub-floor.<sup>1</sup>

### 4.3 Types of Structural Movement

Swimming pools, fountains and water features are structures, and, like all other structures are subjected to different types of structural movement. Thermal movement, moisture expansion and contraction, and, differential movement are typically experienced in this type of construction.

**Thermal Movement** – All building materials expand and contract when exposed to changes in temperature and moisture. There are two (2) factors to consider in analyzing movement caused by thermal variation: 1) the rates of expansion of different materials (also known as the linear coefficient of thermal expansion), and, 2) the anticipated temperature range exposure. The primary goal in analyzing thermal movement is to determine both the cumulative and individual differential movement that occurs within the components of the pool assembly, especially above the water line.

While a pool is filled with water, the area below the water line will see little in the way of thermal movement. Any changes in temperature are minimal and slow. The structure of the pool, and any tile installed in the pool, will be able to adjust with this temperature change. However, the tile or stone installed between the water line and the coping can see significant changes in temperature in a very, very short amount of time. For instance, if a dark colored tile or stone (which can reach temperatures in excess of 120°F [49°C] in direct sunlight) is suddenly exposed to water at 72°F (22°C) then an extreme amount of thermal contraction can occur. As the tile is allowed to dry then thermal expansion occurs again. Movement caused by thermal expansion and contraction can create problems with a tile or stone installation, including cracking and/or loss of bond. Extreme thermal contraction can also occur when a pool is drained and allowed to remain empty and dry for extended periods of time. In open-air pools and fountains, higher alternating thermal loads may occur due to weather conditions.

The thermal expansion of tile is determined using ASTM C372 “Standard Test Method for Linear Thermal Expansion of Porcelain Enamel and Glaze Frits and Fired Ceramic Whiteware Products by the Dilatometer Method.” For certain types of tile the following test method may be used; ASTM C484 “Standard Test

Method for Thermal Shock Resistance of Glazed Ceramic Tile.” The coefficient of thermal expansion for all elements of the installation system, including substrate, must factor into the calculation for the total anticipated movement.

**Moisture Movement** – As noted earlier, building materials (including concrete) will experience changes when exposed to varying amounts of moisture. Typically, building materials will expand as they gain moisture and contract as the moisture leaves the system. Tile is one such building material. It would be important to check with the tile manufacturer to see if their product is suitable for use in submerged installations. Tile with a low absorption rate (<3%) would be better suited for use in submerged installations, especially in climates where freeze/thaw occurs (see Section 5.1 for more information).

**Differential Movement** – Differential movement is another factor to take into consideration when installing tile or stone in swimming pools, fountains and water features. Most of the forces that act upon a building will act upon a swimming pool installation; live loads, dead loads, thermal expansion and contraction, seismic loads, creep, and settling must still be accounted for and factored into the design and construction of these structures and the differential stresses exerted by these forces must be alleviated in movement joints.

### 4.4 Movement Joints

#### **Controlling Stresses with Movement Joints** –

Movement joints serve to allow changes in the shape of the overall construction (e.g. thermal movement, settling, shrinkage and swelling of the concrete structure, etc...) as well as displacements against each other to occur without causing damage to the pool shell, or to the tile or stone installation. Arrangement, dimensions and formation of the movement joints depend on many factors, including expected changes in shape of the structural components and their tile or stone cladding.<sup>2</sup>

**Guidelines for Movement Joints** – As a guide, when no project specific movement joint design exists, for submerged installations of tile or stone, movement joints can be installed every 8' to 12' (2.4 to 3.6 m) in each direction in the finish layer and installation system. Movement joints should also be placed where tile work abuts restraining surfaces (e.g. perimeter walls, steps, etc...), where dissimilar surfaces meet, at any change in plane, and around pipes or penetrations. Movement joints should be placed over all designed joints in the shell of the pool, fountain or water feature, and these joints should be carried to the surface of the tile or stone installation directly in line with their original placement in the shell. Depending upon the size and construction method of a pool shell, some of the joints in the structure may require a special type of water stop filler material. This material will allow for a significant amount of movement to occur in the structure of the pool but will not allow water to escape through the joint.

It is important to make sure that the project architect or engineer shows locations and details of movement joints on project drawings.



Figure 4.1 – Indoor water park wading pool with clearly defined movement joints.

**Movement Joint Treatment** – Movement joints should be treated with a suitable sealant and installation should be done in conjunction with TCA Handbook for Ceramic Tile Installation EJ-171 “Movement Joint Design Essentials.” The performance requirements of certain special locations, such as swimming pools, dairies, food plants, etc..., may exceed the minimum requirements of the sealant specifications given above. Therefore, follow recommendations of experienced manufacturers as to specific sealants suitable in the job environment. In some of these environments, a program for regular maintenance of sealant in joints may be required<sup>3</sup>. In most cases, the use of a 100% silicone (e.g. LATICRETE® Latasil™ used with LATICRETE 9118 Primer) or urethane sealant will be recommended for submerged installations.

### 4.5 Swimming Pool/Fountain Construction Considerations

We will take a look at both in-ground and elevated swimming pool construction considerations

Structurally, in-ground swimming pools can be exposed to all sorts of conditions and forces that can have a profound effect on not only the long term success of the pool, but also on any tile or stone installation in the pool or on the pool deck.

The ideal site for placement of an in-ground pool, fountain or water feature is level with good quality soil. In many cases the site is not level and there are subsoil problems. These problems can include too much rock (ledge), poor soil type, compaction, high water table, or the need for the removal of soil and replacement with compacted fill. The need to have the soil inspected can be very important to make sure that the pool will have no structural problems in the future. A proper soil inspection can also provide information on where the best area to place the pool would be.

## Section 4 – Pool Project Design Considerations

The steps to in-ground pool construction are as follows;

**Layout and Positioning** – Layout and positioning should be conducted with the assistance of a qualified, licensed surveyor. The surveyor can make sure that the placement of the pool is within guidelines for distance from the boundaries and also if the boundary adjacent to the pool is in the correct position. In other words, survey the entire property to make sure you are not excavating outside of the property lines. Pool boundaries are marked with paint prior to the commencement of excavation and are typically larger than the actual finished dimensions of the pool.

**Excavation** – ALWAYS CHECK FOR UNDERGROUND UTILITIES PRIOR TO DIGGING. Once the boundaries are marked it is time to bring in the heavy equipment to dig the hole. Following the pool specifications and drawings, the excavation contractor will dig the hole to precise requirements (usually slightly larger than the finished pool size). Unless a large volume of dirt is needed on site for leveling or other purpose, then most of, or all, of the dirt removed from the hole will be transported off site. A hole dug out for a 15' x 30' (9.5 x 4.5 m) pool can yield as much as 130 cubic yards (100 m<sup>3</sup>) of earth.

**Hydrostatic Pressure Relief Valve** – During the excavation process it would be important to see if any ground water appears in the excavated area. Negative hydrostatic pressure and hydrostatic pressure under a swimming pool, fountain or water feature can have a significant effect on the pool structure and any finish within the structure. If there is a high water table, and no means have been created for relieving this pressure, then special considerations must be made and appropriate designs engineered<sup>4</sup>. If ground water is a possibility then the proper installation of a hydrostatic relief valve can help to eliminate potential problems down the road (e.g. finish delamination, floating pool,

and more...). In many cases, a hydrostatic pressure relief valve is installed even if no ground water appears in the excavated area during construction. This will help to deal with any unforeseen or unanticipated problems that may occur in the future. Changes in the natural movement of water (caused by the excavated area in the ground), landscaping changes and the disposal of water when the pool has to be emptied for maintenance should all be anticipated during the design and construction of a pool or water feature.

Proper use of a hydrostatic pressure relief valve can also prevent a less common but potentially significant problem; the floating swimming pool. If there is a high water table or the potential for the hole in which the pool is placed to fill with water then there is the possibility that the pool can float right out of the ground when the pool is emptied. This is possible because anything can float (ships were actually made out of concrete during World War I and World War II). The mechanics of how something is able to float is very simple; as stated by the Archimedes Principle, if the weight of the water displaced by an object is greater than the weight of the object, then the object will float. For example, if a ship weighs 100 tons (90,700 kg) but displaces 120 tons (109,000 kg) of water then the ship will float; conversely, if the same ship displaces only 80 tons (72,600 kg) of water then the ship will sink. So, an empty pool can float if it weighs less than the water filling the hole beneath it! This is why it is rare to see a totally empty swimming pool in areas where the water table tends to be high.

**Vapor Retarder** – Another functional design element that must be utilized is a high quality vapor retarder. This material, typically a heavy gauge polyethylene sheet product or a reinforced polyolefin, is placed underneath a pool to prevent moisture vapor from entering into the system. Indoor swimming pools, fountains, spas and water features (especially on or below grade) should not only have a vapor

barrier below the pool and deck, but also on the walls and ceilings to prevent moisture from penetrating into adjacent rooms or into the structure of the building. A high moisture vapor emission rate under a pool can have significant effect on the tile or stone installation, especially when the pool is emptied for maintenance.

**Water Stop** – As mentioned earlier, water stops are used within the concrete shell for large pools, fountains or water features. These water stops are designed to provide waterproof integrity in areas where a gap in the construction is required (e.g. movement joints or between wall and floor concrete pours – see Figures 1 and 2) in the pool shell. Typically, pools in excess of 40 – 50 ft (12.2 – 15.2 m) in any dimension require some type of movement joint through the pool shell and, therefore, require a water stop in the joint. These water stops are usually made of latex, neoprene or polyethylene and are placed as the concrete is being poured, so they become integral within the concrete.

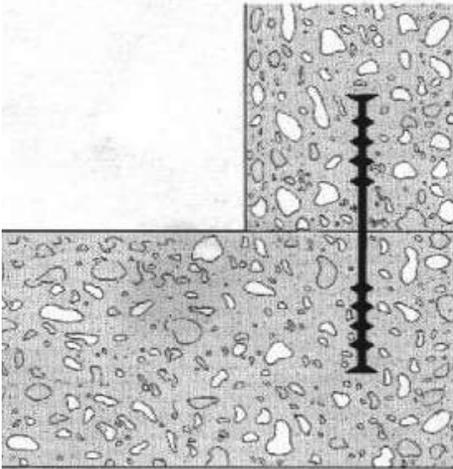


Figure 4.2 – Typical shape and placement of water stop where floor and wall join in pool construction.<sup>5</sup>

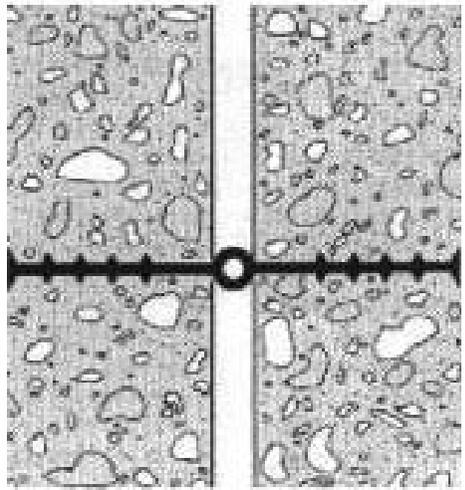


Figure 4.3 – Typical shape and placement of water stop where floor and wall join in pool movement joint.<sup>6</sup>

**Plumbing** – Water in a swimming pool needs to circulate through a filtering system to remove dirt and debris, and to evenly distribute the pool chemicals. For in ground pools, fountains and water features most of the plumbing for the pool drains, pump system and filters have to be installed prior to the pouring or spraying of the concrete. The main drain(s) are usually located in the lowest point of the pool, so the entire contents of the pool will flow to the drains. The drain is tied into the pump system for easy draining or fast circulation of the water in the pool.

## Section 4 – Pool Project Design Considerations



Figure 4.4 – Typical drain position and steel reinforcement prior to gunite application of concrete.

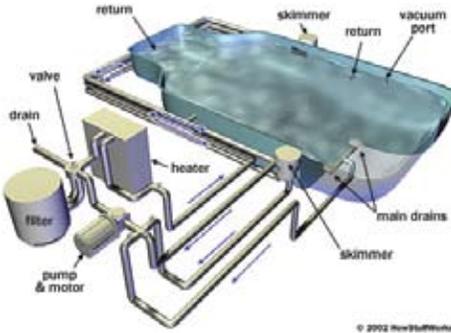


Figure 4.5 – Cut away view of a typical pool pump and filtration system.<sup>7</sup>

The filter system incorporates specially made filter sand or diatomaceous earth (a fine powder made from the chemically inert, fossilized remains of sea organisms called diatoms) as the filter medium or a cartridge type filter. In most regions, regulations dictate that all of the water in the pool (or its equivalent volume) must pass through the filter in a certain amount of time – typically between 30 minutes to six hours.



Figure 4.6 – Return port in a concrete shell pool.<sup>7</sup>

**Lights and Electrical** – Like the plumbing, the lighting and electrical installation must be done prior to the pouring or spraying of the concrete pool shell. In most cases, swimming pools and fountains are constructed with underwater lights. These lights are essentially used so swimmers can see what they are doing at night and, to a lesser extent, for aesthetic appeal. An incandescent light is sealed into a watertight fixture which is located in a niche in the pool shell. The electric wire runs into the fixture through a special seal which is designed to keep water away from the electrical elements. Fiber optics are becoming more and more popular in pools because they do not have to be embedded within the pool structure.

Electrical work for swimming pools and submerged applications was finally included in the National Electrical Code (NEC) Article 680 in 1968. Electrical work done in pools before this time may be of sub-standard quality. Modern light fixtures are designed to last for decades, however, poor water chemistry can weaken or degrade the fixture, gasket and fasteners which hold it together. Failure to inspect these fixtures and replace as necessary could result in costly damage to pool users or property. Modern lights are also designed to be used

only while submerged to prevent overheating and should never be turned on when the pool is empty.

**Observation Portals and Windows** – Like plumbing and lighting, the placement of observation portals and windows is done prior to the pouring or spraying of the concrete. A structural engineer should be utilized to design how the window should be placed in the pool shell without compromising the strength and integrity of the pool shell, and to specify how the window frame should be mounted to the steel reinforcement.

The manufacturer of the window can dictate exactly what type of frame and sealant should be used based on several factors (e.g. size of the window, depth in the pool, size of the pool, and purpose of the window, etc...). The frame must be made of a non-porous, non-corrosive material and is, in most cases, stainless steel. A high quality silicone sealant is the most frequently used material to provide waterproof integrity between the window frame and pool shell. Proper inspection and maintenance of the sealant, window frame and pool shell are vital to ensuring that leaking does not occur in this critical area.<sup>8</sup>

### 4.6 Pool Deck

Almost every pool, especially pools which are located in ground, have a pool deck. These decks can be of any size, from just a few feet (1 – 2 m) extended from the edge of the pool to huge areas used for entertaining and aesthetic appeal. Since just as much time, if not more, is spent on the pool deck than in the pool itself, the proper design and size of the deck becomes important. Some things to take into consideration when designing a pool deck are construction materials (e.g. concrete or wood), finish materials (e.g. tile, stone, pavers), pool equipment (mechanized covers, plumbing covers, etc...), diving boards, slides, incorporating sun and shade, hot tub or spa, grilling area, and fencing.

**Pool Deck Substrates** – a majority of pool decks utilize concrete as the basic construction material. Concrete is relatively inexpensive, easily poured and makes an ideal substrate for the direct adhesion of tile or stone. In some instances, wood planking decks are constructed for aesthetic value, or for areas where concrete would be difficult to pour. Still other decks have concrete immediately around the pool and sand set concrete or stone pavers are used as the main decking material.

The installation of tile and stone over a concrete pool deck, whether interior or exterior, can be done by using the LATICRETE materials as stated in Section 8 “Pool Deck and Natatorium Tile Installations” and by following industry guidelines for tile installation.

**Slope To Drain** – a properly constructed pool deck will provide a slope which will evacuate water to a drain or to gutters placed on the ground to take water away from the pool deck. This helps to shed water from the deck and to prevent freeze/thaw conditions from damaging the concrete or pool beam during cold weather months.

**Movement Joints** – according to the TCA Handbook for Ceramic Tile Installation EJ-171 the guidelines for placement of control joints in an exterior tile or stone installation are every 8' – 12' (2.4 – 3.7 m) in each direction. Interior pool decks should have control joints placed every 20' – 25' (6.1 – 7.6 m) in each direction unless the pool deck, and any subsequent tile or stone installation, is exposed to direct sunlight. If so, then treat the tile or stone application as if it was on an exterior deck and place the control joints every 8' – 12' (2.4 – 3.7 m) in each direction.

For exterior decks, the minimum joint width for joints placed in the tile or stone installation is 3/8" (9 mm) for joints spaced 8' (2.4 m) on center and 1/2" (12 mm) for joints spaced 12' (3.7 m) on center. Minimum widths must be increased by 1/16" (1.5 mm) for each 15°F (8.3°C) tile surface temperature change

greater than 100°F (38°C) between summer high and winter low. Decks exposed to the sky in northern climates usually require 3/4" (19 mm) wide joints spaced 12' on center.<sup>9</sup>

**Cure Time** – it is necessary to allow for the proper curing of the tile or stone installation materials (e.g. membrane, thin-set, grout, sealant, etc...) before exposing to traffic or submersion. Please check the data sheets for minimum cure time of each LATICRETE® product used in the installation by visiting [www.laticrete.com](http://www.laticrete.com) or by calling LATICRETE Technical Service at 1.800.243.4788, x235.

### 4.7 Safety and Code Considerations

**Building Codes** – The health and safety of swimming pool users should be the primary concern during the design, construction and enjoyment of the pool. As such, the International Building Code (IBC) and International Residential Code (IRC) address the design and implementation of swimming pool enclosures, safety devices and barrier requirements. The United States Government has also addressed the concerns of properly placed and constructed safety barriers along with entrapment dangers from suction fittings with the passing of H.R. 1721: The Virginia Graeme Baker Pool and Safety Act in December 2007.

**Safety Codes** – The Virginia Graeme Baker Pool and Safety Act encourages States to improve their pool and spa safety laws to educate the public about pool and spa safety by establishing a grant program administered by the Consumer Product Safety Commission.

While local building codes will mandate any requirements of pool or fountain construction guidelines, the necessity for safety after the pool is finished is tantamount to local, state and government legislators as well as home and property owners. Taking into account the fact that drowning is the second leading cause of death in children aged 1 to 14 in the United States, proper implementation of safety devices and barriers is important.

The best way to reduce child drowning in residential pools was for pool owners to construct and maintain barriers that would prevent young children from gaining access to pools. However, there are no substitutes for diligent supervision in both residential and commercial pools. Swimming pool barrier guidelines are designed to prevent a child from getting over, under or through the barrier and gain access to the pool. As outlined in the United States Consumer Product Safety Commission Publication No. 362 “Safety Barrier Guidelines for Home Pools”, some basic guidelines for preventing a child from climbing over a barrier include;

**Solid Barrier** – no indentations or protrusions should be present, other than normal construction tolerances and masonry joints.

**Fence Made Up Of Horizontal and Vertical Members** – if the space between the tops of the horizontal members is less than 45" (1,140 mm), the horizontal members should be on the swimming pool side of the fence. The spacing of the vertical members should not exceed 1-3/4" (44 mm). This size is based on the foot width of a young child and is intended to reduce the potential for a child to gain a foothold. Any decorative cutouts in the fence, the space within the cutouts should not exceed 1-3/4" (44 mm). If the difference between the tops of the horizontal members is more than 45" (1,140 mm), the horizontal members can be on the side of the fence facing away from the pool. The spacing between vertical members should not exceed 4" (100 mm). This size is based on the head breadth and chest depth of a young child and is intended to prevent a child from passing through an opening. Again, if there are any decorative cutouts in the fence, the space within the cutouts should not exceed 1-3/4" (44 mm).

**Chain Link Fence** – the mesh size should not exceed 1-1/4" (32 mm) square unless slats, fastened at the top or bottom of the fence, are used to reduce mesh openings to no more than 1-3/4" (44 mm).

**Fence Made Up Of Diagonal Members (Lattice)** – the maximum opening in the lattice should not exceed 1-3/4" (44 mm).

**Above Ground Pools** – above ground pools should have barriers. The pool structure itself serves as a barrier or a barrier is mounted on top of the pool structure. There are two possible ways to prevent young children from climbing up into an above ground pool. The steps or ladder can be designed to be secured, locked or removed to prevent access, or, the steps or ladder can be surrounded by a barrier as previously described.

Some basic guidelines for preventing a child from getting under a barrier include;

**Pool Barrier** – the maximum clearance at the bottom of the barrier should not exceed 4" (100 mm) above grade, when the measurement is done on the side of the barrier facing away from the pool.

**Above Ground Pool with Barrier on Top of Pool** – if an above ground pool has a barrier on the top of the pool, the maximum vertical clearance between the top of the pool and the bottom of the barrier should not exceed 4" (100 mm).

**Gates** – swimming pool barriers should be equipped with a gate or gates which restrict access to the pool. A locking device should be included in the gate design. Gates should open out from the pool and should be self-closing and self-latching. If a gate is properly designed, even if the gate is not completely latched, a young child pushing on the gate in order to enter the pool area will at least close the gate and may actually engage the latch. When the release mechanism of the self-latching device is less than 54" (1,370 mm) from the bottom of the gate, the release mechanism for the gate should be at least 3" (75 mm) below the top of the gate on the side facing the pool. Placing the release mechanism at this height prevents a young child from reaching over the top of a gate and releasing the latch. The gate and barrier should have no opening greater than

1/2" (12 mm) within 18" (455 mm) of the latch release mechanism. This prevents a young child from reaching through the gate and releasing the latch.<sup>10</sup>

**Standards** – To aid in the proper design, construction, operation, sanitation, and safety of new construction pools and renovation of existing swimming pools and spas, the Association of Pool and Spa Professionals (APSA) has created, or is in the process of creating, a number of American National Standards Institute (ANSI) standards.

Another potential problem in swimming pools and spas is entrapment of pool users (especially young children) at suction fittings. The IBC and IRC include prescriptive safety measures intended to provide the safest possible recirculation system based on current science. These codes require that all pools and spas have dual drains that incorporate American Society of Mechanical Engineers (ASME) A112.19.8 listed suction fittings (drain covers), single 18" x 23" (460 mm x 585 mm) grates or larger, or, single approved channel drains. These systems should also incorporate ASME A112.19.17 listed safety vacuum release systems.

ASME A112.19.8 "Suction Fittings for Use in Swimming Pools, Wading Pools, Spas and Hot Tubs" establishes performance and material requirements for suction fittings, which provide the first line of defense against all entrapment hazards. ASME A112.19.17 "Manufactured Safety Vacuum Release Systems for Residential and Commercial Swimming Pool, Spa, Hot Tub and Wading Pool Suction Systems" establishes performance criteria for devices and systems intended to function as emergency vacuum breakers in case of entrapment.<sup>11</sup>

## Section 4 – Pool Project Design Considerations

Some of these standards along with their scope include<sup>12</sup>;


- ANSI/NSPI-1 2003 “American National Standard for Public Swimming Pools” – covers public swimming pools to be used for bathing and operated by an owner, licensee, or concessionaire, regardless of whether a fee is charged for use. Public pools covered by this standard include Class A (used for competitive aquatic sports), Class B and C (intended for public or semi-public recreational swimming, and Class F (wading).
- ANSI/NSPI-3 1999 “American National Standard for Permanently Installed Residential Spas” – covers permanently installed residential spas that are used for bathing and are operated by an owner. This standard is meant to cover certain aspects of the design, equipment, operation, installation, new construction, and rehabilitation of spas.
- ANSI/NSPI-4 2007 “American National Standard for Above-ground/On-ground Residential Swimming Pools” – describes certain criteria for the design, manufacturing, testing, care, and use of above-ground/on-ground residential (Type O) non-diving pools and their components.
- ANSI/NSPI-5 2003 “American National Standard for Residential In-ground Swimming Pools” – applies to permanently installed residential in-ground swimming pools intended for noncommercial use as a swimming pool by not more than three owner families and their guests and exceeding 24" (60 cm) in water depth and having a volume over 3,250 gallons (12,300 L). It covers specifications for new construction and rehabilitation for residential in-ground swimming pools and includes design, equipment, operation, and installation.
- ANSI/IAF-8 2005 “Model Barrier Code for Residential Swimming Pools, Spas and Hot

Tubs” – states requirements to establish layers of protection for young children against the potential for drowning and near-drowning in residential swimming pools, spa and hot tubs by limiting or delaying their access to the pool area.

- APSP-10 “Standard for Performance Rating and Labeling of Pumps and Pump Motors Used on Swimming Pools, Wading Pools, Spas, Hot Tubs, Whirlpool Baths, and Water Features” – covers performance and labeling criteria for pumps and pump motors used in circulation systems on residential and public swimming pools, wading pools, spas, hot tubs, whirlpool baths, and water features. This standard applies to new and replacement installations.
- International Building Code (IBC) provides basic information for swimming pool construction in Chapter 21 Masonry, Section 2103.5 and 2103.10.

These are just some of the representative standards available for swimming pools and spas. For more pool standards, complete standards or for updated standards please refer to the Association of Pool and Spa Professionals (APSP) website at [www.apsp.org](http://www.apsp.org). For more information on your local pool and spa codes please visit the International Aquatic Foundation (IAF) website at [www.iafh2o.org/](http://www.iafh2o.org/).

- 1 TCA Handbook for Ceramic Tile Installation 45th Edition. Tile Council of North America, Inc. Anderson, SC, 2007, page 12.
- 2 Technical Committee Structural Engineering Work Group (December 1991) Shrinkage and Swelling of Reinforced Concrete Pools Effects On The Bonding Properties of Ceramic Cladding. Postfach, Switzerland: Bundesfachverband Öffentliche Bäder E.V.
- 3 TCA Handbook for Ceramic Tile Installation 45th Edition. Tile Council of North America, Inc. Anderson, SC, 2007, page 79.
- 4 Hunsaker, D.J. Pools from the Ground Up. Retrieved 5/8/2008, from <http://www.chh2o.com?Articles/PoolsfromtheGroundUp.aspx>.
- 5 Water stop, Retrieved 7/1/2008 from <http://www.alibaba.com>.
- 6 Expansion Joint, Retrieved 7/1/2008 from <http://www.alibaba.com>.
- 7 Tom Harris How Swimming Pools Work, Retrieved 1/15/2008 from <http://home.howstuffworks.com/swimming-pool2.htm>.
- 8 Robledo, Rebecca (February 13, 2006). Windows to the Underworld: Designing and Building with Underwater Windows, Retrieved 7/3/2008 from <http://www.allbusiness.com/arts-entertainment-recreation/869164-1.html>.
- 9 TCA Handbook for Ceramic Tile Installation 45th Edition. Tile Council of North America, Inc. Anderson, SC, 2007, page 79.
- 10 United States Consumer Product Safety Commission. Safety Barriers Guidelines for Home Pools. Washington D.C.: United States Consumer Product Safety Commission.
- 11 Duren, Gary S. (2008, September). The Evolution of Pool and Spa Entrapment Prevention. Building Safety Journal, 51–52.
- 12 Standards. <http://www.apsp.org/52/index.aspx>.



## Section 5 – Selection of Pool Tile or Finish



### 5.1 Considerations for Tile Selection

Tile and stone in swimming pools, fountains, spas, and water features is a very appealing way to provide beauty and functionality. There are many types of tile and stone in the world, but not all of them are suitable or functional in a submerged installation. Choosing a tile or stone that is suitable for submerged applications is critical to the long-term performance of the installation.

Generally speaking, tile or stone used in submerged installations must have a low absorption rate, a high coefficient of friction, be freeze/thaw resistant (in cool climates), resistant to moisture expansion, and chemical resistant.

Tile used in swimming pools, fountains, spas, and water features should be vitreous (absorption rate between 0.5% and 3%) or impervious (absorption rate less than 0.5%). Absorption rate of tile is determined by ASTM C373 “Standard Test Method for Water Absorption, Bulk Density, Apparent Porosity, and Apparent Specific Gravity of Fired Whiteware Products” and is important for selecting tile or stone for submerged installations, wet areas or any installation that will be subjected to freeze/thaw conditions. Tile for use in submerged installations should also be tested to ASTM C370 “Standard Test Method for Moisture Expansion of Fired Whiteware Products” to determine the extent to which tile will expand when exposed to moisture. Tile or stone with a low absorption rate will be far less susceptible to damage caused by water infiltration and provide a far more durable installation in a demanding environment. The most commonly used tile types for submerged installations are porcelain and glass since they provide the lowest absorption rates. It is also important to check with the distributor or quarry to see if a particular type of stone would be suitable for continual submersion. Ceramic and porcelain tile characteristics are also addressed in the ANSI A137.1 American

National Standard Specifications for Ceramic Tile.

Tile with a high coefficient of friction is an important characteristic for tile in continually wet areas, and on pool decks, to help maintain the safety and well being of all who use these areas. Coefficient of friction is commonly determined using ASTM C1028 “Standard Test Method for Determining the Static Coefficient of Friction of Ceramic Tile and Other Like Surfaces by the Horizontal Dynamometer Pull-Meter Method.” Keep in mind that Americans with Disabilities Act (ADA) requires that floor surfaces be stable, firm, and slip-resistant so choosing the correct tile is required to comply with this important Act. Check with local building codes for minimum coefficient of friction values.

Tile in exterior or continually submerged installations must be freeze/thaw resistant, especially in climates prone to this type of exposure. Water can expand up to 25% of its original volume while freezing, and if this water is located within a solid material (e.g. tile, stone, etc...) then a significant amount of damage can occur to the solid material, especially if there are numerous freeze/thaw cycles. Freeze/thaw resistance is measured using ASTM C1026 “Standard Test Method for Measuring the Resistance of Ceramic Tile to Freeze-Thaw Cycling” and establishes the tiles ability to resist freeze/thaw damage.

Due to the amount of chemicals in a swimming pool, fountain or water feature it is necessary to install tile or stone that is resistant to pool chemicals with tile installation materials that are equally chemical resistant. There are several methods for sanitizing pools (including chlorine, bromine, ozone, and salt water) and the tile should be able to withstand whichever sanitizing type will be used in that particular pool. The chemical resistance of tile is established using ASTM C650 “Standard Test Method for Resistance of Ceramic Tile to Chemical Substances”.<sup>1</sup>

Tile should be UV stable, maintain its color when exposed to various chemicals, easily cleanable, and stated for use in submerged installations by the manufacturer. Choosing the wrong tile can lead to significant down time for the pool, tremendous expense removing the old tile, reinstallation of a suitable tile, and other potential issues that can occur when a pool is empty (see Section 4.5 and Section 11 for more information).

Abrasion resistance, more important on a pool deck tile installation, should also be taken into consideration. Testing for abrasion resistance is performed using a test developed by The Porcelain Enamel Institute (PEI). Tile is tested and given a PEI Rating based on a 0 – 5 scale, as shown in Figure 1.

PEI 0	Not recommended for floors
PEI 1	Light duty floors
PEI 2 and 3	Medium duty floors
PEI 4	Heavy duty floors
PEI 5	Extra heavy floors

Figure 5.1 – PEI Rating Chart.<sup>1</sup>

Tile used in residential swimming pool areas should be PEI 3 or higher and commercial swimming pools should have a rating of PEI 4 or 5. Abrasion from chairs, umbrella stands and other hard materials can scratch the surface of tile and cause damage, so choosing a suitable tile is particularly important.

Failure to properly choose and specify a tile for submerged installations can be a costly, time consuming and unnecessary problem. It is essential to choose wisely! Make sure that not only the tile is suitable for this type of installation, but also the way the tile is mounted (mosaics) and the setting materials used to install the tile as well. Mosaic mounting methods will be covered in Section 5.3 while suitable setting materials are covered in Section 7.

### 5.2 Placement of Tile in Swimming Pool and Pool Deck Installations

Tile can be installed in almost any area within a pool and the color and design may only be limited by the designer’s imagination. Choosing where tile or stone will be placed is subject to whatever the finished appearance is to be. Tile can be installed within the entire shell of the pool, just on the bottom, just on the walls, at the waterline, on the coping, and, in competition pools, can be used to designate lanes and depths. Tile is often placed at the waterline because floating oils, dirt and waste can combine to form a scum line around the pool; this is why tile, an easily cleanable surface is placed at the water line around the perimeter of pools.<sup>2</sup>



Figure 5.2 – Tiled lane markers in Water Cube, Beijing, China.

Tile is a very popular finish option for pool decks and choosing a tile or stone for these areas can have a significant visual and safety impact. A pool’s functional performance depends largely on the correct use of slip-resistant materials in the various areas (e.g. pool bottom, steps, deck, etc...). It is extremely important to avoid the risk of accidental falls by using slip-resistant tile, even if it means sacrificing some aesthetic values and easy cleaning. However, floor cleaning is an essential factor to ensure that the tile slip-resistant performance is kept intact.

There are several methods for determining slip-resistance of tile, and the test method used depends upon which governing body is in place in the country where the installation is done. For years the tile industry in the United States has endorsed ASTM C1028 “Standard Test Method for Determining the Static Coefficient of Friction of Ceramic Tile and Other Like Surfaces by the Horizontal Dynamometer Pull-Meter Method”. While this test method is fine for laboratory conditions there has been a push to use different methods for conducting tests in the field, such as;

1. The variable-angle ramp human traction test method as the primary standard for validation of portable slip-resistance methods;
2. The Tortus dynamic slip resistance measuring instrument, with digital data acquisition, for wet testing, and the use of a trace of Triton X-100 wetting agent in distilled or deionized water as the wetting liquid. The minimum value using this test method for use in bathtubs, showers and pool decks is 0.70; and,
3. The pendulum dynamic slip resistance measuring instrument for wet testing, and the use of the pendulum test guidelines recommended by the United Kingdom Slip Resistance Group. The minimum British Pendulum Number (BPN) on wet, clean flooring is 35 for showers and pool decks.

The Tortus method and the Pendulum method are recommended for testing performed in the field and have achieved wide acceptance. These has also been significant information obtained using these test methods so as to correlate human traction test data with well-simulated mechanical analogs of human traction.<sup>3</sup>

Germany, Australia, New Zealand, Italy and many other countries have their own standards and test methods for determining both the slip-resistance of tile and acceptable minimum levels to which tile must perform. Whichever test method is employed, the main focus is on providing the best protection for all those who will be using the pool and pool deck.

Another factor which should be taken into consideration for pool deck tile installations is what temperature the finish will be when exposed to direct sunlight. A light colored tile or stone is an ideal choice to absorb less of the heat and maintain a safe and comfortable temperature. Dark colored tile or stone can get extremely hot and create an uncomfortable environment for pool and pool deck users.

### 5.3 Types of Tile for Submerged Applications

While the types of tile (e.g. impervious, vitreous, some stone, and glass) recommended for use in submerged installations is rather limited, the myriad of colors, sizes, shapes, and designs is very impressive in scope. Tile can range in size from mosaics as small as  $3/4" \times 3/4"$  (19 mm x 19 mm) to as large as  $4' \times 4'$  (1.2 m x 1.2 m), and stone can come in any size, shape or thickness. Many companies even manufacture pre-fabricated designs in tile which are placed within the finish at the bottom of a pool or fountain and provide a unique and aesthetically pleasing characteristic.

As stated earlier in this section, tile used in submerged installations should have a very low absorption rate ( $\leq 3\%$ ) which helps to minimize, or even eliminate problems caused by moisture expansion and contraction. Impervious tile and vitreous tile are the most popular choices for swimming pools around the world because they are relatively inexpensive and easy to find. Glass tile, suitable for submerged installations, is very pleasing in appearance but is typically more expensive and requires a higher degree of installation experience and expertise. Stone is also an excellent option but choosing the right stone is important. While many stone types will not experience significant moisture or thermal expansion, some can be affected by pool chemicals and improper mineral balance in the pool water (see Section 11.3 for more information).

The installation of mosaic tiles in swimming pools and fountains has history going back thousands of years. In fact, the first tiled pools

and baths incorporated small tesserae to create a variety of designs and mosaic murals. These tiles were installed individually, by hand, could take long periods of time and required installers with artistic ability to create. Fortunately, modern technology incorporates methods and materials to create beautiful installations quickly and easily. Stone, porcelain and glass mosaics are now pre-mounted, using several different methods onto sheets. These mosaics can even be customized to create a likeness of any picture or photograph using specialized computer software or exceptional artistic ability.



Figure 5.3 – Mosaic pool floor found in ruins of Pompeii, Italy.

In recent years the tile industry has seen some issues arise with the mounting of mosaic tile when used in submerged installations. To better understand this point, let's look at the different ways in which tile and stone are mounted onto sheets;

- Paper-face Mounted – paper face mounted tile, as the name suggests, are mosaic tiles that have a sheet of paper adhered to the face of the sheet of tile. This paper keeps the tiles properly separated and allows for the installation of the entire sheet at one time. Once the tile has been installed and has had

sufficient time to cure (i.e. when the mortar holds the tile in place but allows for slight adjustments to be made in the tile) the paper is dampened and the paper is peeled off to reveal the tile finish.

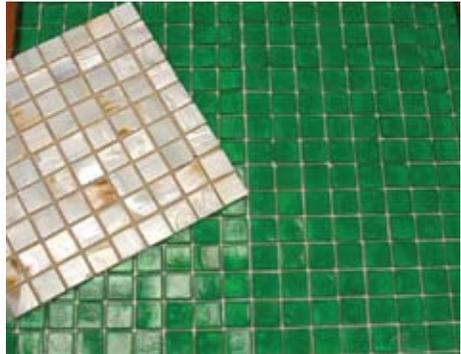


Figure 5.4 – Two examples of paper-face mounted glass mosaic tile.

- Plastic-face mounted – similar to paper face mounting except a clear plastic film is used in place of the paper. A great benefit of using the clear plastic film is that the tile or stone is visible through the plastic, and, if necessary, the plastic could be cut and adjustments made to the tile or stone prior to removing the film. In most cases, the plastic film cannot be removed until the setting mortar has fully cured.



Figure 5.5 – An example of plastic sheet mounted glass mosaic pebbles.

- Rear Dot Mounted – some tile manufacturers use the method of mounting the tiles in sheets using polyvinyl chloride (PVC) dots. While this method eliminates the need to remove the paper face mounting, it carries its own types of concerns. Note the amount of space that the PVC dots cover on the back of each tile in Figure 5.6.



Figure 5.6 – An example of PVC dot mounted tile.

- **Rear Mesh Mounted** – this method incorporates a fiberglass mesh which is bonded to the back of mosaic sheets to create the sheets. This method also eliminates the need to remove the paper face mounting but, it too, carries its own set of potential problems depending on the type of and the amount of mesh adhesive that is used.

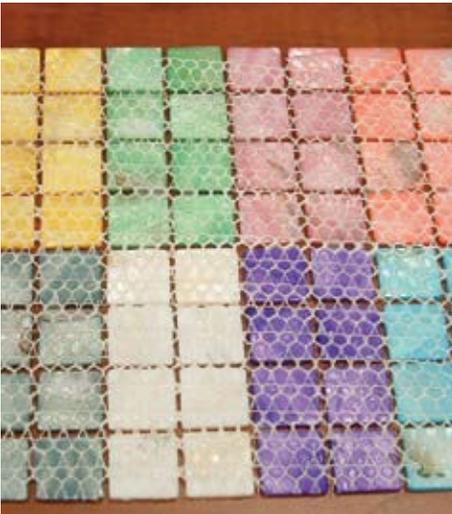


Figure 5.7 – An example of rear mesh mounted glass mosaic tile.

- **Rear Paper Mesh Mounted** – this method utilizes a paper mounting which is cut into a mesh configuration. While this method does eliminate the need to remove the paper from the front, it is not recommended, for obvious reasons, for use in swimming pools, fountains, spas, water features, or any wet area.

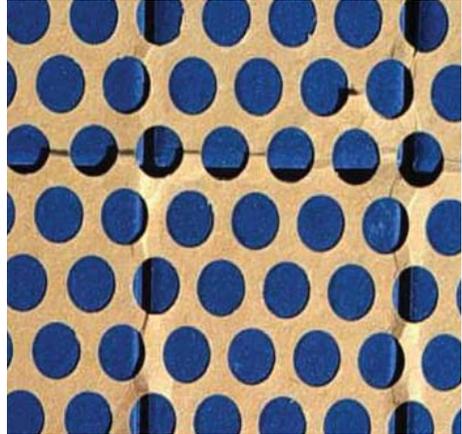


Figure 5.8 – An example of rear paper mesh mounted porcelain mosaic tile.

Installation of tile in swimming pools requires the tile to be fully and solidly bonded to the substrate. Simply put, this means that the tile should have 95 – 100% adhesive coverage not only to the back of the tile but also to the substrate. In submerged installations 95 – 100% coverage is essential to the long term performance of tile or stone. As stated in ANSI A108.5 2.4 Setting ceramic mosaic tile; “Thoroughly beat all tile or tile assemblies into place with a beating block to obtain maximum contact of bonding mortar on the back of each tile ... where contact area shall be 95% when no less than 3 tiles or tile assemblies are removed for inspection”.<sup>4</sup>

Since maximum coverage is essential, the preferred tile mounting type for submerged installations would be the paper-face or plastic-face mounted mosaic sheets. Due to the fact that there are no obstacles to full adhesion (e.g. mesh and/or adhesive), 100% coverage can be achieved. PVC dot mounted mosaic sheets present 2 challenges for proper adhesion to the substrate; the PVC dots take up space on the back of each tile and PVC can be difficult for the tile adhesive to bond to. Keep in mind that the thin-set or epoxy used to bond the tile to the substrate must have 95 – 100% coverage to the tile and the substrate; not the tile, PVC dots, glue and/or mesh, and

the substrate. If PVC dot mounted sheets are to be used then choose a type that has an average of less than 5% coverage of the PVC on the back of each sheet.

Another potential problem with PVC dot-mounted mosaic tile is how high the PVC dots are between each tile. If the dots are too high then grout does not have enough surface area to properly bond to the tile, or, there is simply not enough space for the grout to be properly installed. The PVC dots can also inhibit the bond of grout to the PVC.

In an effort to reduce costs, some mosaic tile manufacturers haphazardly use inappropriate glues, such as dilute polyvinyl acetate, to mount tile on backing mesh. As stated earlier these glues interfere with contact and bonding between mosaic tiles and the tile adhesive. When immersed in water these glues can soften and then swell as they absorb water, leading to loss of adhesion. This may occur within several weeks to several years but the result is almost always the same.<sup>5</sup> Simply put, the use of back-mounted or dot-mounted sheet mosaic tiles may be precluded from use in submerged or exterior conditions if the sheet backing and/or adhesive adversely affects the development of adequate and permanent adhesion between the mosaic tile body and the bedding mortar.

Tile manufacturers must specify, in writing, whether their assemblies are suitable for installation in swimming pools, fountains, water features, exterior, and other wet areas. Paper back-mounted mosaics are not recommended in submerged or wet areas.<sup>6</sup>

There are 3 categories of glue to avoid;

- Glues that soften without noticeable swelling as they absorb water. These appear to be clear when dry and white when immersed (similar to PVA wood glues).
- Glues that soften and swell to a gel that eventually forces tile apart and away from the substrate and may fall apart in small pieces rather than stay attached to the mesh.

- Glues that do not change in appearance or feel but gradually lose adhesion to the tile after prolonged immersion in water. Moisture evidently breaks down the adhesion without penetrating far into the film of glue.<sup>7</sup>

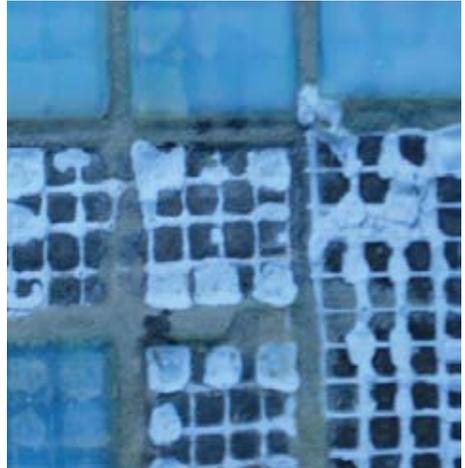


Figure 5.9 – A classic example of an improper adhesive used to mount the mesh for submerged installation. The adhesive has changed color from clear to white and has swelled significantly, forcing delamination.

For mesh backed mosaic tile the fabric mesh and the adhesive used to mount the fabric mesh must be water-resistant and chemical-resistant, should not weaken when exposed to moisture, should be resistant to varying pH levels, resistant to high alkalinity, and should be compatible with the mortar or adhesive used to bond the mosaics. It is the responsibility of the ceramic tile manufacturer to mount the tiles so that the bond requirements of ANSI A137.1, according to ASTM C482 “Standard Test Method for Bond Strength of Ceramic Tile to Portland Cement Paste” are met or exceeded.<sup>8</sup> Beyond that, the architect/designer, tile installer and owner should also make sure that the products being used on the job are acceptable and adequate for the designed purpose. The installation of tile, which is meant for the purpose, using the appropriate setting materials will save time, labor and money and keep the swimming pool or fountain in continual operation for a very, very long time.

### 5.4 Non-Tiled Pool Finish Types

While tile and stone are beautiful and functional design elements for swimming pools and fountains, there are other finish options.

**Plaster** – pool plaster is an age old process for finishing swimming pools, fountains and water features. Plastering provides a more watertight seal than the gunite, shot-crete or poured concrete on which the plaster is installed. Pool plasters are often comprised of white portland cement and fine marble dust, known as Marcite or Marbleite, but there are now quartz based plasters that incorporate a fine, pigmented quartz aggregate and provide many color options. Plaster is pumped through a high pressure hose to the pool and is then troweled on by trained technicians. While plaster is a very popular finish for swimming pools, often used in conjunction with tile or stone at the water line, plaster must be replaced every so often. See Section 11.3 for more information on the causes of plaster problems.



Figure 5.10 – Typical Marcite plaster installation (notice the spiked shoes).

- **Pebble Tec** – pebble tec pool finishes are similar to plaster or Marcite, except small river pebbles are mixed with the fine aggregate, white portland cement and pigments. This mix is pumped to the jobsite in a high pressure

hose, troweled on by trained personnel and allowed to dry. The pool finish is then acid washed to remove the thin plaster coating which exposes the pebble aggregate and finished surface.

**Paint** – one of the most common, and least expensive, pool finish materials is paint. Pool paint is available in a wide variety of colors and can be used to create intricate designs. There are three types of paint which are suitable for use in swimming pools, fountains and water features;


- **Epoxy paint** – epoxy paint is often used in new pool construction or in pools previously painted with epoxy, and is long lasting and durable. Epoxy coatings are effective against pool chemical attack, UV rays and automatic pool cleaners, and, a good epoxy paint will last approximately 7 – 10 years.
- **Chlorinated rubber base paint** – rubber base paint is not as durable or expensive as epoxy paint, but is a dependable and easy-to-use coating material. Chlorinated rubber base paint is available in many colors and will last approximately 3 – 5 years.
- **Water-based acrylic paint** – water-based acrylic paint is inexpensive, applies to almost any surface and cleans with water while still fresh. Available in a wide range of colors acrylic paints will last approximately 2 – 3 years before repainting is necessary.

**Vinyl Liner** – vinyl liners are custom made sheets of vinyl which are installed between the water and the pool structure. These liners lock into a track located on the bottom of the pool coping immediately under the deck. Vinyl liners provide good resistance to pool chemical maintained at proper levels but may fade or become brittle when harsh chemicals or high concentrations of chemicals are used.<sup>9</sup>

While all of the above mentioned finishes are effective and reliable, none of them have the durability and lasting beauty of tile and stone.

Installed properly in a well cared for swimming pool or fountain, tile and stone can (and has) lasted for several millennia!

- 1 The Tile Doctor, How To Shop for Ceramic Tile. Retrieved 9/2/2008 from [http://www.thetiledoctor.com/sh\\_ceramictile.cfm](http://www.thetiledoctor.com/sh_ceramictile.cfm).
- 2 Pool Janitor FAQ, Retrieved on 9/17/2008 from [www.poolcenter.com](http://www.poolcenter.com).
- 3 Endorsement of Portable Test Methods and Slip Prevention Standards for Existing Flooring, Ceramic Tile Institute of America, Culver City, CA, Retrieved September 15, 2008 from [www.ctioa.org](http://www.ctioa.org).
- 4 American National Standard Specifications for the Installation of Ceramic Tile Material and Installation Standards, ANSI A108 and ANSI A118 Series, American National Standards Institute, NY, 2008, pg 44.
- 5 Hartog, Peter, Tiling At The Deep End...Revisited. Retrieved 9/11/08 from [www.tiletoday.com.au](http://www.tiletoday.com.au).
- 6 TCA Handbook for Ceramic Tile Installation 45th Edition. Tile Council of North America, Inc. Anderson, SC, 2007, page 12.
- 7 Hartog, Peter, Tiling At The Deep End...Revisited. Retrieved 9/11/08 from [www.tiletoday.com.au](http://www.tiletoday.com.au).
- 8 Bulletin 3: Back-Mounted Ceramic Tile. Materials and Methods Standards Association, Houston, TX, 2005.
- 9 Vinyl Liners, Retrieved on 9/17/2008 from [www.poolcenter.com](http://www.poolcenter.com).



## Section 6 – Tile Installation Preparation and Equipment



### 6.1 Installation Equipment, Substrate Preparation and Installation Procedures

The construction equipment, substrate preparation process and installation procedures required for each project and region of the world are unique, and therefore it would not be possible to list all the types and combinations of tools, equipment and procedures involved in the installation of wet area and submerged tile applications. This section will present the most common tools, equipment and installation procedures required for each phase of construction. Tool and equipment requirements are determined by the phase of the installation shown below, and further defined by the type of construction, type of finish material, and the type of adhesive installation.

Installation Procedures, Tools and Equipment for Wet Area and Submerged Installations;

- Substrate and Finish Material Surface Preparation
- Inspection and Evaluation
- Access for Preparation and Installation (Rolling Scaffolds for Vertical Work)
- Mixing of Adhesives
- Installation of Adhesives
- Installation of Finish Material
- Installation of Joint Grout/Sealants

**Substrate and Finish Material Surface Preparation** – The first step in substrate preparation is the evaluation of the type of substrate and its surface condition. This includes the levelness (plane or flatness deviation), identification of general defects (e.g. structural cracks, shrinkage cracks, laitance, etc...), the presence of curing compounds or surface hardeners, and contamination. Concrete should have a wood float or light steel trowel finish for proper adhesion of thin-sets or membranes. Over finishing a concrete surface can close the pores and may inhibit proper adhesion of thin-sets and membranes.

The ability of a substrate to be wetted by an adhesive is essential to good adhesion and important in determining the performance of the adhesive in bonding to the substrate. This means that not only should the substrate possess a balance between porosity and texture, but also that the surface must be clean of any contamination such as dust, dirt, oil, paint, curing compounds, sealers, and other bond inhibiting substances that could prevent bonding of an adhesive. The levelness tolerance or smoothness of a substrate surface can also play an important role in allowing proper contact and wetting of an adhesive. Typically, the greater the surface area to which the adhesive is in contact, the better the adhesion.

**Adhesive Compatibility** – Compatibility plays an important role in determining adhesion between the substrate and the tile or membrane being installed. The substrate material must be compatible not only with adhesive attachment, but also with the type of adhesive under consideration. This means that the substrate material must have good cohesive qualities to resist tensile and shear stress and not have an adverse reaction with the proposed adhesive or membrane. Similarly, the tile being installed must also be compatible with the adhesive. A general consideration in determining compatibility with adhesives is as follows;

The installation of any finish material with an adhesive will only be as good as the setting materials and the substrate to which the finish material will be bonded. The highest strength adhesives and most careful application with the best quality tile will not overcome a weak or dirty substrate.

This section provides information on the identification of common substrate characteristics and defects, and the preventative and corrective actions necessary for proper surface preparation.



6.2 – Inspection and Evaluation.

### 6.2 Inspection and Evaluation

#### Site Visit and Pre-Construction Conference –

Prior to commencing ceramic tile work, the tile contractor shall inspect surfaces to receive tile and accessories, and shall notify the architect, general contractor, or other designated authority in writing of any visually obvious defects or conditions that will prevent a satisfactory tile installation. Installation work shall not proceed until satisfactory conditions are provided. Commencing installation of tile work typically means acceptance of substrate and job site conditions.

**Job Site Conditions** – The following items are examples of potential issues that may need to be addressed prior to commencing the installation:

- **Contamination** – The surface to which tile or stone installation materials will be bonded must be structurally sound, clean and free of all dirt, dust, oil, grease, paint, concrete sealers, curing compounds, and any other material that can act as a bond inhibitor. Dry, dusty concrete and other surfaces should be swept and then dampened with a sponge and water. Any excess water should be allowed to evaporate or be swept off prior to installation of tile setting materials. See Sections 6.4 and 6.7 for more information.
- **Surface and Ambient Temperatures** – During the placement of concrete and installation of other types of substrates, extreme cold or hot temperatures may cause numerous surface or internal defects, including shrinkage cracking, a weak surface layer of hardened

concrete caused by premature evaporation, or frost damage. Once the concrete is cured, extreme temperatures of both the ambient air and surface of the substrate can also affect the normal properties of tile adhesives.

Elevated ambient air and surface temperatures (>90°F [32°C]) will accelerate the setting of cement, latex cement and epoxy adhesives. Washing and dampening floors and walls will serve to lower surface temperatures for latex cement mortars and epoxy adhesives. Shading the substrate, if exposed to sunlight, is also effective in lowering surface temperatures, but if ambient temperatures exceed 100°F (35°C), it is advisable to defer work with adhesives and membranes to a more suitable time. Humidity may also have an effect on the curing of membranes and portland cement based adhesives and grouts. Higher humidity will work to slow down cure rates while low humidity will accelerate the curing process.

#### Weather Conditions and Substrate

**Protection** – The optimum conditions for installation of ceramic tile and stone are temperatures between 60° and 80°F (15° and 25°C), with 50% relative humidity. However, these conditions are atypical, so provisions must be made for variations in climate conditions. Protection applies to the substrate, the installation of adhesives and joint grouts, and also the storage and handling of the finish material.

- **Hot Temperatures** – Protection or corrective action is required if either ambient air or surface temperatures of substrates/finishes go above certain thresholds during installation. Temperature thresholds vary with the types of adhesives and installation accessories, but generally, elevated ambient air (80–100°F [25–35°C]) and surface temperatures will accelerate setting of cement, latex cement, epoxy and silicone adhesives. Washing and dampening floors and walls will not only remove some contaminants, but also serve to lower surface temperatures by evaporative

## Section 6 – Tile Installation Preparation and Equipment

cooling for cement latex mortars and moisture insensitive epoxy adhesives. Shading surfaces that may be in direct sunlight by erecting temporary tents is also effective in lowering surface temperature, but if ambient air and surface temperatures exceed 100°F (35°C), it is advisable to defer work to another time. If work cannot be deferred, it is also possible to cool additives (water, latex, epoxy liquids) in conjunction with the above techniques.

- **Cold Temperatures** – Protection or corrective action is required if either ambient air or surface temperatures of substrates go below certain thresholds during installation. Temperature thresholds are different for various types of adhesives. Protection and corrective actions to elevate air and surface temperatures to optimum range typically involve enclosing or tenting of work areas, augmented by temporary heating. If temporary heating is employed, it is very important to vent units to the exterior of enclosures to prevent exposure to toxic fumes, and also to prevent build-up of carbon dioxide, which can cause carbonation of cementitious materials. This condition typically occurs when ambient temperatures during installation are around 40°F (5°C) and only affects exposed surfaces. The length of exposure is a function of time and temperature. Cement hydration stops at 32°F (0°C) surface temperature, when water necessary for hydration freezes, and the cement hydration process is severely retarded starting at 40°F (5°C).

Concentration of carbon dioxide can be elevated when temporary heating units are not properly vented outside of any protective enclosure during cold temperatures. As a general rule, air and surface temperatures should be maintained above 50°F (10°C) during installation of cement, epoxy, and silicone-based products. Some cement adhesive product formulations may allow installation in temperatures close to 32°F (0°C) and rising, however, at this critical ambient air temperature threshold, it is likely that surface temperatures

are below freezing due to thermal lag, and hydration or other chemical reaction may not occur at the adhesive interface.

As a simple rule of thumb; for every 18°F (10°C) above 70°F (21°C) cement based and epoxy based materials cure twice as fast. For every 18°F (10°C) below 70°F (21°C) cement based and epoxy based materials take twice as long to cure.

- **Dry and Windy Conditions** – These conditions can cause premature evaporation of water necessary for hydration in cementitious materials, and result in loss of strength. Latex additives are formulated to significantly reduce this drying effect by coating cement with a latex film. However, in extreme dry, windy conditions coupled with high temperatures >90°F (30°C), even latex additives do not provide adequate protection. It is recommended to provide temporary protection against rapid evaporation of moisture during hot, dry, windy conditions in the initial 36 hours after installation of cement mortars, screeds, plasters/renders and cement grouts, and to augment by damp curing with periodic daily water misting. Cement based adhesives are only susceptible to premature drying between the spreading of adhesive and the installation of the finish, and requires only temporary protection from dry, high wind speeds during the open or exposed time of the adhesive.
- **Wet Conditions** – Certain materials used in ceramic tile and stone assemblies can be moisture sensitive. For example, the strength of cementitious adhesives can be reduced from constant exposure to wet or damp substrates. Some materials, such as waterproofing membranes, may not cure properly or may delaminate from a continually wet or damp substrate. A damp substrate may also contribute to the formation of efflorescence. This is a particular concern not only from normal rain exposure during construction, but also in areas of an installation, which may be

exposed to rising dampness at ground level, or in areas where leaks from poor design or construction cause continual dampness in the substrate. When specifying liquid latex or a dry redispersible polymer adhesive mortar, verify with the manufacturer that the polymer formulation is not water soluble. However, even formulations that are not soluble when dry are vulnerable to rain during the initial set period (typically 12–24 hours). Therefore, it is essential to provide protection from any significant rain or washing within this period to avoid loss of strength and prevent possible fluid or latex migration staining.

### 6.3 Moisture Content of Concrete

Materials used in tile and stone installation applications can be affected by moisture during the installation and curing phase. For example, the strength of cementitious adhesives can be reduced from constant exposure to wet or damp substrates. Some materials, such as waterproofing membranes, may not cure properly or may delaminate from a continually wet substrate. A damp substrate may also contribute to the formation of efflorescence. Concrete with a high moisture vapor emission rate (MVER) may also have an impact on a tile or stone installation.

There are generally three tests that are used to determine moisture content in concrete. The three tests are:

1. Calcium Chloride (ASTM F1869 – Standard Test Method for Measuring Moisture Vapor Emission Rate of Concrete Subfloors Using Anhydrous Calcium Chloride).

The Calcium Chloride test involves placing a Petri dish of calcium chloride (covered by a plastic dome adhered to the concrete) on the concrete and allowing the Petri dish to remain in place between 60–72 hours. The calcium chloride absorbs any moisture vapor that transmits through the concrete within the plastic dome. The results of a calcium chloride test measures the amount of moisture

absorbed and results are stated in pounds per 1,000 ft<sup>2</sup> (92.9 m<sup>2</sup>) in a 24-hour period. Please note that the ASTM F1869 test should only be conducted in interior conditions when the building is completely enclosed and the air conditioning or heating system is turned on, unless otherwise instructed by the test kit manufacturer.

2. Relative Humidity (ASTM F2170 – Standard Test Method for Determining Relative Humidity in Concrete Floor Slabs Using in situ Probes).

The Relative Humidity test involves placing probes in the concrete and taking readings with a hygrometer. A relative humidity reading of 75% or below is acceptable for most tile applications. Please note that the ASTM F2170 test should only be conducted in interior conditions when the building is completely enclosed and air conditioning or heating system is turned on, unless otherwise instructed by the probe manufacturer.

3. Plastic Sheet Method (ASTM D4263 – Standard Test Method for Indicating Moisture in Concrete by the Plastic Sheet Method).

The Plastic Sheet Method involves taping an 18" x 18" (450 mm x 450 mm) piece of plastic on the concrete and allowing the plastic to remain in place for 18 - 24 hours to determine if any moisture has accumulated under the plastic when it is removed. Please note that the ASTM D-4263 test should only be conducted in conditions as stated in the ASTM D4263 document.

Both ASTM F1869 and ASTM F2170 are quantitative tests (stating approximately how much moisture is present) while ASTM D4263 is a qualitative test (stating that moisture is present but not how much), and all are a “snapshot” of moisture vapor emission during the testing period.



Figure 6.1 – ASTM F1869 Calcium Chloride Test Kit and ASTM F2170 Relative Humidity Meter (Photos courtesy of George Donnelly Testing & Inspections at [www.moisturetesting.com](http://www.moisturetesting.com)).

**Concrete Curing and Age of Concrete** – The age of a concrete substrate is important based on the fact that as concrete cures and loses moisture, it shrinks. A common misconception is that concrete completes shrinking in 28 days. This is not true. Thick sections of concrete may take over 2 years to reach the point of ultimate shrinkage. Under normal conditions, 28 days is the time that it typically takes for concrete to reach its full design strength. At that point, concrete will have maximum tensile strength and can better resist the effects of shrinkage and stress concentration.

Depending upon the curing techniques and exposure to humidity or moisture, there may be very little shrinkage in the first 28 days. Flexible adhesives, certain latex or polymer fortified thin-set mortars (e.g. LATICRETE® 254 Platinum or LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive), can accommodate the shrinkage movement and stress that may occur in concrete less than 28 days old. In some cases it may be recommended to wait a minimum of 30–45 days to reduce the probability of concentrated stress on the adhesive interface. Some building regulations or codes may require longer waiting periods of up to 6 months. After this period, resistance to concentrated stress is provided by the tensile strength gain of the concrete, and its ability to shrink as a composite assembly. The effect of the remaining shrinkage is significantly reduced by its distribution over time and accommodated by the use of flexible adhesives.

**Cracking** – Freshly placed concrete undergoes a temperature rise from the heat generated by cement hydration, resulting in an increase in volume. As the concrete cools to the surrounding temperature, it contracts and is susceptible to what is termed “plastic shrinkage” cracking due to the low tensile strength within the first several hours after the pour.

Concrete also undergoes shrinkage as it dries out, and can crack from build-up of tensile stress. Rapid evaporation of moisture results in shrinkage at an early stage where the concrete does not have adequate tensile strength to resist even contraction. Concrete is most susceptible to drying shrinkage cracking within the first 28 days of placement during which it develops adequate tensile strength to resist a more evenly distributed and less rapid rate of shrinkage. It is for this reason that it is recommended to wait 30–45 days before direct application of adhesive mortars.

Plastic shrinkage occurs before concrete reaches its’ initial set, while drying shrinkage occurs after the concrete sets. These types of shrinkage cracks generally do not produce cracks larger than 1/8" (3 mm) in width.

**Treating Shrinkage Cracks** – There are two different ways to treat shrinkage cracks. The first way is detailed in the LATICRETE Architectural Guidebook – ES-F125 (available at [www.laticrete.com/ag](http://www.laticrete.com/ag)) or TCA Handbook for Ceramic Tile Installation – F125. This method only treats the individual crack and not the entire area. This method may suffice for areas that are not completely submerged (such as pool decks or natatorium locker rooms). However, it will not be appropriate for areas that are constantly submerged and require full waterproofing/anti-fracture membrane treatment to create a complete waterproof installation.

The second method of treating the shrinkage crack would be detailed in the LATICRETE Architectural Guidebook – ES-F125A (available

at [www.laticrete.com/ag](http://www.laticrete.com/ag)) or TCA Handbook for Ceramic Tile Installation – F125A. This method uses the anti-fracture/waterproofing membrane over the entire floor. Following this method will help to protect the finished installation from cracks currently in the concrete substrate and any cracks which may develop over time. This is the preferred method for constant wet area and submerged applications.

**Structural Cracks** – There is no tile installation practice or method for treating any crack over 1/8" (3 mm) wide or cracks that experience differential vertical movement. These cracks are considered structural in nature and would require determination of the cause of the crack. Once the cause of the structural movement is determined, it must be remedied prior to the installation of the tile system. Repair techniques can vary and a structural engineer should be consulted prior to any remediation or installation of a tile system.

Excessive foundation settlement and movement can be caused by building on expansive clay, compressible or improperly compacted fill soils, or improper maintenance around foundations. Whatever the cause, settlement can destroy the value of a structure and even render it unsafe. In any case, water is the basic culprit in the vast majority of expansive soil problems. Specific components of certain soils tend to swell or shrink with variations in moisture. The extent of this movement varies from soil type to soil type.

When unstable soils are used as a base for a foundation, the tendency for movement is transmitted to the foundation. Since soil movement is rarely uniform, the foundation is subject to a vertical differential movement or upheaval. If all the soil beneath a foundation swells uniformly, there usually is no problem. Problems occur, however, when only part of the slab settles. Then, differential movement causes cracks or other damage. Once again this condition must be corrected before any tile installation can occur.

### 6.4 Potential Bond Breaking Materials

A tile installation is only as good as its adhesion to the substrate and the tile. An adhesive, in any form, will bond to the first thing it comes in contact with. If that material is dirt, dust, paint, or any other impediment that is lying on a surface, the adhesion to that substrate can be compromised. The importance of a good, clean surface cannot be over emphasized, regardless of the substrate or tile adhesive.

**Laitance** – Laitance is a surface defect in concrete where a thin layer of weakened portland cement fines have migrated to the surface with excess “bleed” water or air from unconsolidated air pockets. Once the excess water evaporates, it leaves behind a thin layer of what appears to be a hard concrete surface, but in reality is weakened due to the high water to cement ratio at the surface. Laitance has a very low tensile strength, and therefore the adhesion of tile will be limited by the low strength of the laitance.

The removal of laitance by mechanical methods, including the use of chipping hammers or scarifying machines, is recommended. The contaminated concrete surface should be removed until sound, clean concrete is encountered. Measurement of surface tensile strength and the absence of loose material are good indicators of sound concrete.

Abrasive blasting by means of a dry or wet blasting process, or, bead/shot blast methods are also acceptable for the removal of laitance on new and fully cured concrete. Compressed air used in these methods must be oil free. Since wet abrasive blasting reintroduces moisture into the concrete, sufficient drying time must be allowed.

### **Curing Compounds, Sealers and Form Release Agents**

– Liquid curing compounds and sealers are typically applied spray-on materials, which are designed to keep moisture in the slab. The constant amount of water kept in the concrete by the curing compounds helps accelerate the

curing time and improve the performance of the concrete. Curing compounds and concrete sealers are frequently used in all types of construction, especially in fast track jobs. Unfortunately, all types of curing compounds, concrete sealers and surface hardeners must be completely removed from substrates prior to the installation of tile or any installation accessories, including waterproofing membranes. The preferred methods to remove these curing compounds from the surface would be to bead-blast or shot-blast the horizontal concrete surface, and to high pressure wash vertical concrete surfaces.

There is a very simple and effective test to identify the presence of curing compounds, sealers or other bond breaking conditions. Simply sprinkle a few drops of water onto the substrate and see what happens. If water absorbs into the slab then it is usually suitable for the direct adhesion of tile. On the other hand, if the water beads up on the concrete surface (like water on a freshly waxed car) then there is something present on the concrete surface that can inhibit proper adhesion of the tile adhesive. While the water test is commonly used to determine the presence of bond inhibiting substances, it may not always be accurate.

In addition, to determine if bond inhibiting contamination such as oil or curing compounds are present on concrete, conduct the following test: taking proper safety precautions, mix a 1:1 solution of aqueous hydrochloric (muriatic) acid and water, and place a few drops in various locations. If the solution causes foaming action, then the acid is allowed to react freely with the alkaline concrete, indicating that there is no likely contamination. If there is little or no reaction, chances are the surface is contaminated with oil or curing compounds. Acids do not affect or remove oily or waxy residue, therefore, mechanical removal may be necessary.

Any surface to receive tile will always be exposed to varying degrees of contamination, especially normal construction dust and debris. Tile is often the last phase of the construction of a building. Imagine all other trades have been in and finished their certain part of the construction, (i.e. sheet rock, plumbing, painting, and many other trades). There is often paint, drywall compound, oil and other materials on the concrete from prior trades that need to be removed. One of the most difficult tasks for any installer is the preparation of the surface before the installation of the tile commences. However, it is one of the most important steps, if not the most important step, to providing for a successful, long lasting tile installation. Cleaning the surface is mandatory before tile is placed, and sometimes multiple washings will have to take place before tiling. Just sweeping the floor is not good enough!

### 6.5 Substrate Preparation Equipment and Procedures

**Contamination Removal** – If contamination removal is required, or if surface damage or defects exist, bulk surface removal may be necessary to prepare the substrate. There are several methods of removal, but it is important to select a method that is appropriate to the substrate material and will not cause damage to the sound material below the surface.

**Methods of Removal** – There are several methods for removing contamination from a substrate to better prepare for the application of tile and stone installation materials. These include;

- **Mechanical Chipping, Scarifying and Grinding** – Mechanical chipping, scarifying or grinding methods are recommended only when substrate defects and/or contamination exist in isolated areas and require bulk surface removal greater than 1/4" (6 mm) in depth. Chipping with a pneumatic square tip chisel or grinding with an angle grinder is a common mechanical removal technique.



Figure 6.2 – Saw Tec® Dustless Grinding. This method is ideal for spot preparation and solves localized problems.

- **Shot-blasting and bead blasting** – This is a surface preparation method, which uses proprietary equipment to pummel the surface of concrete with steel pellets or ceramic beads at high velocity. The pellets of varying size, are circulated in a closed, self-contained chamber, where the pellets and debris are separated. The debris is collected in one container and the pellets are re-circulated for continued use. This is the preferred method of substrate preparation when removal of a thin layer of the concrete surface is required, especially the removal of surface films (e.g. curing compounds or sealers) or paint.



Figure 6.3 – Shot-blasting is ideal for areas outside of pool tanks and water features and for areas where access by the equipment is not an issue.

- **Water-Blasting** – High pressure water blasting using pressures over 3,000-10,000 psi (21–69 MPa) will remove the top surface layer of concrete and expose aggregate to provide a clean, rough surface. Thorough rinsing of the surface with water after water blasting is necessary to remove any laitance. Water-blasting is only recommended on fully cured concrete because of the high pressure. Proper allowance must be made to allow for the excess water in the slab to dry. This method

is commonly used on vertical surfaces and is ideal for preparation of pool tanks, water features and vertical surfaces.



Figure 6.4 – High pressure water wash (water-blasting) will remove the required amount of contaminated concrete. Photo courtesy of Turtleskin, Inc. (protective clothing and gear for use with water blasting) Blastrac® Inc. Shot Blasting Machinery. This method is ideal for preparation of pool tanks, water features and vertical surfaces.

- **Acid Etching** – Acid etching or cleaning is never recommended to clean a surface prior to receiving tile. If an acid is not neutralized or cleaned properly after the cleaning takes place, it can continue to weaken the portland cement in the concrete and tile installation materials when in the presence of moisture. Acid must be neutralized with Tri-Sodium Phosphate (TSP) or baking soda mixed with water and then completely rinsed to ensure all the acid is removed from the surface. Again, acid is not recommended for cleaning concrete, since it has an adverse affect on portland cement. A chemical reaction occurs when portland cement and acid are introduced to each other that can destroy the cement matrix. The interaction between the acid and the portland cement exposes the concrete aggregates and weakens the concrete.

Acid can also leave a white powdery substance on the surface which can act as a bond breaker for any tile installation material. To avoid any potential problems it is best to avoid the use of acids as a substrate preparation method.

### 6.6 Substrate Tolerances

**Flatness and Levelness** – A flat, plane substrate is an important concern for any tile installation requiring a direct bond adhesive application. According to industry requirements (ANSI A108.01 – 3.2) the following are the requirements for flatness of concrete slabs;

- ANSI A108.01 3.2.1.1 – Where the mortar bed for the tile floors to be bonded to the concrete slabs; “Screed finish concrete slabs that are to receive ceramic tile. Maximum permissible variation in the plane or slope is 1/4" in 10' (6 mm in 3 m) from the required plane when measured with a straight-edge... Properly cure slabs without using liquid curing compounds or other coatings.”
- ANSI A108.01 3.2.1.2 – Where tile is to be bonded directly to concrete with one of the thin-set methods; “Steel trowel and fine-broom finish concrete slabs that are to receive ceramic tile. Maximum permissible variation of 1/4" in 10' (6 mm in 3 m) from the required plane. Cure concrete slabs that are to receive tile before tile application. Do not use liquid curing compounds or other coatings that may prevent bonding of the tile setting materials to slabs. Slab shall be dry at time of tile installation. Since any cracking of the concrete slab will be transmitted to the finished surface, take all precautions to prevent cracks in the concrete. Use control joints through the slab and tile finish as specified or where cracks are anticipated.”

Large format tile and stone applications may require a tighter tolerance of 1/8" in 10' (3 mm in 3 m) from the required plane. Greater deviations prevent the proper installation of tile into the adhesive, which may result in numerous problems, including loss of bond or excessive lippage.

If levelness tolerance is exceeded, then it may be necessary to employ remedial work, such as re-construction, patching, grinding,

or installation of leveling mortars, screeds, or renders (e.g. LATICRETE 3701 Fortified Mortar Bed; or, LATICRETE® 3701 Fortified Mortar Bed or LATICRETE 226 Thick Bed Mortar mixed with LATICRETE 3701 Mortar Admix).

If the tolerance is within specifications, then the use of a medium bed mortar and a larger size notch trowel can alleviate any minor defects in the substrate. Please note that while a medium mortar may be used to correct minor substrate defects, it is important to stay within the product manufacturers guidelines for thickness of the setting material.

With most adhesives or cement leveling mortars/renders, such as latex cement mortars or moisture insensitive adhesives, the substrate can be damp during installation; however, it cannot be saturated. The objective is not to saturate the floor, but to make sure all the dust and debris is removed before tiling.

### 6.7 Final Surface (Residue) Cleaning

Once all corrections to the substrate have been made, the final and most important step of substrate preparation is the final cleaning, not only of the residue from contamination and bulk removal processes described above, but also cleaning of loose particles and dust from airborne contamination.

The final cleaning is considered minimum preparation for all substrates. Final cleaning can be accomplished by pressurized water as mentioned above, but can also be accomplished with standard pressure water and some agitation to eliminate the bond breaking effect of dust films. In some cases, airborne contamination is constant, requiring frequent washing just prior to installation of cement leveling plaster/renders, adhesive mortars, or membranes.

There is no exception from this general rule; and the only variation is the drying time of the substrate prior to the application of the adhesive. Drying time is dependent on the

type of adhesive being used. With most adhesives, the substrate can be damp, with no standing water. A surface film of water will inhibit grab and bond of even water insensitive cement and epoxy based adhesives. The use of a damp sponge just prior to installation of tile is an industry accepted method to ensure that the substrate is cleaned of any dirt and construction dust on the properly prepared substrate.

Monitor the pH level of the substrate prior to laying tile. Do not install tile until the pH has a value less than 10. Properly balance the pool water immediately upon filling.

### 6.8 Finish Material Preparation

Cleaning of the tile back and substrate surface prevent contamination from inhibiting adhesive bond. While careful consideration is often given to the preparation of the substrate, preparation and cleaning of the finish material bonding surface is an often overlooked specification item or quality control checkpoint. Considerations are dependent on the type of finish material.

#### Types of Finish Materials

- **Ceramic or Porcelain Tile** – The bonding surface of the tiles may be contaminated with dirt or dust from normal manufacturing, storage and handling. Porcelain tile may have a coating of a release agent (known by terms such as bauxite, engobe) which prevents fusion of the tile to kiln surfaces during the firing process. The type, amount, and degree of removal of release agent prior to shipping will vary according to manufacturer or production batch. It is recommended to wipe each tile with a clean, damp towel or sponge during or just prior to installation to maximize adhesive bond. Redispersible polymer cement and latex cement adhesive mortars can be applied to a damp, but not dripping wet surfaces.
- **Stone** – Fabrication dust from cutting, polishing and detailing may leave a dusty residue on the bonding side of the stones.

The back of the stone should also be wiped down with a clean damp sponge or cloth and allowed to dry prior to installation for maximum adhesive bond.

- **Glass Tile** – The preparation of a glass tile prior to installation will vary by glass tile manufacturer. Therefore, it is important to follow the glass tile manufacturer's written installation instructions. In many cases, the glass tiles should be wiped and cleaned of any dust or residue with clean water and then should be wiped dry with a clean cloth prior to installation.

### 6.9 Adhesive Mixing Equipment and Procedures

Equipment and tools required for mixing of adhesives are primarily dependent on the type of adhesive and construction site conditions such as the size of project.

#### Types of Adhesives

##### Latex Cement Based Adhesive Mortars

###### Manual Mixing

- Bucket, Trowel and Mixing Paddle

###### Mechanical Mixing

- Low Speed Drill (<300 rpm) and Non-Air Entraining Mixer Blade (Figure 6.6)
- Rotating Blade (Forced Action) Batch Mortar Mixer (Figure 6.7)

**NOTE:** Rotating drum type concrete mixers are not suitable for mixing adhesive mortars. In mixing cement adhesive mortars, always add the gauging liquid (water or latex additive) to the mixing container or batch mixer first. Begin mixing and add the dry cement based powder gradually until all powder is wet, then continue mixing continuously for approximately one minute or until mortar is wet and plastic. If using site prepared powder mixes of portland cement and sand, add the sand first until it is wet, and then add the cement powder. Take caution to prevent over-mixing by blending only until the mortar is wet and plastic in accordance with the manufacturer's instructions. Over-mixing can entrap air in the wet mortar and result in reduced density (high absorption will reduce freeze thaw stability) and strength.

### Epoxy Adhesive

#### Manual Mixing

- Bucket and Trowel

#### Mechanical Mixing

- Low Speed Drill (<300 rpm) and Non-Air Entraining Mixer Blade

The mixing instructions for epoxy adhesives vary according to the manufacturer's formulations. The most common epoxy adhesives are three component products, which involve mixing two liquid components (resin and hardener), and a powder component (silica filler). The liquids are mixed together first and fully blended before adding filler powder. There are several important considerations in mixing epoxies. First, the chemical reaction begins immediately upon mixing the epoxy resin and hardener. Because the "pot" or useful life of the adhesive is relatively short (1 hour) and can be further reduced by ambient temperatures above 70°F (21°C), all preparation for mixing and installation of the epoxy adhesive should be made in advance. Mixing should also be made in quantities that can be installed within the prescribed useful life under installation conditions. Most epoxy adhesives cure by an exothermic or heat generating chemical reaction beginning with the mixing of the liquid components. The useful life of the epoxy not only begins before adding the filler powder, but the heat generated may accelerate the curing process in many formulations. Removal of the mixed epoxy from the mixing container is one technique used to dissipate heat generation and minimize set acceleration. Liquid components may also be cooled if anticipated ambient or surface temperatures will significantly exceed recommended use temperature range. Conversely, epoxy adhesive cure is retarded by cold temperatures, and the curing process will slow significantly at temperatures below 40°F (5°C); the curing process will continue unaffected if temperatures are raised.



Figure 6.5 – Variety of Mixing Paddles used for Drill Type Mixers.

#### Mortar Beds

- Aluminum Straight Edges and Screeds
- Concrete/Mortar Bed finishing trowel
- Wheelbarrows
- Square Edges Shovels
- Steel Rakes
- Walking Boards
- Mortar Bed / Tile Shoes
- Mortar Mixer



Figure 6.6 – Rotating Blade Type Mixer.

### 6.10 Installation Equipment and Procedures

The following are the basic tools and equipment used for the installation of ceramic tile, porcelain tile, glass tile and stone finishes:

#### Equipment for Application and Bedding of Adhesives and Grout Joints

- Notched Steel Trowel
- Flat Steel Trowel
- Margin Trowel
- Hawk
- Metal Applicator Gun (Silicone Sealant)
- Rubber Mallet

- Wood Beating Block
- Spacer Shims and Wedges
- Grout Float (Cement or Epoxy)

### Cutting/Fitting of Finished Materials

- Wet Saw (See Figure 6.8)
- Ceramic Tile Cutter and Accessories



Figure 6.7 – A commercial grade wet saw is ideal for cutting all types of tile and stone in swimming pool, fountain or water feature applications.

### Measurement

- Carpenter’s Level
- Laser Level
- Straight Edge (4’/1200 mm)

### Clean-Up

- Sponges, Towels
- Water Bucket
- Solvents (Epoxy or Silicones)

### Safety Equipment

- Safety Glasses
- Rubber Gloves
- Dust Mask/Respirator
- Safety Belts and Harness

### Functions of a Notched Trowel

- Gauges the Proper Thickness of Adhesive
- Provides Proper Configuration of Adhesive
- Aids in Efficient Application of Adhesive

**Notched steel trowel** – This is the primary and most fundamentally critical installation tool for the thin bed method of installation. The proper thickness of the adhesive layer is dependent on the type and size of finish, the cladding and substrate bonding surface texture, configuration and tolerance from consistent

thickness. A “gauged” or “calibrated finish” is one with a consistent thickness and a specified tolerance for deviation; an “ungauged” cladding is not consistent in thickness. Even gauged large format tile and stone can experience thickness tolerances of up to 1/8” (3 mm). Notched steel trowels are available in several sizes and configurations to control thickness of applied adhesive mortar. The configuration of adhesive application is critical to performance of the tile or stone installation. In addition to controlling final thickness of adhesive, the notched configuration results in “ribbons” or “ribs” of adhesive separated by spaces that control bedding or setting of the finish into the adhesive. The spaces allow the ribs of adhesive to fold into one another to decrease the resistance to pressure required for proper contact, and provide a controlled method of filling all air voids and allowing escape of air parallel to the ribs. This function is critical in assuring full contact and coverage of adhesive, not only to ensure maximum bond strength, but also to eliminate air voids or channels, which can harbor or transport water.

### Notch Chart

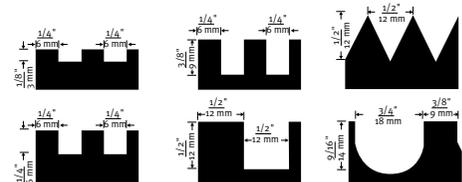


Figure 6.8 – Notched trowel sizes for installation of adhesive mortars.

It is important to maintain the specified notch depth and configuration of notched steel trowels throughout the project. The angle of application can have a significant effect on the height of adhesive ribs, which in turn can affect the height to width ratio necessary for control of thickness and elimination of air voids. Therefore, it is recommended to prohibit the common use of severely worn trowels and to require frequent cleaning and specification of application angle as part of the specification

and quality control inspection program. A flat steel trowel is a tool used in applying an initial thin layer of adhesive in positive contact with both the bonding surface of the tile, also known as back-buttering, and the surface of the substrate. The opposite side of a notched trowel typically has a flat edge for this purpose. A rubber mallet (or wood beating block, or hard rubber grout float for smaller tiles) can be used to beat-in the tiles after they are placed to assure full contact with the adhesive, and eliminate any voids in the adhesive layer (Figure 6.10).

### Thin Bed Installation Procedure

The following is an abbreviated step-by-step process for the application of thin bed adhesive mortars. Follow the explicit manufacturer's installation instructions for detailed information. For full installation specifications for thin bed, thick bed and membrane instructions – see section 7.

1. Apply a thin skim coat ( $1/16$ " / 1.5 mm thick) of thin-set or epoxy adhesive to the properly prepared dampened substrate with the flat side of the trowel; ensure good contact by scratching the edge of the trowel against the surface.
2. Additional thin-set or epoxy adhesive is then applied with the notched side of the trowel. Comb the mortar on the surface with the notched trowel holding it as close as possible to a  $90^\circ$  angle to the substrate. This will ensure the proper size of notches.
3. The ribs of thin-set or epoxy adhesive should be troweled in one direction only, and not in a swirl pattern. If additional thickness of adhesive is needed, add to the back of the tile or stone using the same procedure as on the substrate, making sure that the direction of the combed mortar is identical to the one on the substrate, otherwise, you will end up with notches in two directions that disturb each other and consequently will not allow full contact between the mortar and the back of the tile.
4. As a rule, tile sizes larger than 12" x 12" (300 x 300 mm) should be back buttered. Back buttering not only improves the contact between the mortar and the back of the tile, but also helps to ensure complete coverage. Another important consideration for back buttering is that if the tile is not fully bedded by proper beat-in, the ribs of thin-set or epoxy adhesive, which are not flattened, are being sealed by the coat applied to the back of the tile.
5. The tile should be pressed into place, and either twisted and pressed into position, or for tile sizes 12" x 12" (300 x 300 mm) and greater, slide into position with a back and forth motion perpendicular to the direction of the thin-set or epoxy adhesive ribs.
6. The final step is to beat-in with a rubber mallet to ensure thin-set or epoxy adhesive contact and make surface level with adjacent tiles.



Figure 6.9 – A notched trowel has several important functions that contribute to a successful installation of ceramic tile and paver tiles.

### 6.11 Grout and Sealant Materials, Methods and Equipment.

**Purpose of Grout or Sealant Joints** – The joints or spaces between pieces of tile serves several important purposes. Aesthetically, joints serve as a design element, primarily to lend a pleasing scale with any size tile module. Functionally, joints prevent water infiltration, and compensate for varying dimensional tolerances of the tile or stone. More importantly, though, joints lock the tiles into place and provide protection against

various delaminating forces. Depending on the joint material, a joint may also act to dissipate shear stress caused by movement.

### **Compensate for Tile Thickness Tolerances –**

The joints between tiles compensate for allowable manufacturing or fabrication tolerances, so that consistent dimensions (from center to center of joints or full panel dimensions) can be maintained. As a result, joints must be wide enough to allow variations in the joint width to accommodate manufacturing or fabrication tolerances in the tile without being evident.

### **Prevent Water Infiltration –**

Filled joints between tiles allow most surface water to be shed. This helps prevent infiltration of water, which can lead to saturation of the setting bed and substrate, freezing, strength loss and efflorescence. Depending on the grout or sealant material used, and the quality of installation, no grout or tile will be 100% effective against water penetration, so there may always be a small amount of water infiltration by capillary absorption. Therefore, the use of a waterproofing membrane is strongly recommended in wet area applications.

**Dissipate Movement Stress –** Probably the most important function of grout or sealant joints is to provide stress resistance and stress relief. The composite locking action with the adhesive layer allows the tile finish to better resist shear and tensile stress. Joints serve to provide stress relief of thermal and moisture movement that could cause delamination or bond failure if the edges of the tiles were butted tightly. Further isolation of movement is handled by separating sections of tile with movement joints (see Section 7.6 – Sealant and section 10 – Movement Joint Specifications and Details). This ensures that the grout or sealant joint will always fail first by relieving unusual compressive stress from expansion before it can overstress the tile finish or adhesive interface. The dissipation of stress provides an additional safety factor against dangerous delamination or bond failure.

**Grout Installation Procedure –** The following is an abbreviated step by step process for the installation of grout. Follow the explicit manufacturer installation instructions for detailed information. For full grout installation specifications – see section 10.

1. Prior to grouting, it is essential to conduct a test panel (preferably as part of the pre-construction quality assurance procedures) to test the grouting installation and clean-up procedures under actual climatic conditions. During this test, you may determine the need to apply a grout release or sealer to the tile prior to grouting in order to aid in clean-up and prevent pigment stain and absorption of cement paste (especially latex cement or epoxy liquids) into the pores of the tile. This test may also determine if additional adjustments are necessary, such as saturation of the finish with water to reduce temperature, lower absorption, and aid in installation and cleaning. Conducting a test panel will also allow for final determination of the grout color in relation to the tile, lighting and other environmental factors to which the finished installation will be exposed.
2. Wait a minimum of 24 hours after installation of tile before grouting.
3. Before commencing with grouting, remove all temporary spacers or wedges; rake any loose excess adhesive mortar from joints. Remove any hardened thin-set or epoxy adhesive which is above half the depth of the tile. Insert temporary filler (rope, foam rod) in movement joints to protect from filling with hard grout material. Wipe the tile surface with a sponge or towel dampened with water to remove dirt and to aid in cleanup.
4. Apply the grout joint material with a rubber grout float, making sure to pack joints full.



Figure 6.10 – Grout joint installation equipment – floats.

5. Remove excess grout by squeegee action with the edge of the rubber grout float diagonal to the joints to prevent pulling of grout from the joints.
6. Allow grout to take an initial set and follow the appropriate cleanup process for the specific grout type used as stated in the manufacturer's written installation instructions.
7. Any remaining weakened grout haze or film should be removed within 24 hours using a damp sponge or towel.

### Silicone or Urethane Sealant Joint Fillers

Installation procedures for sealant joint fillers are the same as for movement joints

(see Section 7 – Sealant and Section 10 – Expansion Joint Specification and Details).

### 6.12 Post Installation Cleaning

Most clean-up should occur during the progress of the installation. Hardened adhesive and grout joint residue may require more aggressive mechanical or chemical removal methods than required while still relatively fresh. Water based cement and latex cement adhesives clean easily with water while fresh, or may require minor scrubbing or careful scraping together with water within the first day. Epoxy and silicone adhesives and joint sealants may require more aggressive scrubbing and solvents if residue is greater than 24 hours old.

### 6.13 Mechanical Means and Methods

As an alternative to the common traditional means and methods of installation, swimming pool and natatorium applications lend themselves to the use of mechanized means and methods due to the size and uniqueness of the application. In many cases, mechanized equipment can greatly improve productivity and lower labor and installation costs. Generally, the set up and clean up time of the equipment factors into the decision of whether to use the mechanized equipment. The following sections provide an alternative to the traditional means that are typically used in most ceramic tile installations.

**Power Screeds** – Power screeds are used as an alternative to the conventional wood or aluminum straight-edge methods of leveling and “pulling” of mortar beds. The power screeds run on small electric powered or gas powered engines. The vibration that is caused helps to facilitate the screeding. The power screed sits on aluminum ribbons that set to the desired height. The power screed is pulled over the ribbons to compact and level the mortar faster and more efficiently than manual methods.

**Power Grouting** – Power grouting is accomplished by using a mechanized grout spreading machine. The grout is spread by using rubber blades mounted on a powered, rotating floor machine. This equipment will spread both latex portland cement based and epoxy grouts in an effective manner. These machines pack the joints and strike the excess grout from the face of the tiles. The rubber blades can be changed when excessive wear is noticed. The mechanized power-grouting machine has interchangeable pads to easily convert to the cleanup process. Traditional methods and equipment will still need to be used in small areas where the use of the mechanized equipment becomes impractical.



Figure 6.11 – Raimondi USA – Power Grouting Machine and Accessories.



Figure 6.12 – Raimondi USA – Power Grouting Machine.



Figure 6.13 – Raimondi USA – Low Speed Power Mixing Tub.

**Mortar Mixers and Pumps** – Mortar mixers and pumps are used as an alternative to conventional mortar mixers. The pump and mixer apparatus effectively mixes and pumps the mortar through a 3" (75 mm) hose to the desired location. The strength and style of these machines varies greatly depending on the amount of mortar to be mixed, the distance to place the mortar, and the amount of mortar to be placed.



Figure 6.14 – Putzmeister USA Pumps.



Figure 6.15 – Mortar is mixed and pumped to area in a combination mortar mixer/pump combination.

**Spraying Waterproofing Membranes** – Liquid applied waterproofing membranes are typically applied with heavy nap paint rollers. However, on large natatorium and water feature projects, certain liquid applied waterproofing membranes (e.g. LATICRETE® Hydro Ban™) can be effectively sprayed to increase productivity. In addition to the conventional means of applying LATICRETE Hydro Ban, (see Data Sheet 663.0 and How To Install Data Sheet 663.5) the airless spraying technique can be used as an alternate means of application. The following are the guidelines for this procedure. Most airless spray units can be used to apply the LATICRETE Hydro Ban.

This procedure will refer to the use of Graco's Mark IV Electric Airless Sprayer® and the 5900 HD Gas Powered Airless Sprayer. These sprayers are designed for spraying the contents from a 5 gallon (19 l) pail. Many airless sprayers are similar in design and will accomplish the same purpose.

## Mark IV Electric Airless Sprayer



## 5900 HD Gas Powered Airless Sprayer



Description	Mark IV	5900 HD
Graco Part No.	249636	248699
Max Tip Size	.031 (0.79 mm)	.043 (1.09 mm)
Max GPM (LPM)	0.95 (3.6)	1.6 (6.0)
Max PSI (MPa)	3300 (22.8)	3300 (22.8)

Figure 6.16 – Graco Company airless spray equipment. A good understanding of the equipment, set up, delivery and cleanup procedures are required in order to effectively spray LATICRETE® Hydro Ban™.

**Airless Spray Tip Characteristics** – It is important to remember that the spray tip orifice size, in conjunction with the fan width size, determines the spray characteristics of the tip.

**Examples:** As the spray tip orifice size increases, while maintaining the same fan width size, the greater the volume of coating will be applied to the same area. Conversely, the larger the fan width size, while maintaining the same orifice size, will result in the same amount of material being applied over a greater surface area.



Figure 6.17 – Graco Company Typical LTX Sprayer Nozzle.

**Tip Size:** LTX521 – has an orifice of 0.021" (0.5mm) and a fan width of 10" (250 mm) holding the nozzle 12" (300 mm) away from the substrate.

**Tip Size:** LTX631 – has an orifice of 0.031" (0.8 mm) and a fan width of 12" (300 mm) holding the nozzle 12" (300 mm) from the substrate.

The use of a spray tip with a smaller orifice will result in less product being delivered to the substrate requiring multiple passes to ensure a complete coating with optimum thickness.

**Understanding Tip Wear** – Choosing the right spray tip is essential for ensuring a quality finish. When beginning a project, choosing the right tip size and fan width will determine how effective the spraying process will be. The correct tip size will have a direct bearing on how much material is dispensed. However, spray tips will wear with normal use. When a tip wears, the orifice size increases and the fan width decreases so delivery time and product consumption will increase. This causes more liquid to hit a smaller area, which wastes waterproofing membrane and slows productivity. It is important to replace a tip when it gets worn to ensure a precise spray pattern, maximum productivity and a quality finish. Therefore, changing the spray tip often will result in greater productivity.

Tip life varies by coating, so if a tip is worn, replace it. Extend tip life by spraying at the lowest pressure that breaks up the coating into a complete spray pattern (atomize). Do not increase the pump pressure; it only wastes waterproofing membrane and causes unnecessary pump component wear.

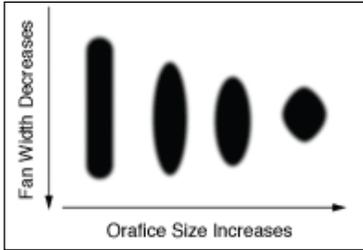


Figure 6.18 – The example demonstrates the spray pattern of new and worn spray tips. As wear occurs, the pattern size decreases and the orifice size increases. As a rule of thumb, it is best to replace the spray tips after spraying 30–45 gallons (114–171 liters) of LATICRETE Hydro Ban™.

**Spray Guns** – Follow the specific airless sprayer and spray gun manufacturer’s written instructions when using their specific equipment. Graco Silver Gun Plus® is depicted in the following photo. This spray gun can be used for both vertical and horizontal applications. Some Spray Guns will allow filtering in the gun handle. The filters will need to be periodically cleaned and changed to ensure proper liquid flow through the spray gun and tip.



Figure 6.19 – Graco Company Silver Gun Plus.

**Application of LATICRETE® Hydro Ban™** – Follow all surface preparation requirements outlined in Data Sheets 663.0 and 663.5. The sprayer should produce a maximum of 3300 psi (22.8 MPa) with a flow rate of 0.95 to 1.6 GPM (3.6 to 6.0 LPM) using a 0.521 or a 0.631 reversible tip. Keep the unit filled with LATICRETE Hydro Ban to ensure continuous application of liquid. The hose length should not exceed 100' (3000 cm) in length and 3/8" (9 mm) in diameter.

Apply a continuous LATICRETE® Hydro Ban™ film with an overlapping spray. The wet film has a sage green appearance and dries to a darker olive green color. When the first coat has dried to a uniform olive green color, approximately 45 – 90 minutes at 70°F (21°C), visually inspect the coating for any voids or pinholes. Fill any defects with additional material and apply the second coat at right angles to the first. The wet film thickness should be checked periodically using a wet film gauge to ensure that the appropriate thickness and coverage is achieved. Each wet coat should be 0.015" – 0.022" (0.4 – 0.6 mm) thick. The combined dried coating should be 0.020" – 0.030" (0.5 – 0.8 mm) thick or 0.029" – 0.043" (0.7 – 0.11 mm) wet. Bounce back and overspray will consume more of the LATICRETE Hydro Ban. To achieve the required film thickness, the coating must be free of pinholes and air bubbles. Do not back roll coating. Allow the LATICRETE Hydro Ban to cure in accord with the instructions in Data Sheets 663.0 and 663.5 prior to the installation of the tile or stone finish.

It is important to note that areas not scheduled to receive the LATICRETE Hydro Ban should be taped off and protected from any potential overspray. Expansion and movement joints should be honored and treated as outlined in product Data Sheets 663.0 and 663.5.

**NOTES:** The operator of the spray equipment must have a working knowledge of the equipment used and be able to adapt to the project conditions as the spraying takes place. As the spray tip wears, adjustments will need to be made. Spray tip selection, pressure adjustments and hose length will have a direct bearing on the results achieved.

**Spray Equipment Setup, Clean Up and Maintenance** – Follow the airless sprayer manufacturer’s instructions on set up, operation, clean up and maintenance of their equipment. The airless spraying unit should be flushed, clean and free of any contaminants prior to use with LATICRETE Hydro Ban.

**Health and Safety** – Follow all applicable health and safety requirement when applying LATICRETE® Hydro Ban™. The use of protective clothing, safety glasses and a dual cartridge respirator are recommended. See MSDS Sheet on LATICRETE Hydro Ban for complete information.

**Airless spray equipment can be purchased by contacting:**

Bob Zaffino  
The Paint Project, Inc.  
Industrial Spray Equipment & Systems  
71 West St.  
Medfield, MA 02052  
Tel. +1.508.359.8003  
Fax +1.508.359.8463  
e-mail bob@paintproject.com

or

Graco Inc.  
Sales/Distribution/Service  
P.O. Box 1141  
Minneapolis, MN 5540-1441  
Tel. 1.800.690.2894  
Fax 1.800.334.6955  
www.graco.com

1. TCA Handbook for Ceramic Tile Installation, Tile Council of North America, Inc., Anderson, SC.
2. Materials and Methods Standards Association, Bulletins, #3,5,6,9,11,12, 13,16, 1988 edition.
3. American National Standard for the Installation of Ceramic Tile, ANSI A108 series, A 118 series, American National Standards Institute, NY, 2005.
4. Raimondi Tools USA – Mechanized Tools.
5. Putzmeister USA – Mortar Pumps.

## Section 7 – Pool/Fountain/Spa Tile Installation



### 7.1 Adhesive and Mortar Performance and Selection Criteria

The performance and use of ceramic tile adhesives are regulated by the country or region according to prominent standards that govern the installation of ceramic tile. Some of these standards are discussed in Section 4. Compliance may either be mandatory or voluntary in the respective countries, depending on whether the standard is incorporated into a building code (see Section 4).

#### Criteria for Selection of Adhesives and Mortars

- High Adhesive Strength (Tensile and Shear Bond Strength)
- Water Resistant
- Flexible (Differential Movement)
- Permanent
- Fire and Temperature Resistant
- Non-Toxic and User Friendly
- Good Working Properties (Open Time, Pot Life, Sag Resistance)

**High Adhesive Strength (Tensile and Shear Bond Strength)** – Shear stress occurs when a force is applied parallel to the face of the material. The greater the resistance to shear stress, the higher the shear strength result.

Tensile stress occurs when a force is applied to pull a material to the point where it loses bond with the surface to which it is applied. The greater the resistance to tensile stress, the higher the tensile strength result.

Tile and stone installations can experience both shear and tensile forces. It is important to note that shear bond testing is limited to laboratory testing. On the other hand tensile bond testing can be performed in both laboratory conditions and in the field. Therefore, both tests are applicable and suitable to measure a material's bond strength.

**Water Resistance** – For proper exterior and interior wet area performance, and in demanding submerged applications, an adhesive must not be soluble in water after it is

fully cured. The adhesive should also develop water insensitivity within 24 – 48 hours so as not to require an unreasonable degree of protection against deterioration when exposed to water.

**Flexible (Differential Movement)** – Adhesives must have a low modulus of elasticity, or flexibility, to withstand differential movement between the finish material and the underlying substrate/structure. Differential movement can be caused by uneven or sudden temperature changes, moisture expansion or shrinkage of the finish material, substrate or structure, or, live loads such as filling and draining the tiled vessel with water.

**Permanence** – This criteria may seem obvious, but even if all other performance criteria are met, beware that some adhesive mortars can become soluble in submerged applications and may deteriorate over time. In addition, some epoxies can become brittle with age, and some urethanes can undergo a phenomena known as “reversion,” where the adhesive may soften and revert back to its original viscous state. Certain polymeric modification of cement mortars work only to enhance the workability and curing process to improve the physical characteristics of cement, but do not contribute any significant lasting improvement to the physical characteristics of the cement adhesive mortar.

**Fire and Temperature Resistance** – When cured, adhesives must meet building code requirements and standard engineering practices by not contributing any fuel or smoke in the event of a fire. In addition, the adhesive must maintain its strength and physical properties during and after exposure to high temperatures of a fire, or from absorption of heat under normal service.

**Non-Toxic and User Friendly** – The adhesive should be non-hazardous during storage, installation, and disposal. This includes other materials which may be necessary for preparation or final cleaning. The adhesive

should be non-toxic, non-flammable, low odor, easy to use, and environmentally (VOC) compliant. It is always best to verify low VOC compliance by obtaining third party certification of the installation materials (e.g. GREENGUARD). For example, LATICRETE International, Inc. manufactures a variety of setting materials for submerged applications (and otherwise) which are GREENGUARD Indoor Air Quality Certified. For more information, please visit [www.laticrete.com/green](http://www.laticrete.com/green).

**Good Working Properties** – The adhesive should have good working properties to ensure a cost effective and problem-free installation. This means that the adhesives must be easy to handle, mix, and apply without having to take extraordinary precautionary measures. Good initial adhesive grab to substrate and the finish material, long pot life, long open time (tacky, wet surface after spreading), vertical sag resistance (both the adhesive alone and with tile), and temperature insensitivity are all recommended working properties.

**Bedding of Tiles** – Solidly bedding the tile is one of the most important steps to achieving a permanent and trouble free installation. Back-buttering the tiles and ensuring complete coverage without air pockets or voids is a key process to meeting this end. The Project Architect can specify this procedure in the installation specification to ensure that this essential step is part of the construction process. Inspectors and applicators should periodically remove a tile to verify the coverage that is being attained. United States ANSI A108 Standards require a minimum 95% coverage in wet areas. Ensuring that no voids exist will prevent water penetration into the adhesive mortar layer and into the pore structure of the tile or stone (see Section 6 for more information on the application of adhesives and how to achieve the correct coverage).

### 7.2 Methods of Installation

There are several methods generally used in the installation of tile in pools and water features.

#### Application Methods

- Thin-Bed Method
- Medium Bed Method
- Thick Bed (Bonded Type Wet-Wet Method, Bonded Type Cured Thick Bed)

**NOTE:** Refer to Section 8 for unbonded, wire reinforced cured thick bed method and unbonded, wire reinforced wet-set method for natatorium pool decks and other non-submerged areas.

**Thin Bed Method** – This method, also referred to as the adhesive method, is defined as an application of a layer of adhesive, ranging from a minimum of 1/8" (3 mm) to a maximum of approximately 3/8" (9 mm) thick that is in full contact with no less than 95% of the bonding surface of the tile or stone and substrate. The substrate must be prepared to proper flatness, level and plumb in advance; adhesives are not intended for leveling or correcting level and plumb deviations. The adhesive can range from a pure or neat portland cement paste, to latex cement and epoxy adhesives. The thickness of the adhesive layer is dependent on the type and size of the tile, substrate bonding surface texture, and configuration of the tile (flat or ribbed back). A "gauged" tile is one with a consistent thickness and a specified tolerance for deviation; an ungauged finish material type is not consistent in thickness and typically requires thick bed or medium bed methods of installation. Generally, most, redispersible powder polymer and latex cement mortars are suitable for use with the thin bed or adhesive method, but not all of these mortars are suitable for submerged installations. Follow the adhesive manufacturer's guidelines for limitations on thickness, which varies based on formulation and for suitability in submerged installations. Refer to Section 9 – Specifications and Section 10 – Detail Drawings for ES-P601D for more information.

**Medium Bed Method** – Generally, thicknesses over 3/8" (9 mm) are not recommended for standard thin-bed or adhesive types of cement mortar mixes. Thickness over 3/8" (9 mm) typically require either a special formulation of powder containing a higher proportion of coarse sand, or modification of a site mix with the addition of extra coarse sand. These products are also known as medium bed mortars. Medium bed mortars are typically used when the adhesive thickness ranges from 1/8" (3 mm) up to 3/4" (19 mm). An example of this type of mortar is LATICRETE® 220 Marble & Granite Mortar mixed with LATICRETE 3701 Mortar Admix (ideal for use in submerged applications).



Figure 7.1 – Trowel applied medium bed mortar with a 3/4" (19 mm) loop notch trowel.

**Thick Bed Method** – Also known as the "wet-set" or "float and back-butter" method of installation, this method encompasses several different techniques. The most common thick bed technique is the "float and back butter" method. This method starts with the floating or screeding of the substrate with cement leveling mortar. The mortar bed can either be of the unbonded type (for pool decks) or the bonded type (pool decks or submerged). Mortar beds and wall renders are very commonly used in pool and water feature applications. Mortar beds allow for the creation of proper pitch/falls to drains, slopes in pools and decks and the creation of coves and transitions as pool floors slope and the depth changes.

**Bonded Type (Floors)** – In the bonded type for floors, a slurry bond coat consisting of LATICRETE 254 Platinum, or, LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive is trowel or brush applied to the concrete substrate. While the slurry bond coat remains wet and workable, the mortar bed (e.g. LATICRETE 3701 Fortified Mortar Bed or LATICRETE 226 Thick Bed Mortar mixed with LATICRETE 3701 Mortar Admix) is placed, compacted and then screeded, leveled, and pitched as required. The above mentioned mortar bed and slurry bond coat products are ideal for use in submerged applications. Unbonded mortar bed types require wire reinforcing which can be subject to corrosion in submerged applications and are therefore, unsuitable for use in this type of application.

**Bonded Type (Wall Renders)** – Wall renders do not require the use of slurry bond coat beneath them as the mortar is mixed to a more plastic mix containing a liquid to mortar powder ratio. This consistency allows the cement paste to wet out the concrete/masonry substrate in a sufficient manner to achieve proper bond. Wall renders are generally applied in several lifts with each lift never exceeding 1/2" (12 mm) in thickness. The first lift is the scratch coat. This layer is applied to the wall and is scratched up with a small metal comb like tool or trowel that roughens up the layer in order that the subsequent layer will achieve better mechanical bond. The scratch coat is allowed to harden and then the subsequent "brown" coats are applied in the same 1/2" (12 mm) maximum lifts. If additional lifts are required, the previous brown coat should be scratched up before it hardens.

LATICRETE 3701 Fortified Mortar Bed; and, LATICRETE 226 Thick Bed Mortar gauged with LATICRETE 3701 Mortar Admix are pre-packaged thick bed and rendering mortars which comply with industry standards and will hold up to the rigors of submerged applications. The use of pre-packaged mortars

eliminates inconsistencies in job site powder proportioning and raw material quality. Refer to Section 9 – Specifications and Section 10 – Detail Drawings for ES-P601 for more information.

These products are also components of the LATICRETE System Warranties and apply to submerged installations. Please visit [www.laticrete.com](http://www.laticrete.com) for more information on LATICRETE warranties or call LATICRETE Technical Services at 1.800.243.4788 x235.



Figure 7.2 – Latex fortified render is being applied to wall surface. Notice the lath strips that are set into the mortar. The lath strips are leveled and plumbed to establish the correct wall render depth. Once the render achieves a sufficient cure, the lath strips are carefully removed and the cavities are filled with mortar.

**Templates** – Swimming pools and water features may include intricate shapes, coves, goosenecks and other special attributes that can only be achieved by careful placement of bonded mortar beds and wall renders. Wood form templates are created and used to screed and shape the mortar to conform to these unique shapes. Traditional pools generally used formed tile gutters/skimbers/drains/ladders as part of the design and functionality.

Tile mechanics will often spend many hours fabricating these templates to create these intricate flowing shapes. This is a critical step in establishing the correct depths and elevations of the finish tile. In many cases, the shaped tile gutters and gooseneck dictates the finished elevations of the balance of the pool tile assembly including the pool deck.



Figure 7.3 – Tile mechanics float and shape pool utilizing templates, floats and screeds to achieve the desired form and height of the renders and mortar beds.



Figure 7.4 – Mechanic is using a wooden template to shape and screed the swale in the water feature tank.

**Gutters and Special Forms** – Modern pools generally use stainless steel gutters in lieu of the formed tile gutters. The stainless steel gutters also help to set the depth of the wall renders and the finish tile height. These elevations have a direct bearing on the floor heights and the radius of the coves that tie the walls into the floors.



Figure 7.5 – Stainless Steel Pool Gutter Assembly. Tile or Stone is brought up to the gutter assembly in the tank and on the deck (Photo courtesy of Barrier Lining, Inc.)



Figure 7.6 – Uniquely shaped pool/deck rim which required careful forming of the render in order to place the finished tile.

### 7.3 Waterproofing

**Importance** – Waterproofing protection is one of the most practical steps to ensure the longevity of any tile installation. It not only protects the spaces below and adjacent to the tile installation, it also protects the setting bed, reinforcing wire or metal lath (if used), concrete base and concrete reinforcing from potential damage and corrosion. Since damage to components can occur, it is no surprise that the majority of construction liability claims involve water damage that has resulted from the lack of, or an improperly installed, waterproofing membrane. The pressure of completing projects in a timely manner, often leads to tile installations being rushed and not installed correctly. The advanced technology that goes into waterproofing and anti-fracture membranes allows the end user to take advantage of quicker curing times, allowing quicker time to flood testing and ultimately allows the tile installation to move forward in a timely fashion. Various types of waterproofing and anti-fracture membranes are available and include; troweled applied, liquid applied and sheet good types. The traditional asphaltic/bitumen based roofing type waterproofing membranes are omitted from this manual. However, it is important to note that if they were to be specified and used in a swimming pool or water feature, a topping concrete slab would need to be placed over this type of membrane. Direct bonding of tile or stone to these membrane types is not possible.

The most important factor in all types of waterproofing membranes is to closely follow the membrane manufacturer's installation recommendations. This will significantly reduce the possibility of job site problems and potential failures. Adhering to industry standards is also paramount to the success of the tile installation. Consideration should be given to membranes that carry plumbing and building code approval as well as being environmentally friendly (e.g. LATICRETE® 9235 Waterproofing Membrane or LATICRETE Hydro Ban™).

Many crack isolation and waterproofing membranes can be applied over concrete, mortar beds, exterior glue plywood (interior only) and cement backer board. Some waterproofing membranes serve as both waterproofing and anti-fracture membranes (e.g. LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban).

The installation of waterproofing is covered under ANSI A108.13, Installation of Load Bearing, Bonded, Waterproof Membranes for Thin-set Ceramic Tile and Dimension Stone, and crack isolation is covered under ANSI A108.17, Installation of Crack Isolation Membranes. The product standards for waterproofing can be found under ANSI A118.10 and the product standards for crack isolation membranes can be found under ANSI A118.12. Selection of membranes must take into account the conditions of a submerged application including exposure to pool water chemicals. Direct bond waterproofing membranes protect underlying leveling mortars and the concrete shell from saturation and prevent problems caused by moisture penetration such as moisture expansion, chemical attack (e.g. chloride ion deterioration of reinforcing steel), and efflorescence. LATICRETE products in this category include LATICRETE 9235 Waterproofing Membrane and LATICRETE Hydro Ban.

**External “Sandwich” Type Roofing Membrane** – In suspended, exterior roof swimming pool and water feature applications over occupied space, primary roofing membranes can be specified to be installed in between two concrete pours that serve as the platform or substructure of the water feature. These external type roofing membranes are also typically used when external or negative hydrostatic pressure is present to protect ceramic tile from delamination when pools are emptied. A concrete topping slab is required in order to protect the membrane from damage and to provide a suitable substrate to receive subsequent work. These types of primary roofing membranes can be bituminous asphaltic, neoprene, PVC or other durable bladder type material. Ceramic tile and stone cannot be bonded directly to these types of membranes.

**Sheet membranes** – Sheet membranes are typically made from chlorinated polyethylene, polyvinyl chloride, or other materials. Sheet membranes are made in a variety of lengths and widths to accommodate many different types of installations, with product performance that can vary depending on the manufacturer and product type. Generally, these sheet membranes have polyester or fiberglass mesh or scrim bonded to both sides of membrane sheet which allows the membrane to be bonded to the substrate, and tile or stone to bond directly to the sheet membrane. Check with the sheet membrane manufacturer for suitability in submerged installations.

Typically, a latex portland cement mortar (meeting ANSI A118.4) is used to bond the membrane to the substrate and to bond tile to the membrane. If time is a limiting factor, some membrane manufacturers allow the use of a rapid-setting thin-set to adhere the membrane to the substrate, which in turn allows the installation of tile to take place immediately without the loss of bond from the membrane to adhesive.

It is very important to consider the moisture vapor emission rate (MVER) and the alkalinity of the concrete slab prior to the installation of the products. A high MVER rate and/or high alkalinity can create adhesion problems and can even be destructive to the membrane and the overall installation. The sheet membrane manufacturer can provide information on the MVER and alkalinity limits of their products.

Sheet type membranes are pressed into contact with the substrate in an effort to eliminate air bubbles and voids between the membrane and substrate. Generally, this can be done using a 75- or 100 (34 – 45kg) pound sheet vinyl roller. It is important to note that the substrate or setting bed surface must meet the same substrate smoothness criteria required for direct bond tile applications. Basically, if the surface is not smooth and flat enough for tile, then it is not smooth and flat enough for a membrane.

### **Precautions and concerns with sheet type membranes are as follows:**

1. Trapping air below the membrane can cause air pockets to form and radically diminish the compressive strength of the membrane.
2. Overlapping and sealing the seams. The seams may require treatment with a suitable sealant or solvent. This process can be very involved and requires careful attention to detail and safety concerns.
3. Membrane thickness increases in the folds of inside and outside corners, seams and other transition areas. Additional flashing or skim coating treatment may be necessary to minimize the effects that this can have on the finish tile appearance.
4. High alkalinity and moisture can attack and adversely affect some sheet type membrane and the adhesive used to adhere the membrane to the substrate.
5. High MVER – generally in excess of 5 lbs/1000 ft<sup>2</sup>/24 hours (283 mg/s m<sup>2</sup>) can have a negative impact on the adhesion of sheet type membranes (follow membrane manufacturer’s guidelines for MVER).

**Peel and Stick Membranes** – Peel and stick membranes are very similar to sheet type membranes in performance. The major difference between the two styles is that the peel and stick type does not rely on a separately applied thin-set or adhesive to bond it to the substrate. These membranes are generally asphalt based with a reinforcing fabric on the tile bonding side of the membrane and a removable Kraft paper type backing which exposes a tacky surface once it is peeled away. The installation of peel and stick membranes begins with priming the substrate with the appropriate primer for the application. Some primers are latex based types and others can be epoxy based materials.

Once the primer is in place, the removable film is peeled from the back side of the membrane and rolled onto the primed substrate.

Check with the peel and stick membrane manufacturer for suitability in exterior or wet area installations.

**Precautions and concerns with peel and stick type membranes are as follows:**

1. Careful consideration must be taken where the seams overlap. Spreading the tile mortar over the seam can be tricky and care should be taken to avoid humps where the tile lays over seams.
2. These types of membranes have a tendency to soften when exposed to sunlight. Windows that face the sun and let more sunlight in could pose problems for peel and stick membranes.
3. Cleaning regimens also play a factor in whether peel and stick membranes should be used or not. Solvents typically have an adverse effect on this type of membrane. Consult the manufacturer for specific applications.
4. Use of these membrane types should be limited to pool decks and other intermittent wet areas. These membranes should not be used in submerged applications.

**Trowel Applied Membranes** – Trowel applied membranes come in various forms, including latex fortified cement based types, epoxy resin types and urethane types. Some of the trowel applied membranes include a reinforcing fabric used in corners, coves, and to tie into plumbing fixtures (including drains). After the typical pre-treatments are made to cracks and transition areas, the main application normally consists of keying the membrane into the substrate with the flat side of the trowel. This is immediately followed by combing the material in a singular direction, and then finally another pass with the flat side of trowel to smooth the surface. A few key elements are the notches in the trowel which act as a gauging device for the membrane. Most membranes require a certain thickness of product to ensure complete waterproofing coverage. As with all waterproofing membranes, the products should be applied at the continuous required mil thickness to ensure waterproofing integrity. The use of a wet film gauge is recommended to assure acceptable uniform thickness.

Check with the trowel applied membrane manufacturer for suitability in submerged installations.

**Latex Cement Based Membranes** – This membrane type is generally comprised of a liquid latex polymer that is mixed into a portland cement based powder. These products are generally very economical in cost and in ease of application. However, the physical characteristics of these types of products generally restrict their use in demanding submerged applications.

Check with the latex cement based membrane manufacturer for suitability in submerged installations.

**Epoxy Based Membranes** – Epoxy membranes are normally 3-component systems consisting of an epoxy hardener, epoxy resins, and a filler powder. These products are generally very chemical resistant and suitable for submerged applications. Some other advantages to this category type of waterproofing are as follows:

- Flood Testing Can Be Performed in 24 Hours at 70° F (21°C)
- Adheres to Metal, Such as Stainless Steel, as Well as Metal Plumbing Fixtures
- Flexible and Able to Adhere to Most Substrates
- Can Be Used as a Flashing Membrane to Tie Into Other Types of Membranes or Surfaces When Required (e.g. Pipe Penetrations, etc...)

An example of this category type of waterproofing membrane is LATAPOXY® 24hr HydroProofing™.



Figure 7.7 – Epoxy waterproofing membrane is applied at the pipe penetrations over the cured liquid applied waterproofing membrane to ensure a complete seal at the penetrations.

**Liquid Applied Membranes** – This category type offers an ideal solution to the demanding requirements of submerged tile and stone applications. In addition, to holding up under normal conditions in these applications, liquid applied waterproofing membrane types are the easiest to install and provide many features and benefits. These features and benefits include:

- Providing Both Waterproofing and Anti-Fracture Protection
- Meet ANSI A118.10 Standards for Waterproofing
- Meet ANSI A118.12 Standards for Crack Isolation
- Plumbing Code Approved (IAPMO and ICC)
- Green Building Approved for Low VOC Content (GREENGUARD® Certified)
- Thin – Load Bearing
- Shock Resistant
- Fully Compatible With the Entire Range of Ceramic Tile or Stone Installation Materials

Which are Recommended for Submerged Installations

- Fully Formable to Fit Into Tight Areas
- Can Be Shaped to Follow Any Substrate Contour
- Flood Testing Can Vary According to the Membrane Type and Generally Ranges From 2 Hours to 7 Days at 70° F (21° C)
- Some Liquid Applied Waterproofing Membranes (e.g. LATICRETE® Hydro Ban™) May Be Spray Applied With a Commercial, Airless Sprayer



Figure 7.8 – Liquid applied membrane applied to concrete substrate.



Figure 7.9 – Full scale view of liquid applied waterproofing membrane on a large scale pool project.

Examples of this category type are LATICRETE Hydro Ban and LATICRETE 9235 Waterproofing Membrane. LATICRETE Hydro Ban is a thin, load bearing waterproofing membrane that does not require the use of reinforcing fabric in most situations, and, LATICRETE 9235 Waterproofing Membrane which is a cold liquid applied, fabric reinforced membrane that is thin, load-bearing and completely compatible with LATICRETE latex thin-set mortars.

**Detailing Of Penetrations/Railings/Steps** – Detailing of penetrations through the waterproofing membrane and tile or stone finish is one of the most critical areas of a submerged application. Generally, a suitable

flexible sealant designed for these applications is a key component to treating penetrations. Railings, ladders, drains, gutters, filter inlets and outlets, lights, and receiver hooks are among the list of items that could potentially penetrate the waterproofing membrane in a submerged application. Silicones (e.g. LATICRETE® Latasil™) and urethane type sealants offer solid performance in these applications. In many cases, manufacturers of these products will also offer primers that aid the sealant's ability to remain adhered in these applications (e.g. LATICRETE 9118 Primer). Each penetration through the waterproofing membrane and finish is unique. Therefore, consult with the tile and stone installation materials manufacturer for their suggestions on compatible penetration treatments. See Section 10 for details ES-WP-300 for information on the treatment of pipe penetrations and ES-WP301 and WP-302 for information on the treatment of drain assemblies.



Figure 7.10 – Detail treatment of the pipe penetrations in this pool application. Liquid applied waterproofing membrane is double applied at the penetrations to ensure adequate reinforcement and protection. This pool is now ready for the full waterproofing treatment.

**Flood Testing** – Flood testing criterion can also vary according to the type of water feature application. Generally, a flood test is conducted after the waterproofing membrane and penetrations through the membrane are treated and all installed components reach full cure.

Although there are no known flood testing standards for pools and water features, ASTM D5957 “Standard Guide for Flood Testing Horizontal Waterproofing Installations” can serve as a basic guide for flood testing

submerged applications. Generally, flood tests are conducted for a period of 24 – 72 hours and must be continuously monitored during the flood test period. Please note that accumulation of rain water, or water from any other outside source, may render the results of the flood test inaccurate.

Most latex fortified portland cement based installation systems (mortar bed, thin set mortar and grout, flexible sealant) require a minimum 14 day cure at 70°F (21°C) after the final grouting period prior to the initiation of the flood test. If an epoxy grout is used, the minimum cure can be reduced to a 10 day cure at 70° F (21°C) after the final grouting period.

As a rule of thumb, water is placed into the water feature at a rate of 1' (25 mm) per hour. Flood tests are generally conducted for 24 – 72 hours. All piping and drains will need to be plugged and isolated to eliminate the potential for the plumbing as a cause of water loss. If any measurable water loss is observed, the following process will be required:

- The Water Feature Will Need to be Drained at the Same Rate Used to Fill the Tank (2' [600 mm] per 24 Hours)
- Allow the Water Feature to Dry
- Inspect For Leaks
- Repair the Leaks
- Allow the Installed Products to Reach Full Cure
- Repeat Flood Test Procedure Until Successful



Figure 7.11 – Waterproofed pool tank is curing and awaiting a flood test. Curing term of waterproofing membranes can vary by manufacturer. Consult with waterproofing manufacturer for detailed information on cure rates and flood testing processes.

For more information on flood testing procedures, please refer to TDS 169 “Flood Testing Procedures” available at [www.laticrete.com](http://www.laticrete.com).



Figure 7.12 – Pool tank is filled with water during the flood test stage. Upon successful flood testing, the pool will be drained, dried and ready to be tiled (as a side note, notice the tenting that is protecting the water feature from the elements during the installation and curing process).

### 7.4 Tile Setting Mortars

#### Types of Adhesives

- Redispersible Polymer Fortified Cement Mortar (Mixed With Water)
- Liquid Latex Fortified Cement Mortar (Latex in Lieu of Water)
- Modified Emulsion Epoxy Adhesives (Cement, Water, Epoxy Resins)
- Epoxy Resin Adhesives (100% Epoxy)

#### Redispersible Polymer Fortified Cement Mortar

– This type of cement based adhesive mortar is available only as a manufactured proprietary product. There are a wide variety of these types of adhesive mortar products on the market. These materials typically are mixed with potable water; however, many redispersible polymer mortars can be mixed with liquid latex additive to improve performance (see latex fortified cement mortar). For example, LATICRETE 220 Marble & Granite Mortar can be mixed with either water for good performance or with LATICRETE 3701 Mortar Admix for improved performance. In fact, for submerged applications, LATICRETE 220 Marble and Granite Mortar must be mixed with LATICRETE 3701 Mortar Admix. These adhesive mortars differ mainly by the type and quantity of polymeric content. In addition, premium high strength redispersible polymer fortified thin bed mortars are available and suitable for use in submerged applications. For example, LATICRETE 254 Platinum is ideal for these areas. Performance characteristics

of LATICRETE 254 Platinum comply with both ANSI 118.4 and 118.11 standards. Please visit [www.laticrete.com](http://www.laticrete.com) for more information on each LATICRETE product including mixing instructions.

#### Types of Redispersible (Polymeric) Powders

- Modified Cellulose
- Polyvinyl Acetate Powder (PVA)
- Ethylene Vinyl Acetate Copolymer Powder (EVA)
- Polyacrylate Powder

Many of the redispersible powder cement mortars available on the market are not recommended for submerged applications for a variety of reasons. Some of the polymers used, such as PVA, are water soluble and can re-emulsify after prolonged contact with moisture, causing polymer migration and resulting in staining, loss of flexibility and strength. Most products that conform to ANSI 118.1 adhesive standards contain only water retentive additives such as cellulose, which provide water retention for prolonged open time and improvement of working properties, but ultimately provides minimal improvement of strength or flexibility when compared to traditional cement mortar.

EVA modified mortars that conform to ANSI A118.4 standards may require special formulation and vary in quantity of the polymeric powder in order to have the characteristics and physical properties required for an industrial application. Some products which employ EVA polymers do not have good resistance to prolonged moisture exposure and are not recommended for submerged applications. While dry redispersible polymer fortified adhesives are economical and easy to use, it is recommended to verify suitability for use in submerged applications with the manufacturer, and to request or conduct independent testing to verify the manufacturer's specified performance.

**Liquid Latex Fortified Cement Mortar** – There are a wide variety of proprietary liquid additives that can be used with both generic cement (and sand), or with proprietary cement mortar powders, including the previous category of redispersible polymer fortified mortars, to prepare an adhesive for submerged tile installations. As with redispersible polymer products, the liquid additives differ mainly by the type and quantity of polymeric content. Therefore suitability and performance characteristics for water feature applications must be verified. LATICRETE® 317 fortified with LATICRETE 3701 Mortar Admix or LATICRETE 211 Powder fortified with LATICRETE 4237 Latex Additive are examples of these types of products. Also, LATICRETE 3701 Fortified Mortar Bed or LATICRETE 226 Thick Bed Mortar gauged with the 3701 Mortar Admix fall into this category.

In addition, LATICRETE 1500 Sanded Grout gauged with LATICRETE 4237 Latex Additive can be used for the one-step method of setting and grouting paper or plastic face mounted mosaic tiles in accords with ANSI A108.14 – Installation of Paper Face Glass Mosaic Tile. Traditional “spacing” mix (typically dry cement powder and grout) can create hollow, drummy areas in the tile installation. It would be better to use the LATICRETE one step method as detailed in LATICRETE TDS 145 “Installation of Glass Mosaic Tile” which is available at [www.laticrete.com](http://www.laticrete.com).

### Types of Liquid Additives

- Vinyl Acetate Dispersions
- Acrylic Dispersions
- Styrene-Butadiene Rubber

Liquid polymer modified cement mortars are also a good choice for submerged applications. However, as with redispersible polymer powder mortars, not all liquid additives mixed with cement based powders are suitable. Both, the type and quantity of latex, as well as other proprietary chemicals,

will determine if a liquid additive is suitable for these applications. A common and highly generalized misconception is that either acrylic polymers or styrene butadiene rubber are superior to one another. This is not true. Both polymers can be formulated to have high adhesive strength, and be equally flexible. Superior performance is achieved through the formulation of these two materials. It is recommended to verify the suitability of a latex additive for pool applications, and conduct or request independent testing to verify the manufacturer’s specified performance.



Figure 7.13 – Installation of mosaic tile with liquid latex fortified portland cement thin-set mortar.



Figure 7.14 – Installation of glazed porcelain tile with liquid latex fortified portland cement thin-set mortar over a liquid applied waterproofing membrane.

**Epoxy Resin Adhesives** – This type of adhesive is typically a three component system, consisting of epoxy resin and hardener liquids, and some filler type material, such as silica sand. Epoxy adhesives which conform to ANSI A118.3 contain 100% solids epoxy. LATAPOXY® 300 Adhesive is a high strength, 100% solids epoxy that works well for submerged applications. These adhesive mortar types are required for use when tiling directly to steel or fiberglass pool tanks. Refer to Section 9 – Specifications and Section 10 – Detail Drawings for ES-P602 and ES-P603 for more information.



Figure 7.15 – Mosaic tiled stainless steel pool tank. Only an epoxy adhesive can be used to install tile directly to steel tanks. (Photo courtesy of Bradford Products, LLC).

In addition, while the grouting materials will take the brunt of any potential chemical attack, some chemicals and strong cleaners can work their way through the tile and even attack the tile or stone adhesive over an extended period of time. Therefore, it is important to consider this potential problem exists. The use of LATAPOXY 300 Adhesive can ensure the long term performance of an installed water vessel that may be exposed to chemical attack.

More economical versions of epoxy adhesives, known as modified epoxy emulsions, are also available in the market. Modified epoxy emulsions which conform to ANSI A118.8 consist of special epoxy resins and hardeners which are emulsified in water, and then mixed with cement mortar. This type of epoxy adhesive combines the economy of cement based mortars and the high strength of epoxy adhesives. An example of this type of material is LATAPOXY 210 Adhesive. The advantages of epoxy adhesives are that they have exceptionally high adhesive strength (shear bond and tensile strength) to most any type of substrate material suitable for a tile installation, and more recent formulations have good flexibility to accommodate differential movement. While modified epoxy emulsions typically have lower strengths than 100% solid epoxy resin adhesives, they benefit from the higher temperature resistance and economy of portland cement adhesives.

The primary disadvantages are that epoxy adhesives can be significantly more expensive, and the working qualities in cold or warm temperatures can limit production and further

escalate costs. Sag resistance and temperature resistance are secondary limitations, depending on the requirements for the installation. Epoxy adhesives can bond to virtually any suitable substrate which is structurally sound, so they are often recommended as a supplementary adhesive to more economical cement based systems when the tile or pavers must be adhered to unusual substrates such as steel or fiberglass pool tanks.

### 7.5 Grout

**Importance** – As is the case in any tile or stone installation, the grout is the most visible and most scrutinized part of the installation system. In submerged applications, the performance of the grout is critical to the long term durability of the installation system. Therefore, the selection and use of the appropriate grout is a key design element. Grout in submerged applications can be exposed to chemicals, pH imbalance, varying water mineral and metal content levels, moisture expansion and other factors that could affect the integrity of traditional cement based grouts. In addition, for grout exposed above the water line, consideration for UV resistance must also be made. Therefore, it is important to specify a grout that can withstand all of the potential issues that can develop (e.g. LATICRETE SpectraLOCK PRO® Grout®). In many commercial and public water features, pH pool water imbalance can lead to degradation of cement grouts. In addition, calcium extraction of the portland cement component of traditional cement based grouts can occur when prolonged mineral imbalance occurs (see Section 11 for further information). Epoxy grouting products are resistant and immune to these issues. Epoxy grouts are also more resistant to harsh cleaners and chemicals that may be used to clean and maintain institutional and therapeutic pools which are emptied, cleaned on a frequent basis and then filled again.

**Latex Cement Grout** – Similar to the same adhesive mortar category, latex-fortified grout is a combination of either a proprietary pre-mixed sand-cement (and pigment) powder, or site mixed cement-sand grout powder with a ratio of approximately 1:2 by volume for joint widths to 1/2" (12 mm), gauged with a liquid latex or acrylic polymer additive. As with polymer modified grouts, the liquid latex or acrylic additive must be formulated for wet areas. An example of this product type is LATICRETE® PermaColor™ Grout<sup>^</sup>. Cement based products also have limited chemical resistance and are generally only used where no exposure to chemical attack occurs. If a cement based grout is selected for a water feature, careful detail to the maintenance regimen is a must. At times the extra cost associated with additional maintenance of a cement-based grouted water feature can be offset with the selection and use of an epoxy grout that will greatly reduce the maintenance required.

**Epoxy Grout** – ANSI A118.3 compliant grouts are chemical resistant, water cleanable grouting epoxies. These grouts are epoxy compositions; essentially a 100% solids system that are supplied in two or more parts to be mixed immediately before use as a joint filling grout for ceramic tile, and that is partially emulsified by water, after mixing, in order to expedite cleaning from tile surfaces during application before the epoxy hardens. Both LATICRETE SpectraLOCK® PRO Grout<sup>†</sup> and LATAPOXY® SP-100 comply with ANSI A118.3. These types of grouts are the ideal choice for water feature applications. Epoxy grouts offer both lower water absorption rates and improved chemical resistance when compared to traditional cement based grouts, and epoxy grouts are immune to the typical attack that traditional cement based grouts can face.

### 7.6 Sealant

**Importance** – Sealants are typically used as a joint filler material only in movement joints, changes in plane, between dissimilar materials in an application (such as steel gutters and the tile installation), and where a high degree of adhesion and resistance to differential movement and tensile or compressive stress is required. Movement joints are intended for relief of significant stress build-up that may be transmitted over a larger area, and sealants must have the characteristics to resist much greater elongation or compression than more rigid materials like cement. These materials also adhere to dissimilar materials such as steel gutters, metal window frames, penetrations, and drain covers to not only maintain a water barrier where a more rigid material may fail, but also to accommodate the significantly different thermal movement characteristics of some dissimilar materials such as aluminum and steel.

Movement joints that are in the field of the installation must allow for the anticipated movement, while maintaining a waterproof barrier. In these cases, the waterproofing membrane (e.g. LATICRETE Hydro Ban™ or LATICRETE 9235 Waterproofing Membrane) is “looped” down into the movement joint to enable the joint to move freely while the waterproofing membrane continues to function (see figures 7.16, 7.17, 7.18 and 7.19). A liberal amount of waterproofing liquid is applied on both sides of the expansion joint (at least 4" to 6" [100 mm to 150 mm]) and into the joint opening. While the liquid is wet and tacky, the waterproofing reinforcing fabric is folded and placed into the movement joint opening and folded over onto the side of the concrete or mortar bed. Immediately, saturate the waterproofing reinforcing fabric with additional waterproofing membrane liquid. The fabric treatment must have enough “slack” to go down deep enough into the expansion joint to accommodate the anticipated joint movement. After several hours, another coat

of waterproofing liquid is applied to this treatment to ensure a complete seal. Next, the full waterproofing membrane treatment with fabric is placed over the pre-treated expansion joint areas following the same looping profile. Therefore, the expansion joints have a “double treatment of looped fabric”. These joints must be honored and must come up through to tile or stone finish and treated with backer rod and a suitable flexible sealant. (See Sections 4 and 10 for more information on the use of flexible sealants in expansion joints).

Always check with the manufacturer of the sealant and primer for acceptability in submerged applications.

**Backup Strip (Backer Rod)** – The use of the rounded backup strip in movement joints is necessary to regulate the depth of the sealant for proper width/depth ratio and to prevent three sided adhesion. Typical sealant joint depth is  $1/2$  the width of the joint. The backer rod should be set into the joint to achieve this ratio. Sealants perform optimally when adhesion occurs only at the joint flanks (two-sided bond). The backer rod also helps to transmit the tooling force of the sealant to achieve bond to the tile edges. Polyethylene bond breaker tape can be used for thin bed applications where backer rod cannot be utilized. The polyethylene bond breaker tape also helps to prevent three-sided bond.

Typical back up strip materials are flexible and compressible and fall into one of the following categories:

- Closed Cell Foam Polyethylene (Best For Submerged and Wet Area Applications)
- Butyl Rubber
- Open Cell Polyurethane
- Closed Cell Polyurethane

**Silicone** – Single component, mildew resistant 100% silicone sealants are suitable for use in submerged water feature applications. An example of this type of sealant is LATICRETE Latasil™.

**These sealants usually fall into the following category:**

ASTM C90 which designates sealants according to Type, Grade, Class and Use

- Type S – Single component
- Grade NS – Non Sag
- Class 25 – Sealant can withstand an increase and decrease of +/- 25% of joint width
- Uses M and G – Sealant will remain adhered to mortar (M) and glass (G)

Silicone sealants can also be supplied with a primer that will improve the adhesion of the sealant to the joint flanks. An example of this type of primer is LATICRETE® 9118 Primer. The two most common ways to specify sealants are:

1. List the manufacturer and brand name(s) of the acceptable products.
2. Specify the characteristics by description and / or by reference to standards.

**Urethane or Polyurethane** – Urethane based sealants that do not employ the use of solvent based primers are also suitable for use in submerged applications provided that they fall into the same ASTM C90 categories as listed under silicone sealants.

**Acrylic** – Typically, acrylic sealants are used for interior non-wet areas. Therefore, the physical properties of acrylic sealants/caulks preclude their use in water features and submerged applications.



Figure 7.16 – Waterproofing liquid is applied onto the sides and into the expansion joints.

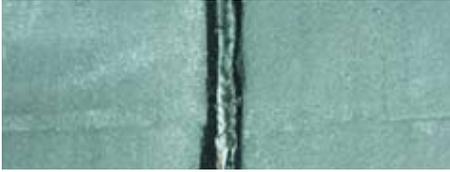


Figure 7.17 – Waterproofing reinforcing fabric is then folded and placed into the movement joint and folded onto the concrete/mortar bed. Additional waterproofing liquid is applied over the treatment. A third coat of liquid is then applied to seal off the entire treatment.

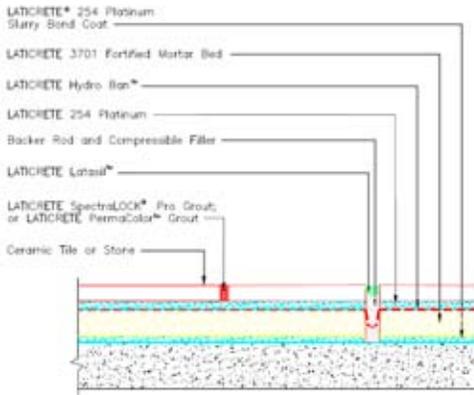


Figure 7.18 – Profile view detail depicting the waterproofing membrane looped into the movement joint.



Figure 7.19 – View of completed swimming pool. Note the movement joint at the changes of plane on the floor of the pool and the other field movement joints on the walls and floors.

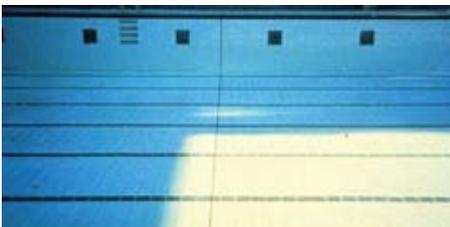


Figure 7.20 – View of completed swimming pool. Note the movement joint running continuously through the width of the swimming pool both at the walls and floors. A properly placed water stop in the concrete shell is a critical design element to ensure system functionality.

### 7.7 Post Installation

**Cure Times** – Typically the following cure times should be observed after the final grouting period in swimming pools and water features: Observe a minimum cure time of 14 days at 70°F (21°C) for latex fortified portland cement grout installations to prevent latex migration, and 10 days at 70°F (21°C) for epoxy grouts to reach maximum chemical resistance prior to filling the water feature. Cure time can be significantly increased or decreased due to temperature and humidity.

**Inspection** – A swimming pool or water feature should be inspected prior to filling and then again prior to use for any non-conformities. Final grouting and sealant touch-ups should be performed during this phase. Critical areas include the sealant treatment at all penetrations and drains. The sealant should be in place and cured prior to filling the water feature to prevent any water intrusion behind the tiled system. Cleaning should also take place prior to filling the water feature to prevent any dirt, cleaners and ‘dirty’ water from entering the filtration system.

Before filling of the pool, and its subsequent provisional acceptance at substantial completion, the tile installation shall be visually inspected and sounded in the presence of the Architects and/or the Owner’s representative to verify adhesion of the tile to its substrate as well as its over-all compliance with the specific requirements.

Any and all tile work found to be loose, improperly adhered, out of plane, misaligned or otherwise non-conforming shall be removed and replaced.

**Protection of Waterproofing Membranes** – Waterproofing membranes must be allowed to fully cure at the required temperatures as stated by the manufacturer. The membranes must be protected from UV exposure beyond the stated time period and from the elements (including rain, wind and direct sunlight). Tenting and shading the work areas for the installation and cure periods is critical to

ensuring the long-term performance of the installation system.

**Protection of Completed Tile and Grout Installation** – The completed tile and grout installation must also be protected from construction traffic, debris from other trades and the elements until all the installation components reach their full cure. In many cases, latex fortified portland cement mortars and grouts require a minimum 14 day cure at 70°F (21°C) after the final grouting period. Epoxy adhesives and grouts require a minimum 10 day cure at 70°F (21°C) after the final grouting period. If the completed installation is exposed to the elements, it should be tented and shaded during this time frame to ensure a proper cure.

### 7.8 Typical Renders and Details for Swimming Pool and Water Features

**Surface Preparation** – LATICRETE® 3701 Fortified Mortar Bed; or, LATICRETE 3701 Mortar Admix mixed with LATICRETE 226 Thick Bed Mortar

LATICRETE® 3701 Fortified Mortar Bed is a polymer fortified blend of carefully selected polymers, portland cement and graded aggregates. LATICRETE 3701 Fortified Mortar Bed does not require the use of latex admix. LATICRETE 3701 Fortified Mortar Bed is designed to mix with water only and provides exceptional working properties and exceptional performance characteristics.

LATICRETE 3701 Mortar Admix is a specially designed latex additive for use in cement leveling mortars and mortar beds. LATICRETE 3701 Mortar Admix is used in place of water to improve the uniformity, workability and physical properties of any mortar bed installation. Economical and versatile, LATICRETE 3701 Mortar Admix can be used for patching, leveling and fortifying mortar beds. A mortar bed mixed with LATICRETE 3701 Mortar Admix is thermal shock, chemical and frost resistant.

LATICRETE 226 Thick Bed Mortar is a factory prepared blend of high strength portland

cement and graded aggregates for leveling or thick bed applications from 1/8" to 2" (3 mm to 50 mm) thick. Use with LATICRETE 3701 Mortar Admix for high strength leveling and concrete patches.

**Waterproofing Membrane – LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban™**

LATICRETE 9235 Waterproofing Membrane is a thin, flexible, load bearing, liquid applied, fabric reinforced waterproofing membranes. LATICRETE Hydro Ban™ is a thin, flexible, load bearing, liquid applied waterproofing membrane that does not require the use of fabric in most situations. Both LATICRETE 9235 Waterproofing Membrane and LATICRETE Hydro Ban help minimize efflorescence and deterioration of underlying assembly components by eliminating damaging water infiltration. Both membranes are applied with a paint roller or brush, are non-flammable and have no significant odor. Both LATICRETE 9235 Waterproofing Membrane and LATICRETE Hydro Ban are IAPMO and ICC approved as shower pan liners and carry an “Extra Heavy” service rating per ASTM C627(TCNA).

Consult LATICRETE Product data sheets for full installation instructions. Consult the LATICRETE website at [www.laticrete.com](http://www.laticrete.com) for latest information.

## Section 7 – Pools/Fountain/Spa Tile Installation

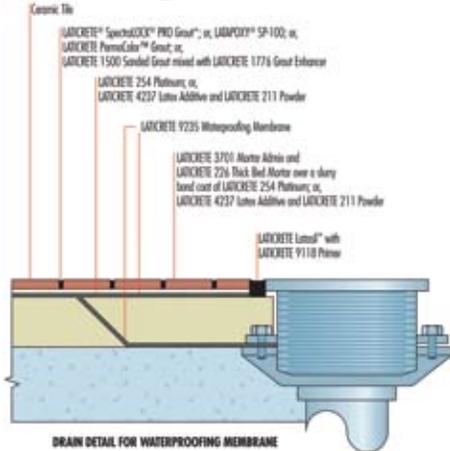
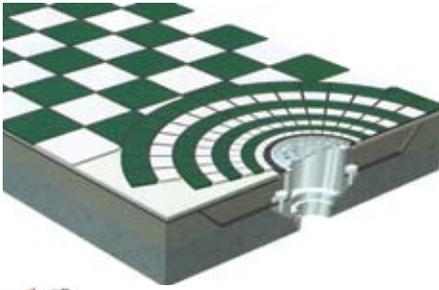


Figure 7.21 – Thick Bed Floor / Waterproofing System with drain detailing.

### Stain Resistant Grout – LATICRETE® SpectraLOCK® PRO Grout<sup>†</sup>

LATICRETE® SpectraLOCK® PRO Grout<sup>†</sup> is a chemical and stain-resistant grout for ceramic tile and stone. LATICRETE SpectraLOCK PRO Grout is ideally suited to eliminate deterioration caused by pool water chemicals and and poor water chemistry maintenance. LATICRETE SpectraLOCK PRO Grout provides for easy cleanability and low maintenance while maintaining extremely long lasting performance.

### Latex Fortified Grout—LATICRETE PermaColor<sup>™</sup> Grout<sup>^</sup>

LATICRETE PermaColor Grout<sup>^</sup> is an ideal choice for submerged installations where proper pool water chemistry is maintained continually. LATICRETE PermaColor Grout by UV light and rain, and provides a hard, durable grout joint.

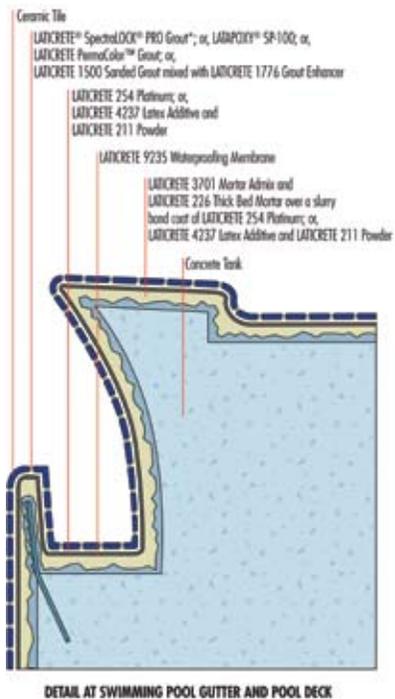
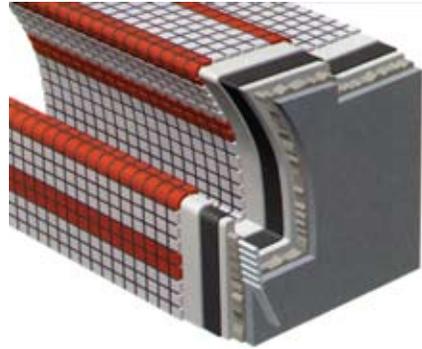



Figure 7.22 – Tiled pool gooseneck gutter assembly with adhesive mortars.

### 7.9 Warranty

Laticrete International, Inc. offers the most comprehensive systems warranty in the tile and stone installation industry. Please refer to the LATICRETE 25 Year System Warranty (DS 025.0) in Section 12.1 for more information. Please visit [www.laticrete.com](http://www.laticrete.com) for the most recent copies of these documents.

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).



# Section 8 – Pool Deck and Natatorium Tile Installations



### 8.1 Tile Installation Materials Performance and Selection Criteria

The information contained in Section 7 is applicable to the leveling mortars, floating mortars, adhesive mortars, waterproofing/anti-fracture membranes, grouting materials and sealant performance and selection criteria required for pool decks. Please refer to Section 7 for this information. Some natatoriums may include spas or steam rooms. For detailed information on how to design and install tile in these applications, refer to the Tiled Steam Room and Steam Shower Technical Design Manual published by LATICRETE International, Inc. and is available at [www.laticrete.com](http://www.laticrete.com)

### 8.2 Methods of Installation

The same methods of installation outlined in Section 7 apply to pool deck tile installations as well. Tile and stone can be installed by utilizing the thin bed, medium bed and thick bed methods on pool decks. It is important to note that unbonded wire-reinforced thick bed mortars can be used on pool decks. The installation of unbonded thick bed mortars in areas not subjected to freeze/thaw conditions may be suitable for exterior use when appropriate precautions are taken, including proper expansion joint placement, proper slope to drain of 1/4" per ft (6 mm per 300 mm) and a waterproofing membrane.<sup>1</sup> Unbonded thick bed mortar bed assemblies cannot be used within the water feature tank itself. Refer to Section 7 for in depth information on the following application method types:

- Thin Bed Method
- Medium Bed Method
- Thick Bed (Bonded methods)

**Unbonded Type (Pool Decks and other Non-Submerged Applications)** – Unbonded floor mortar beds can be used on pool decks and other areas around water features that are not subject to continuous underwater submersion.

In the unbonded mortar bed type, a cleavage membrane is placed over the substrate. The cleavage membrane can take the form of 15 lb builders felt, 6 mil thick polyethylene sheeting or a waterproofing membrane. Half of the mortar bed thickness, consisting of LATICRETE® 3701 Fortified Mortar Bed or LATICRETE 226 Thick Bed Mortar mixed with LATICRETE 3701 Mortar Admix, is placed over the cleavage membrane. Next, a galvanized, welded wire mesh complying with ANSI A108.02 3.7 is placed as close to the middle of the mortar bed as possible. This will allow the mortar bed to achieve maximum tensile strength resistance. The rest of the mortar bed is then placed over the wire. At this point, the mortar bed is compacted, screeded, leveled, and pitched as required.



Figure 8.1 – Example of a non-bonded, wire reinforced mortar bed. Wire mesh is placed in the middle of the mortar bed and lapped together to ensure continuity.

Once the mortar bed is properly installed, it can either be allowed to cure, or the tiles/pavers can be installed (wet set) into the fresh mortar bed.

If a waterproofing or anti-fracture membrane is required, the mortar bed should be allowed to harden for at least 48 hours at 70°F (21°C) or until sufficiently dry. Refer to the specific membrane data sheet for more information on acceptable moisture levels. If the unbonded mortar bed is being installed in an exterior application, the mortar bed must be protected from rain and moisture, allowing the mortar bed to dry sufficiently prior to the application of a waterproofing and/or anti-fracture membrane. Cooler temperatures require longer cure time prior to installation of the waterproofing or anti-fracture membrane. Protection from wind

and direct sunlight is also good practice that will lead to help promote curing of the mortar bed. Consult product data sheet for specific guidelines.

If the option to bond the tiles to the fresh mortar bed is desired, a slurry bond coat is required. A trowel applied slurry bond coat consisting of LATICRETE 254 Platinum or LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive slurry is preferred over the conventional dusting with dry portland cement and wetting with water method. The preferred method provides complete contact with the bonding slurry and reduces the chances of hollow and drummy sounding areas.



Figure 8.2 – Tile mechanic screeding an unbonded mortar bed.

The tile is then placed into the wet slurry bond coat and tapped into place and leveled with adjacent tile.

Once the tiles are installed, they should be allowed to cure for a minimum of 24 hours at 70°F (21°C) prior to grouting. The use of a high performance epoxy based grout (e.g. LATICRETE SpectraLOCK® PRO Grout† or LATAPOXY® SP-100) is recommended for interior pool and natatorium decks.

LATICRETE Plaza and Deck System is recommended for installations of tile or stone on exterior pool decks located over occupied space. LATICRETE Plaza and Deck System incorporates LATICRETE Drain Mat placed over a primary roofing type membrane on a properly pre-pitched surface. A mortar bed consisting of LATICRETE 3701 Fortified Mortar Bed; or, LATICRETE 226 Thick Bed Mortar gauged with LATICRETE 3701 Mortar Admix (minimum 2"

[50mm] thick) reinforced with an ANSI A108.02 3.7 compliant wire mesh, is placed onto the LATICRETE Drain Mat and allowed to dry. The installation must be protected from exposure to water at this point to allow the installation of the waterproofing membrane onto the mortar bed. The mortar bed must be allowed to dry sufficiently prior to installation of the waterproofing membrane (e.g. LATICRETE Hydro Ban or LATICRETE 9235 Waterproofing Membrane). Check the installation instructions or product data sheets of LATICRETE Hydro Ban or LATICRETE 9235 Waterproofing Membrane for allowable moisture vapor emission rate levels. Once the mortar bed is dry the installation of the waterproofing membrane can commence. Once the membrane is cured, tile or stone can be installed using LATICRETE 254 Platinum and grouted using LATICRETE PermaColor Grout.

### 8.3 Waterproofing/Anti-Fracture Membranes

Many anti-fracture and waterproofing membranes can be applied over concrete, mortar beds, and cement backer board. Some waterproofing membranes serve as both waterproofing and anti-fracture membranes (e.g. LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban™) and are ideal for use on decks, locker rooms, showers, steam rooms and other areas commonly found in natatoriums or recreational water facilities.

The installation of waterproofing is covered under ANSI A108.13, Installation of Load Bearing, Bonded, Waterproof Membranes for Thin-set Ceramic Tile and Dimension Stone, and crack isolation is covered under ANSI A108.17, Installation of Crack Isolation Membranes. The product standards for waterproofing can be found under ANSI A118.10 and the product standards for crack isolation membranes can be found under ANSI A118.12.

Membranes that are used on areas outside of the pool tank should also meet the same performance criteria outlined in Section 7 for

submerged applications. Pool decks and other natatorium areas will be subjected to many if not all of the same conditions that the submerged areas are exposed to. In many cases, the waterproofing/anti-fracture membrane can be carried from within the water feature tank out onto the deck areas and then carried up the walls that surround the decks to create a totally waterproof application. Since the membranes must accommodate various transitions, thin load bearing liquid applied types are excellent choices for these applications (e.g. LATICRETE® 9235 Waterproofing Membrane or LATICRETE Hydro Ban™).

### 8.4 Tile Setting Mortars

Pool decks are exposed to unique factors not typically found in the submerged areas. The adhesive mortars must also be able to deal with potentially greater expansive forces than are typically found within the submerged areas. Therefore, the adhesive mortars and grouting materials must be able to withstand these demands in addition to providing all of the performance properties of the materials used in the submerged areas.

**Redispersible Polymer Fortified Cement Mortar and Liquid Latex Fortified Cement Mortar** – The use of high performance redispersible polymer fortified cement mortar and liquid latex fortified cement mortar designed for use in submerged applications and freeze thaw applications are the tile adhesive mortars of choice for these applications.

LATICRETE 254 Platinum mixed with potable water or LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive are ideal choices for these applications. These products are formulated to have high adhesive strength while providing the flexibility, freeze/thaw resistance and other characteristics required of adhesive mortars used for ceramic tile and stone installations in natatoriums, and exterior and interior pool deck applications.

**Epoxy Resin Adhesives** – LATAPOXY® 300 Adhesive is also an ideal product for deck areas. LATAPOXY 300 Adhesive can not only withstand chemical attack, but can also provide the desired level of adhesion and strength to tiles and stones that cannot be installed with polymer fortified or liquid latex fortified mortars. Examples of these finish types can include moisture sensitive stone, resin backed tile and stone, and resin agglomerate stone types to mention a few. The tile or stone finish type should be suitable for the area of use.

### 8.5 Grout

**Importance** – As is the case in any tile or stones installation, the grout is the most visible and most scrutinized part of the installation system. The grout in pool deck and natatorium areas is subject to many of the same elements and factors that are found in submerged applications. In addition, the grout must also be able to remain colorfast and maintain its performance integrity when subjected to ultra violet rays and the thermal forces found in external applications (e.g. freeze/thaw and thermal shock resistance).

**Epoxy Grout** – Both LATICRETE SpectraLOCK® PRO Grout† and LATAPOXY SP-100 are ideal choices for interior pool decks, natatorium areas, showers, steam rooms, and bathrooms. These grouts offer both lower water absorption rates and improved chemical resistance when compared to traditional cement based grouts. Epoxy grouts are immune to the typical attack that traditional cement based grouts can face. Therefore, the life cycle cost for these materials is much lower than traditional latex cement based grouts which may require periodic re-grouting due to erosion caused by pH and mineral imbalances, and different forms of chemical attack.

**Polymer Fortified and Latex Cement Grout** – LATICRETE PermaColor™ Grout is an excellent product that is found in this family type. It is important to note that cement based grout

## Section 8 – Pools Deck and Natatorium Tile Installations

products have limited chemical resistance and are generally only used where no exposure to chemical attack occurs. If a cement based grout is selected for a pool deck or other areas found in natatoriums, careful detail to the maintenance regimen is a must. At times the extra cost associated with additional maintenance of a cement based grout used in a water feature can be offset with the selection and use of an epoxy grout that will greatly reduce the maintenance required.

### 8.6 Sealants

Sealants used on pool decks and in natatorium areas are subjected to a host of movement related issues. Refer to Section 7 for more information. In addition, to the exposure outlined in section 7, sealants on pool decks must also be able to withstand movement associated with thermal stresses (e.g. freeze/thaw and thermal shock). Sealants must also hold up to ultra violet exposure while maintaining flexibility and retaining its performance properties.

LATICRETE Latasil™ along with LATICRETE 9118 Primer (if required) is an ideal choice for these applications. A suitable backer rod or bond breaker tape should be used along with the sealant. Section 7 contains much more information on how to install the sealant in conjunction with the waterproofing/anti-fracture membrane and the finish materials.


### 8.7 Typical Renders and Details for Swimming Pool and Natatorium Deck Applications

**Adhesive Mortar – LATICRETE® 254 Platinum**  
LATICRETE 254 Platinum provides unsurpassed strength, far exceeding all ANSI A118.4 requirements. The performance of LATICRETE 254 Platinum is backed by the LATICRETE System Warranty, so there is no need to worry about tile or stone failure, even in the most demanding projects. LATICRETE 254 Platinum is ideal for interior, exterior and submerged applications on all

suitable substrates. In addition, LATICRETE 254 Platinum provides easy workability and exceptional bond strength when installing difficult to bond porcelain or glass tile.

When mixed with LATICRETE 221 Powder, LATICRETE 4237 Latex Additive this latex, thin-bed mortar provides uniform, flexible and high strength performance. Ideal for bonding ceramic tile, porcelain tile, thin brick, and stone and is chemical, thermal shock and freeze/thaw resistant. LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive can be used over concrete, concrete masonry units, brick, cement backer board, and gypsum wallboard.

LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive makes an excellent slurry bond coat for use with thick bed mortars, and, is non-corrosive, non-hazardous and non-flammable.

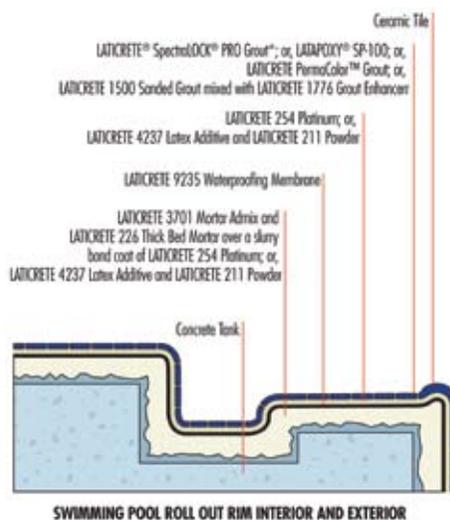

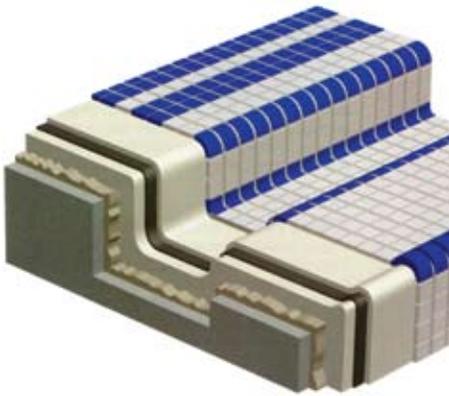


Figure 8.3 – Thick Bed Floor / Waterproofing System with drain detailing.

**Epoxy Thin-Bed System**

For areas where the substrate is properly pitched, tile, stone or brick are economically installed using LATAPOXY® 300 Adhesive and grouted with LATICRETE® SpectraLOCK® PRO Grout\* or LATICRETE PermaColor™ Grout\*. To prevent damage caused by water infiltration use LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban™.


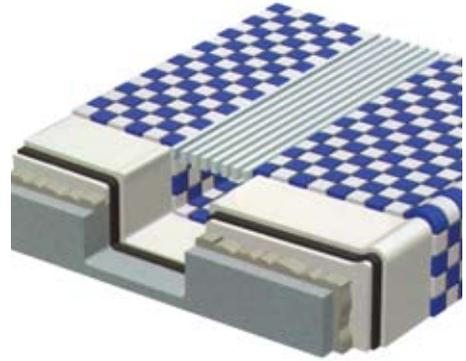



Figure 8.4 – Tiled pool deck trench drain and pool tank transition.

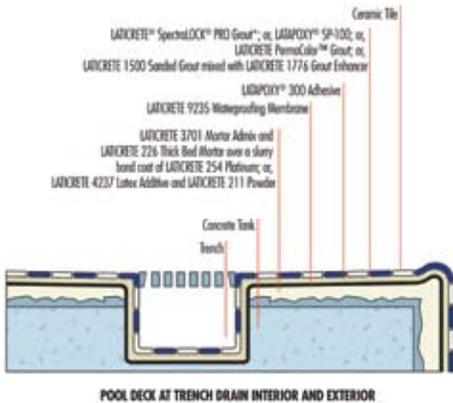

<sup>1</sup>TCA Handbook for Ceramic Tile Installation 45th edition. Tile Council of North America, Inc. Anderson, SC, 2007, page 19.

\*United States Invention Patent No.: 6881768 (and other Patents).

# Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

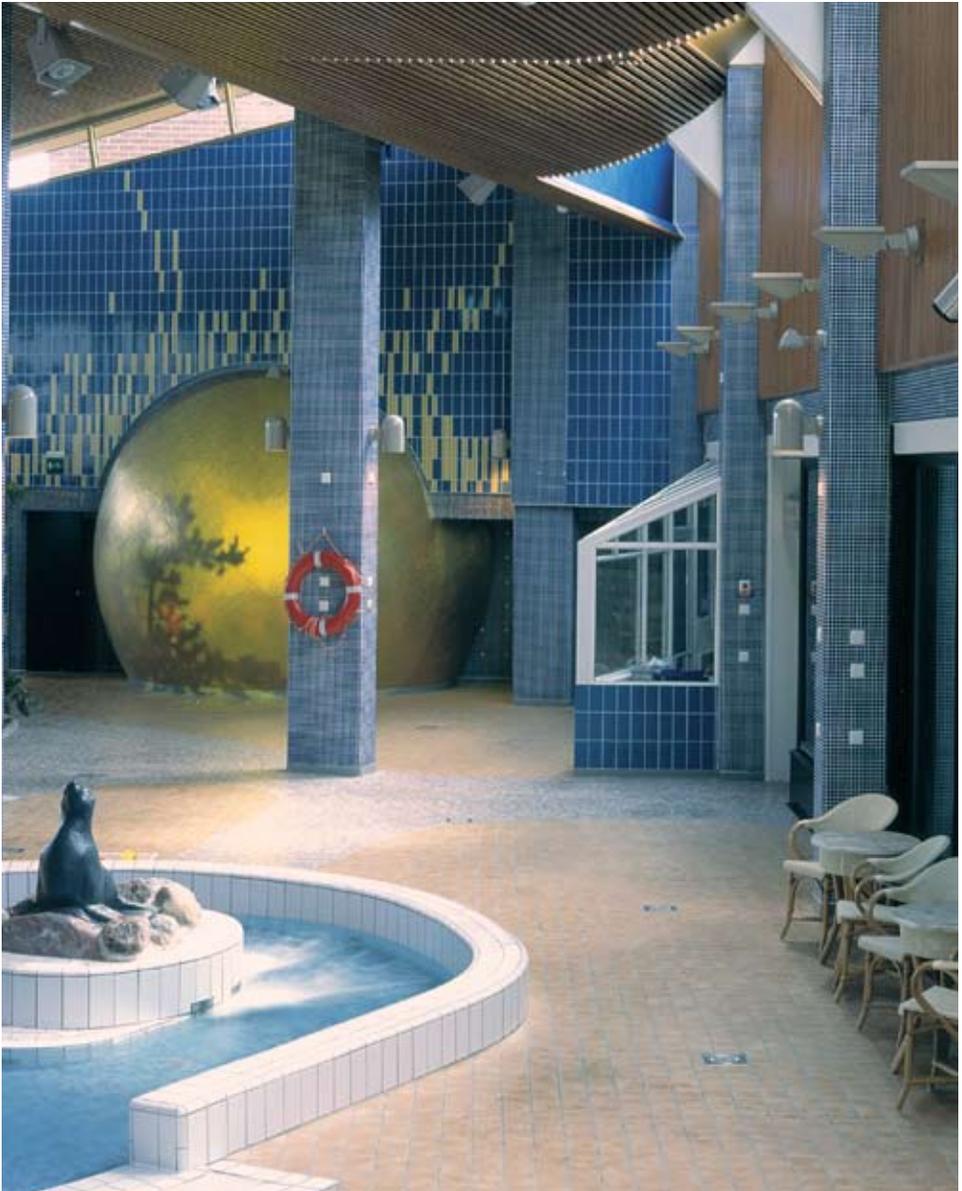

### 1.1 Summary

- A. Scope of work – Provide ceramic tile, tile installation materials and accessories as indicated on drawings, as specified herein, and as needed for complete and proper installation.
- B. Related Documents – provisions within General and Supplementary General Conditions of the Contract, Division 1 – General Requirements, and the Drawings apply to this Section.

### 1.2 Section Includes

- A. Ceramic wall tile and trim units (glazed)
- B. Ceramic floor tile/mosaics and trim units (glazed or unglazed)
- C. Ceramic tile pavers and trim units (glazed or unglazed)
- D. Quarry tile pavers and trim units (glazed or unglazed)
- E. Porcelain tile
- F. Glass mosaics
- G. Special purpose tile
- H. Decorative thin wall tile
- I. Installation Products; adhesives, mortars, grouts and sealants
- J. Waterproofing membranes for ceramic tile work
- K. Anti-fracture membranes for ceramic tile work
- L. Sound control underlayments
- M. Thresholds, trim, cementitious backer units and other accessories specified herein.

**NOTE TO SPECIFIER:** Edit for applicable procedures and materials.

### 1.3 Products Furnished But Not Installed Under This Section

**NOTE TO SPECIFIER:** Edit for applicable products.

### 1.4 Products Installed But Not Furnished Under This Section

**NOTE TO SPECIFIER:** Edit for applicable products.

### 1.5 Environmental Performance Requirements

- A. Environmental Performance Criteria: The following criteria are required for products included in this section.

Refer to Division 1 for additional requirements:

1. Products manufactured regionally within a 500 mile radius of the Project site;
2. Adhesive products must meet or exceed the VOC limits of South Coast Air Quality Management District Rule #1168 and Bay Area Resources Board Reg. 8, Rule 51.

### 1.6 Related Sections

- A. Section 03300 Cast-in-Place Concrete (monolithic slab finishing for ceramic tile)
- B. Section 03305 Concrete Curing
- C. Section 03410 Structural Pre-cast Concrete
- D. Section 03532 Concrete Floor Topping
- E. Section 04200 Unit Masonry (CMU wall substrates)
- F. Section 04300 Stone
- G. Section 06100 Rough Carpentry (plywood sub-floors)
- H. Section 07110 Membrane Waterproofing
- I. Section 07920 Elastomeric Joint Sealants
- J. Section 09250 Gypsum Board Assemblies
- K. Section 09385 Stone Tile
- L. Section 10800 Washroom Accessories
- M. Section 15440 Plumbing Fixtures

**NOTE TO SPECIFIER:** Above are examples of typical broad scope and narrow scope sections related to ceramic tile installation. Edit for applicable related sections.

### 1.7 Allowances

**NOTE TO SPECIFIER:** Edit for detail of applicable ALLOWANCES; coordinate with Section 01020 Allowances. Allowances in the form of unit pricing are sometimes used when the scope of the tile work at time of bid is undetermined.

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

### 1.8 Alternates

**NOTE TO SPECIFIER:** Edit for applicable ALTERNATES. Alternates may be used to evaluate varying levels of performance of setting systems or to assist in the selection of the tile by economy.

### 1.9 Reference Standards

- A. American Iron and Steel Institute (AISI) Specification for the Design of Cold-Formed Steel Structural Members
- B. American National Standards Institute (ANSI) A137.1 American National Standard Specifications For Ceramic Tile
- C. American National Standards Institute (ANSI) A108.01 – A108.17 American National Standard Specifications For The Installation Of Ceramic Tile
- D. American National Standards Institute (ANSI) A118.1 – A118.12 American National Standard Specifications For The Installation Of Ceramic Tile
- E. American National Standards Institute (ANSI) A136.1 American National Standard Specifications For The Installation Of Ceramic Tile
- F. American Plywood Association (APA) Y510T Plywood Design Specifications
- G. American Society For Testing And Materials (ASTM) A82 Standard Specification for Steel Wire, Plain, for Concrete Reinforcement
- H. American Society For Testing And Materials (ASTM) A185 Standard Specification for Steel Welded Wire Fabric, Plain, for Concrete Reinforcement
- I. American Society For Testing And Materials (ASTM) C33 Standard Specification for Concrete Aggregate
- J. American Society For Testing And Materials (ASTM) C36 Standard Specification for Gypsum Wallboard
- K. American Society For Testing And Materials (ASTM) C109 Standard Test Method for Compressive Strength of Hydraulic Cement Mortars (Using 2" or 50 mm Cube Specimens)
- L. American Society For Testing And Materials (ASTM) C144 Standard Specification for Aggregate for Masonry Mortar
- M. American Society For Testing And Materials (ASTM) C150 Standard Specification for Portland Cement
- N. American Society For Testing And Materials (ASTM) C171 Standard Specification for Sheet Materials for Curing Concrete
- O. American Society For Testing And Materials (ASTM) C241 Standard Test Method for Abrasion Resistance of Stone Subjected to Foot Traffic
- P. American Society For Testing And Materials (ASTM) C267 Standard Test Method for Chemical Resistance of Mortars, Grouts, and Monolithic Surfacing
- Q. American Society For Testing And Materials (ASTM) C482 Standard Test Method for Bond Strength of Ceramic Tile to Portland Cement
- R. American Society For Testing And Materials (ASTM) C503 Standard Specification for Marble Dimension Stone (Exterior)
- S. American Society For Testing And Materials (ASTM) C531 Standard Test Method for Linear Shrinkage and Coefficient of Thermal Expansion of Chemical-Resistant Mortars, Grouts, Monolithic Surfacing and Polymer Concretes
- T. American Society For Testing And Materials (ASTM) C627 Standard Test Method for Evaluating Ceramic Floor Tile Installation Systems Using the Robinson-Type Floor Tester
- U. American Society For Testing And Materials (ASTM) C794 Standard Test Method for Adhesion-in-Peel of Elastomeric Joint Sealants
- V. American Society For Testing And Materials (ASTM) C847 Standard Specification for Metal Lath

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

- W. American Society For Testing And Materials (ASTM) C905 Standard Test Method for Apparent Density of Chemical-Resistant Mortars, Grouts, and Monolithic Surfacing
- X. American Society For Testing And Materials (ASTM) C920 Standard Specification for Elastomeric Joint Sealants
- Y. American Society For Testing And Materials (ASTM) C955 Standard Specification for Load Bearing (Transverse and Axial) Steel Studs, Runners (Tracks), and Bracing or Bridging for Screw Application of Gypsum Board and Metal Plaster Bases
- Z. American Society For Testing And Materials (ASTM) D226 Standard Specification for Asphalt-Saturated Organic Felt Used in Roofing And Waterproofing
- AA. American Society For Testing And Materials (ASTM) D227 Standard Specification for Coal-Tar Saturated Organic Felt Used in Roofing and Waterproofing
- BB. American Society For Testing And Materials (ASTM) D751 Standard Test Method for Coated Fabrics
- CC. American Society For Testing And Materials (ASTM) D751 Standard Test Method for Rubber Property - Durometer Hardness
- DD. American Society For Testing And Materials (ASTM) D1248 Standard Test Method for Staining of Porous Substances by Joint Sealants
- EE. American Society For Testing And Materials (ASTM) D2240 Standard Test Method for Coated Fabrics
- FF. American Society For Testing And Materials (ASTM) D4263 Standard Test Method for Indicating Moisture in Concrete by The Plastic Sheet Method
- GG. American Society For Testing And Materials (ASTM) D4397 Standard Specification for Polyethylene Sheeting for Construction, Industrial and Agricultural Applications
- HH. American Society For Testing And Materials (ASTM) D4716 Standard Test Method for Determining the (In Plane) Flow Rate Per Unit Width and Hydraulic Transmissivity of a Geo-synthetic Using a Constant Head
- II. American Society For Testing And Materials (ASTM) E84 Standard Test Method for Surface Burning Characteristics of Building Materials
- JJ. American Society For Testing And Materials (ASTM) E90 Standard Test Method for Laboratory Measurement of Airborne Sound Transmission Loss of Building Partitions
- KK. American Society For Testing And Materials (ASTM) E96 Standard Test Methods for Water Vapor Transmission of Materials
- LL. American Society For Testing And Materials (ASTM) E413 Standard Classification for Rating Sound Insulation
- MM. American Society For Testing And Materials (ASTM) E492 Standard Test Method for Laboratory Measurement of Impact Sound Transmission Through Floor-Ceiling Assemblies Using the Tapping Machine
- NN. American Society For Testing And Materials (ASTM) E989 Standard Classification for Determination of Impact Insulation Class (IIC)
- OO. American Society of Mechanical Engineers (ASME) – ASME A112.6.3 Floor and Trench Drains
- PP. Canadian Sheet Steel Building Institute (CSSBI) Lightweight Steel Framing Binder {Publication 52M}
- QQ. Federal Housing Administration (FHA) Bulletin No. 750 Impact Noise Control in Multifamily Dwellings
- RR. Housing and Urban Development (HUD) TS 28 A Guide to Airborne, Impact and Structure-borne Noise-Control in Multifamily Dwellings
- SS. Materials And Methods Standards Association (MMSA) Bulletins 1-16

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

- TT. Metal Lath/Steel Framing Association (ML/SFA) 540 Lightweight Steel Framing Systems Manual
- UU. Steel Stud Manufacturers Association (SSMA) Product Technical Information and ICBO Evaluation Service, Inc. Report ER-4943P
- VV. Terrazzo, Tile And Marble Association Of Canada (TTMAC) Specification Guide 09300 Tile Installation Manual
- WW. Tile Council Of North America (TCNA) Handbook For Ceramic Tile Installation
- XX. United States Green Building Council (USGBC) LEED Reference Guide for Green Building Design and Construction
- YY. United States Green Building Council (USGBC) LEED Schools Reference Guide

**NOTE TO SPECIFIER:** Edit for applicable reference standards.

### 1.10 System Description

- A. Ceramic mosaic floor tile installed over concrete floor slabs using latex-modified Portland cement mortar and latex Portland cement grout joints.
- B. Quarry tile and base installed using latex modified portland cement mortar over a plastic portland cement mortar bed or over a cured (pre-floated) portland cement mortar bed with epoxy grouted joints.

**NOTE TO SPECIFIER:** The above systems are example descriptions; edit for additional applicable systems.

### 1.11 Submittals

**NOTE TO SPECIFIER:** Edit for applicable requirements.

- A. Submittal Requirements: Submit the following “Required LEED Criteria” certification items as listed below. Refer to Division 1 for additional requirements:
  - 1. A completed LEED Environmental Building Materials Certification Form. Information to be supplied generally includes:

- a. Manufacturing plant locations for tile installation products.
  - b. LEED Credits as listed in Part 1.4B “LEED Credit Submittals”
- 2. GREENGUARD Environmental Institute certificates or GreenGuard Environmental Institute Children & Schools certificates provided by the tile installation materials manufacturer on GREENGUARD letterhead stating “This product has been GREENGUARD Indoor Air Quality Certified® by the GREENGUARD Environmental Institute under the GREENGUARD Standard for Low Emitting Products” for each tile installation product used to verify Low VOC product information.
  - 3. Contractor’s certification of LEED Compliance: Submit Contractor’s certification verifying the installation of specified LEED Compliant products.
  - 4. Product Cut Sheets for all materials that meet the LEED performance criteria. Submit Product Cut Sheets with Contractor or Subcontractor’s stamp, as confirmation that submitted products were installed on Project.
  - 5. Material Safety Data Sheets for all applicable products.
- B. LEED Credit Submittals for the following;
    - 1. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit EQ 4.1: Manufacturer’s product data for tile installation materials, including GREENGUARD Certificate on GREENGUARD letterhead stating product VOC content.
    - 2. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit EQ 4.3: Manufacturer’s product data for tile installation materials, including GREENGUARD Certificate on GREENGUARD letterhead stating product VOC content.

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

3. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit MR 2.1: (Divert 50% from Disposal) Manufacturer's packaging showing recycle symbol for appropriate disposition in construction waste management.
  4. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit MR 2.1: (Divert 75% from Disposal) Manufacturer's packaging showing recycle symbol for appropriate disposition in construction waste management.
  5. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit MR 4.1: Manufacturer's product data showing post-consumer and/or pre-consumer recycled content.
  6. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit MR 4.2: Manufacturer's product data showing post-consumer and/or pre-consumer recycled content.
  7. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit MR 5.1 (10% Extracted, Processed and Manufactured Regionally): Product data indicating location of material manufacturer for regionally manufactured materials.
    - a. Include statement indicating cost and distance from manufacturer to Project for each regionally manufactured product.
  8. LEED Construction Guide for Green Building Design and Construction, 2009 Edition Credit MR 5.2 (20% Extracted, Processed and Manufactured Regionally): Product data indicating location of material manufacturer for regionally manufactured materials.
    - a. Include statement indicating cost and distance from manufacturer to Project for each regionally manufactured product.
  9. LEED Schools Reference Guide (Educational Projects Only), 2007 Edition Credit EQ 9 (Enhanced Acoustical Performance): Impact noise reduction test reports and product data on sound control product(s).
  10. LEED Schools Reference Guide (Educational Projects Only), 2007 Edition Credit EQ 10 (Mold Prevention): Manufacturer's packaging and/or data showing anti-microbial protection in product(s).
- C. Submit shop drawings and manufacturers' product data under provisions of Section (01300) (01340)
  - D. Submit samples of each type/style/finish/size/color of ceramic tile, mosaic, paver, trim unit or threshold under provisions of Section (01300) (01340)
  - E. Submit manufacturers' installation instructions under provisions of Section (01300) (01340)
  - F. Submit manufacturer's certification under provisions of Section (01405) that the materials supplied conform to ANSI A137.1.
  - G. Submit proof of warranty.
  - H. Submit sample of installation system demonstrating compatibility/functional relationships between adhesives, mortars, grouts and other components under provision of Section (01300) (01340). Submit proof from tile or stone manufacturer or supplier verifying suitability of tile or stone for specific application and use; including dimensional stability, water absorption, freeze/thaw resistance (if applicable), resistance to thermal cycling, and other characteristics that the may project may require. These characteristics must be reviewed and approved by the project design professional(s).
  - I. Submit list from manufacturer of installation system/adhesive/mortar/grout identifying a minimum of three (3) similar projects, each with a minimum of ten (10) years service.

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

J. For alternate materials, at least thirty (30) days before bid date submit independent laboratory test results confirming compliance with specifications listed in Part 2 – Products.

### 1.12 Quality Assurance

A. Tile Manufacturer (single source responsibility): Company specializing in ceramic tile, mosaics, pavers, trim units and/or thresholds with three (3) years minimum experience. Obtain tile from a single source with resources to provide products of consistent quality in appearance and physical properties.

B. Installation System Manufacturer (single source responsibility): Company specializing in adhesives, mortars, grouts and other installation materials with ten (10) years minimum experience and ISO 9001 certification. Obtain installation materials from single source manufacturer to insure consistent quality and full compatibility.

C. Submit laboratory confirmation of adhesives, mortars, grouts and other installation materials:

1. Identify proper usage of specified materials using positive analytical method.
2. Identify compatibility of specified materials using positive analytical method.
3. Identify proper color matching of specified materials using a positive analytical method.

D. Installer qualifications: company specializing in installation of ceramic tile, mosaics, pavers, trim units and thresholds with five (5) years documented experience with installations of similar scope, materials and design.

### 1.13 Mock-Ups

A. Provide mock-up of each type/style/finish/size/color of ceramic tile, mosaics, pavers, trim unit and threshold, along with respective installation adhesives, mortars, grouts and other installation materials, under provisions of Section (01400) (01405).

### 1.14 Pre-Installation Conference

Pre-installation conference: At least three weeks prior to commencing the work attend a meeting at the jobsite to discuss conformance with requirements of specification and job site conditions. Representatives of owner, architect, general contractor, tile subcontractor, Tile Manufacturer, Installation System Manufacturer and any other parties who are involved in the scope of this installation must attend the meeting.

### 1.15 Delivery, Storage and Handling

A. Acceptance at Site: deliver and store packaged materials in original containers with seals unbroken and labels, including grade seal, intact until time of use, in accordance with manufacturer's instructions.

B. Store ceramic tile and installation system materials in a dry location; handle in a manner to prevent chipping, breakage, and contamination.

C. Protect latex additives, organic adhesives, epoxy adhesives and sealants from freezing or overheating in accordance with manufacturer's instructions; store at room temperature when possible.

D. Store portland cement mortars and grouts in a dry location.

### 1.16 Project/Site Conditions

A. Provide ventilation and protection of environment as recommended by manufacturer.

B. Prevent carbon dioxide damage to ceramic tile, mosaics, pavers, trim, thresholds, as well as adhesives, mortars, grouts and other installation materials, by venting temporary heaters to the exterior.

C. Maintain ambient temperatures not less than 50°F (10°C) or more than 100°F (38°C) during installation and for a minimum of seven (7) days after completion. Setting of portland cement is retarded by low temperatures. Protect work for extended period of time and from damage by other trades. Installation with latex portland cement mortars requires substrate, ambient and material temperatures at least 37°F (3°C). There should be no ice in slab. Freezing after installation will not damage latex portland cement mortars. Protect portland cement based mortars and grouts from direct sunlight, radiant heat, forced ventilation (heat and cold) and drafts until cured to prevent premature evaporation of moisture. Epoxy mortars and grouts require surface temperatures between 60°F (16°C) and 90°F (32°C) at time of installation. It is the General Contractor's responsibility to maintain temperature control.

### 1.17 Sequencing and Scheduling

- A. Coordinate installation of tile work with related work.
- B. Proceed with tile work only after curbs, vents, drains, piping, and other projections through substrate have been installed and when substrate construction and framing of openings have been completed.

**NOTES FOR SPECIFIER:** Edit for project specific sequence and scheduling.

### 1.18 Warranty

The Contractor warrants the work of this Section to be in accordance with the Contract Documents and free from faults and defects in materials and workmanship for a period of 25 years. The manufacturer of adhesives, mortars, grouts and other installation materials shall provide a written twenty five (25) year warranty, which covers materials and labor – reference LATICRETE Warranty Data Sheet 025.0 for complete details and requirements. For exterior facades over steel or wood framing, the manufacturer of adhesives, mortars, grouts

and other installation materials shall provide a written ten (10) year warranty, which covers replacement of LATICRETE products only – reference LATICRETE Warranty Data Sheet 230.15 for complete details and requirements.

### 1.19 Maintenance

Submit maintenance data under provisions of Section 01730. Include cleaning methods, cleaning solutions recommended, stain removal methods, as well as polishes and waxes recommended.

### 1.20 Extra Materials Stock

Upon completion of the work of this Section, deliver to the Owner 2% minimum additional tile and trim shape of each type, color, pattern and size used in the Work, as well as extra stock of adhesives, mortars, grouts and other installation materials for the Owner's use in replacement and maintenance. Extra stock is to be from same production run or batch as original tile and installation materials.

## Part 2 – Products

### 2.1 Tile Manufacturers

Subject to compliance with paragraphs 1.12 and performance requirements, provide products by one of the following manufacturers:

**NOTE TO SPECIFIER:** Provide list of acceptable tile manufacturers.

### 2.2 Wall Tile Materials

**NOTE TO SPECIFIER:** Edit for each tile type.

- A. Ceramic Tile
- B. Grade:
- C. Size:
- D. Edge
- E. Finish:
- F. Color
- G. Special shapes
- H. Location:

### 2.3 Floor Tile Materials

NOTE TO SPECIFIER: Edit for each tile type.

- A. Ceramic Tile
- B. Grade:
- C. Size:
- D. Edge
- E. Finish:
- F. Color
- G. Special shapes
- H. Location:

### 2.4 Ceramic Tile Installation Materials Manufacturer

- A. LATICRETE International, Inc.,  
1 LATICRETE Park North,  
Bethany, CT 06524-3423 USA  
Phone 800.243.4788, +1.203.393.0010  
support@laticrete.com, www.laticrete.com;  
www.laticrete.com/green

NOTE TO SPECIFIER: Use either the following performance specification or the proprietary specification.

### 2.5 Performance Specification – Tile Installation Accessories

- A. Waterproofing Membrane to be thin, cold applied, single component liquid and load bearing. Reinforcing fabric to be non-woven rot-proof specifically intended for waterproofing membrane. Waterproofing Membrane to be non-toxic, non-flammable, and non-hazardous during storage, mixing, application and when cured. It shall be certified by IAPMO and ICC approved as a shower pan liner and shall also meet the following physical requirements:
  - 1. Hydrostatic Test (ASTM D4068): Pass
  - 2. Elongation at break (ASTM D751): 20–30%
  - 3. System Crack Resistance (ANSI A118.12): Pass (High)
  - 4. 7 day Tensile Strength (ANSI A118.10): >265 psi (1.8 MPa)
  - 5. 7 day Shear Bond Strength (ANSI A118.10): >200 psi (1.4 MPa)
  - 6. 28 Day Shear Bond Strength (ANSI A118.4): >214 psi (1.48 – 2.4 MPa)

- 7. Service Rating (TCA/ASTM C627): Extra Heavy
- 8. Total VOC Content: < 0.05 mg/m<sup>3</sup>
- B. Epoxy Waterproofing Membrane to be 3 component epoxy, trowel applied specifically designed to be used under ceramic tile, stone or brick and requires only 24 hours prior to flood testing:
  - 1. Breaking Strength (ANSI A118.10): 450–530 psi (3.1–3.6 MPa)
  - 2. Waterproofness (ANSI A118.10): No Water penetration
  - 3. 7 day Shear Bond Strength (ANSI A118.10): 110–150 psi (0.8–1 MPa)
  - 4. 28 Day Shear Bond Strength (ANSI A118.10): 90–120 psi (0.6–0.83 MPa)
  - 5. 12 Week Shear Bond Strength (ANSI A118.10): 110–130 psi (0.8–0.9 MPa)
  - 6. Total VOC Content: <3.4 g/l
- C. Crack Suppression Membrane to be thin, cold applied, single component liquid and load bearing. Reinforcing fabric (if required or used) to be non-woven, rot-proof specifically intended for crack suppression membrane. Materials to be non-toxic, non-flammable, and non-hazardous during storage, mixing, application and when cured. Crack Suppression Membrane shall also meet the following physical requirements:
  - 1. Elongation at break (ASTM D751): 20–30%
  - 2. System Crack Resistance (ANSI A118.12): Pass (High)
  - 3. 7 day Tensile Strength (ANSI A118.10): 265 – 300 psi (1.8 – 2.0 MPa)
  - 4. 7 day Shear Bond Strength (ANSI A118.10): 200 – 275 psi (1.4 – 1.9 MPa)
  - 5. 28 Day Shear Bond Strength (ANSI A118.4): >214 – 343 psi (1.48 – 2.4 MPa)
  - 6. Service Rating (TCA/ASTM C627): Extra Heavy
  - 7. Total VOC Content: <0.05 mg/m<sup>3</sup>

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

- D. Wire Reinforcing: 2" x 2" (50 x 50 mm) x 16 ASW gauge or 0.0625" (1.6 mm) diameter galvanized steel welded wire mesh complying with ANSI A108.02 3-7, ASTM A185 and ASTM A82.
- E. Cleavage membrane: 15 pound asphalt saturated, non-perforated roofing felt complying with ASTM D226, 15 pound coal tar saturated, non-perforated roofing felt complying with ASTM D227 or 4.0 mils (0.1 mm) thick polyethylene plastic film complying with ASTM D4397.
- F. Cementitious backer board units: size and thickness as specified, complying with ANSI A118.9.
- G. Thresholds: Provide marble saddles complying with ASTM C241 for abrasion resistance and ASTM C503 for exterior use, in color, size, shape and thickness as indicated on drawings.

**NOTE TO SPECIFIER:** Edit applicable tile installation accessories.

### 2.6 Performance Specification – Tile Installation Materials

- A. Sound Abatement and Crack Isolation Mat shall be load bearing, shock and vibration resistant. It shall be certified by independent laboratory testing to meet the specified acoustical performance when installed in a Floor Assembly with a 6" (150 mm) concrete slab, as well as meet the following physical requirements:
1. Service Rating (ASTM C627): Light
  2. Point Load (ANSI A118.12-5.2): >1250 psi (8.6 MPa)
  3. Installed Weight (ASTM C905 Modified): 2.6 lbs/ft<sup>2</sup> (12.8 kg/m<sup>2</sup>)
  4. Delta Impact Insulation Class ( $\Delta$ IIC; ASTM E2179): 20
- B. Sound Abatement & Crack Suppression Adhesive shall comply with ANSI A118.12, provide an Extra Heavy rating and provide a minimum  $\Delta$ IIC of 15:
1. Service Rating (ASTM C627): Extra Heavy
  2. Delta Impact Insulation Class ( $\Delta$ IIC; ASTM E2179): 15
  3. Point Load (ANSI A118.12 5.2): >1000 psi (6.9 MPa)
  4. Minimum Shear Bond Strength (ANSI A118.12): 100psi (0.7 MPa)
- C. Moisture Vapor Reduction to be epoxy based and GreenGuard compliant as well as meet the following physical requirements:
1. Shear Bond to Concrete (ANSI A118.12–5.1.5): >285 psi (2.0 MPa)
  2. Alkalinity Resistance (ASTM C267): Pass
  3. Permeability (ASTM F1869): 9.7 lbs/1,000 ft<sup>2</sup>/24 hours down to 0.2 lbs/1,000 ft<sup>2</sup>/24hours (248  $\mu$ g/s•m<sup>2</sup> down to 11  $\mu$ g/s•m<sup>2</sup>)
- D. Latex Portland Cement Mortar for thick beds, screeds, leveling beds and scratch/plaster coats to be weather, frost, shock resistant and meet the following physical requirements:
1. Compressive Strength (ANSI A118.4 Modified): >4000 psi (27.6 MPa)
  2. Water Absorption (ANSI A118.6):  $\leq$ 5%
  3. Service Rating (TCA/ASTM C627): Extra Heavy
  4. Smoke and Flame Contribution (ASTM E84 Modified): 0
  5. Total VOC Content: <0.05 mg/m<sup>3</sup>
- E. Self-Leveling Underlayment shall be mixed with water to produce a pumpable, fast setting, free flowing cementitious underlayment which can be poured from a feather-edge to 1-1/2" (38 mm) thick in one pour.
1. 4 Hour Compressive Strength (ANSI A118.4 Mod.): >1500 psi (10.3 MPa)
  2. 1 Day Compressive Strength (ANSI A118.4 Mod.): >2800 psi (19.3 MPa)
  3. 28 Day Compressive Strength (ANSI A118.4 Mod.): >4300 psi (29.7 MPa)

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

4. Tensile Strength (ANSI A118.7): >500 psi (3.5 MPa)
  5. Time To Foot Traffic: 3 – 4 Hours
  6. Total VOC Content: <0.05 mg/m<sup>3</sup>
- F. Epoxy Adhesive to be chemical resistant 100% solids epoxy with high temperature resistance and meet the following minimum physical requirements:
1. Compressive strength (ANSI A118.3): >5000 psi (34.4 MPa)
  2. Shear Bond Strength (ANSI A118.3): >1250 psi (8.6 MPa)
  3. Thermal Shock Resistance (ANSI A118.3): >600 psi (4.1 MPa)
  4. Tensile Strength (ANSI A118.3): >1400 psi (9.6 MPa)
  5. Shrinkage (ANSI A118.3): 0 – 0.1%
  6. Total VOC Content: <0.05 mg/m<sup>3</sup>
  7. Cured Epoxy Adhesive to be chemically and stain resistant to ketchup, mustard, tea, coffee, milk, soda, beer, wine, bleach (5% solution), ammonia, juices, vegetable oil, detergents, brine, sugar, cosmetics and blood, as well as chemically resistant to dilute food acids, dilute alkalis, gasoline, turpentine and mineral spirits.
- G. Latex Portland Cement Thin Bed Mortar for thin set and slurry bond coats to be weather, frost, shock resistant, non-flammable and meet the following physical requirements:
1. Compressive strength (ANSI A118.4): >2500 psi (17.2 MPa)
  2. Bond strength (ANSI A118.4): >450 psi (3.1 MPa)
  3. Smoke and Flame Contribution (ASTM E84 Modified): 0
  4. Total VOC Content: <0.05 mg/m<sup>3</sup>
- H. Organic Adhesive shall be non-flammable, water resistant, latex adhesive and shall meet the following physical requirements:
1. Open Time (ANSI A136.1): 70 minutes at 75°F (24°C)
  2. Color: White
  3. Density (ANSI A136.1): 13.2 lbs/gal (1.6 kg/l)
- I. Epoxy Grout (Industrial) to be non-flammable, chemical resistant 100% solids epoxy with high temperature resistance and meeting the following physical requirements:
1. Initial Set Time (ANSI A118.5): Pass (4 hours)
  2. Service Set Time (ANSI A118.5): Pass (<7 days)
  3. Shrinkage (ANSI A118.3): Pass (0.07%)
  4. Sag (ANSI A118.3): Pass (no sag)
  5. Shear Bond Strength (ANSI A118.3; quarry tile): 1000 psi (6.9 MPa)
  6. Compressive Strength (ANSI A118.3): 15500 psi (107 MPa)
  7. Tensile Strength (ANSI A118.5): 2600 psi (18.0 MPa)
  8. Thermal Shock Resistance (ANSI A118.3): 500 psi (3.4 MPa)
  9. Cured Epoxy Grout to be chemically and stain resistant to ketchup, mustard, tea, coffee, milk, soda, beer, wine, bleach (3% solution), ammonia, juices, vegetable oil, detergents, brine, sugar, cosmetics and blood, as well as being chemically resistant to dilute food/mineral acids, gasoline and mineral spirits.
- J. Epoxy Grout (Commercial/Residential) shall be non-toxic, non-flammable, non-hazardous during storage, mixing, application and when cured and shall meet the following physical requirements:
1. Compressive Strength (ANSI A118.3): 3500 psi (24 MPa)
  2. Shear Bond Strength (ANSI A118.3): 1000 psi (6.9 MPa)
  3. Tensile Strength (ANSI A118.3): 1100 psi (7.6 MPa)
  4. Thermal Shock (ANSI A118.3): >500 psi (3.5 MPa)

## Section 9 – Specifications for Swimming Pool/Fountain/Spa Installations

5. Water Absorption (ANSI A118.3): <0.5 %
  6. Vertical Joint Sag (ANSI A118.3): Pass
  7. Total VOC Content: <0.05 mg/m<sup>3</sup>
  8. Cured Epoxy Grout to be chemically and stain resistant to ketchup, mustard, tea, coffee, milk, soda, beer, wine, bleach (5% solution), ammonia, juices, vegetable oil, brine, sugar, cosmetics, and blood, as well as chemically resistant to dilute acids and dilute alkalis.
- K. Latex Portland Cement Grout to be weather, frost and shock resistant, as well as meet the following physical requirements:
1. Compressive Strength (ANSI A118.7): 4500 psi (31 MPa)
  2. Tensile Strength (ANSI A118.7): >500 psi (3.45 MPa)
  3. Flexural Strength (ANSI A118.7): >1250 psi (8.6 MPa)
  4. Water Absorption (ANSI A118.7): <5%
  5. Linear Shrinkage (ANSI A118.7): <0.05 %
  6. Smoke and Flame Contribution (ASTM E84 Modified): 0
  7. Total VOC Content: <0.05 mg/m<sup>3</sup>
- L. Expansion and Control Joint Sealant to be a one component, neutral cure, exterior grade silicone sealant and meet the following requirements:
1. Tensile Strength (ASTM C794): 280 psi (1.9 MPa)
  2. Hardness (ASTM D751; Shore A): 25 (colored sealant) /15 (clear sealant)
  3. Weather Resistance (QUV Weather-ometer): 10000 hours (no change)
- M. Roof Decks (and other exterior paving applications over occupied/storage spaces) shall consist of a Primary Roofing/Waterproofing Membrane, as specified in Section 0700 (q.v.), and a lightweight, frost/weather resistant installation system for tile, pavers, brick and stone that provides integral subsurface drainage and meets the following physical requirements:
1. Compressive Strength (ASTM C109 Modified): 3000 psi (20.7 MPa)
  2. Hydraulic Transmissivity (ASTM D4716): 1.6 gal/minute (6.1 l/minute)
  3. Service Rating (ASTM C627): Extra Heavy
- N. Spot Bonding Epoxy Adhesive for installing tile, brick and stone over vertical and overhead surfaces shall be high strength, high temperature resistant, non-sag and shall meet the following physical requirements:
1. Thermal Shock Resistance (ANSI A118.3): >1000 psi (6.9 MPa)
  2. Water Absorption (ANSI A118.3): 0.1 %
  3. Compressive Strength (ANSI A118.3): >8300 psi (57.2 MPa)
  4. Shear Bond Strength (ANSI A118.3 Modified): >730 psi (5 MPa)

**NOTE TO SPECIFIER:** Edit applicable tile installation materials.

### 2.7 Proprietary Specification – Tile Installation Accessories

Installation accessories as manufactured by LATICRETE International, Inc.,  
1 LATICRETE Park North,  
Bethany, CT 06524-3423 USA.  
Phone 800.243.4788, www.laticrete.com

- A. Waterproofing Membrane: LATICRETE® Hydro Ban™\*\* as manufactured by LATICRETE International, Inc.
- B. Epoxy Waterproofing Membrane: LATAPOXY® Waterproof Flashing Mortar as manufactured by LATICRETE International, Inc.
- C. Crack Suppression Membrane: LATICRETE Blue 92 Anti-Fracture Membrane\*\* as manufactured by LATICRETE International, Inc.

**NOTE TO SPECIFIER:** Edit applicable tile installation accessories.

### 2.8 Proprietary Specification – Tile Installation Materials

Installation materials as manufactured by LATICRETE International, Inc.,  
1 LATICRETE Park North,  
Bethany, CT 06524-3423 USA.  
Phone 800.243.4788,  
[www.laticrete.com](http://www.laticrete.com); [www.laticrete.com/green](http://www.laticrete.com/green)

- A. Latex Portland Cement Mortar for thick beds, screeds, leveling beds and scratch/plaster coats: LATICRETE 3701 Fortified Mortar Bed\*\* as manufactured by LATICRETE International, Inc.
- B. Moisture Vapor Reduction: LATAPOXY 312 Vapor Reduction Membrane\*\* as manufactured by LATICRETE International, Inc.
- C. Epoxy Adhesive: LATAPOXY 300 Adhesive\*\* as manufactured by LATICRETE International, Inc.
- D. Latex Portland Cement Thin Bed Mortar: LATICRETE 254 Platinum\*\* as manufactured by LATICRETE International, Inc.
- D. Sound & Crack Isolation Adhesive: LATICRETE 125 Sound & Crack Adhesive\*\* as manufactured by LATICRETE International, Inc.
- E. Organic Adhesive: LATICRETE 15 Premium Mastic as manufactured by LATICRETE International, Inc.
- F. Epoxy Grout (Industrial): LATAPOXY 2000 Industrial Grout\*\* as manufactured by LATICRETE International, Inc.
- G. Epoxy Grout (Commercial/Residential): LATICRETE SpectraLOCK® PRO Grout\*\*\* as manufactured by LATICRETE International, Inc.
- H. Latex Portland Cement Grout: LATICRETE PermaColor™ Grout^\*\* as manufactured by LATICRETE International, Inc.
- I. Expansion and Control Joint Sealant: LATICRETE Latasil™ as manufactured by LATICRETE International, Inc.

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

\*\* GREENGUARD Indoor Air Quality Certified® and GREENGUARD for Schools & Children Indoor Air Quality Certified Product

### Part 3 – Execution

#### 3.1 Substrate Examination

A. Verify that surfaces to be covered with ceramic tile, mosaics, pavers, brick, stone, trim or waterproofing are:

1. Sound, rigid and conform to good design/engineering practices;
2. Systems, including the framing system and panels, over which tile or stone will be installed shall be in conformance with the International Residential Code (IRC) for residential applications, the International Building Code (IBC) for commercial applications, or applicable building codes. The project design should include the intended use and necessary allowances for the expected live load, concentrated load, impact load, and dead load including the weight of the finish and installation materials;
3. Clean and free of dust, dirt, oil, grease, sealers, curing compounds, laitance, efflorescence, form oil, loose plaster, paint, and scale;
4. Thin-set tile installations have a specified subsurface tolerance, for instance 1/4" in 10' (6 mm in 3 m) and 1/16" in 1' (1.5 mm in 300 mm), to conform with the ANSI specifications. Because thin-set is not intended to be used in truing or leveling the work of others, the subsurface typically should not vary by more than 1/16" over 1' (1.5 mm over 300 mm), nor more than 1/32" (0.8 mm) between adjoining edges where applicable (e.g. between sheets of exterior glue plywood or between adjacent concrete masonry units). Should the architect/designer require a more stringent tolerance (e.g. 1/8" in 10' [3 mm in 3 m]), the subsurface specification must reflect that tolerance, or the tile specification must include a specific and separate requirement to bring the 1/4" (6 mm) subsurface tolerance into

compliance with the 1/8" (6 mm) tolerance desired;

5. Not leveled with gypsum or asphalt based compounds;
  6. Dry as per American Society for Testing and Materials (ASTM) D4263 "Standard Test for Determining Moisture in Concrete by the Plastic Sheet Method."
- B. Concrete surfaces shall also be:

1. Cured a minimum of 28 days at 70°F (21°C), including an initial seven (7) day period of wet curing;

**NOTE TO SPECIFIER: LATICRETE® latex portland cement mortars do not require a minimum cure time for concrete substrates or mortar beds;**

2. Wood float finished, or better, if the installation is to be done by the thin bed method;

C. Advise General Contractor and Architect of any surface or substrate conditions requiring correction before tile work commences. Beginning of work constitutes acceptance of substrate or surface conditions.

#### 3.2 Surface Preparation

A. Concrete Substrates – Concrete surface preparation shall be in accord with ACI 302. Sound and remove all loose concrete to firm substrate. Concrete surfaces shall be roughened to a concrete surface profile (CSP) of 3 to 5 (per ICRI CSP Standards 7 to 9 for acceptable profile height). Thoroughly wash/rinse with clean potable water. Surface defects or holes in the substrate shall be patched per manufacturer's recommendations.

(Insert any Special Means of Preparation in addition to the surface preparation requirements listed in § 3.1)

B. (List other Substrates as required and means of preparation as required)

(Insert any Special Means of Preparation in addition to the surface preparation requirements listed in § 3.1)

C. At the conclusion of all surface preparation and prior to the installation of tile, measure the pH level of the substrate. Tile work will not commence until the pH has a value of 10 or less.

**NOTE TO SPECIFIER:** Edit substrate and preparation section based on project specific surfaces and conditions.

### 3.3 Installation – Accessories

**NOTE TO SPECIFIER:** Edit section based on project specific conditions.

### 3.4 Installation – Tile, Brick and Stone

A. General: Install in accordance with current versions of American National Standards Institute, Inc. (ANSI) “A108 American National Standard Specifications for Installation of Ceramic Tile” and TCNA “Handbook for Ceramic Tile Installation.” Cut and fit ceramic tile, brick or stone neatly around corners, fittings, and obstructions. Perimeter pieces to be minimum half tile, brick or stone. Chipped, cracked, split pieces and edges are not acceptable. Make joints even, straight, plumb and of uniform width to tolerance +/- 1/16" over 8' (1.5 mm in 2.4 m). Install divider strips at junction of flooring and dissimilar materials.

B. Pre-float Method (Walls): Over clean, dimensionally stable and sound concrete or masonry substrates, apply latex-portland cement mortar as scratch/leveling coat in compliance with current revision of ANSI A108.01 (3.2.5, 3.2.6 and 3.3.5) and A108.02 (4.2.2), A108.1A (1.0, 1.4, and 5.1) Float surface of scratch/leveling coat plumb, true and allow mortar to set until firm. For installation of ceramic tile, mosaic, paver, brick or stone, follow Thin Bed Method (§ 3.4 E).

#### Use the following LATICRETE® System Materials

LATICRETE® 3701 Fortified Mortar Bed

#### References

LATICRETE Data Sheets: 100.0

LATICRETE MSDS: 3701FMB

GREENGUARD Certificates: 3701FMB

LATICRETE Technical Data Sheets: 105, 106, 114, 115, 118, 122, 130, 192, 199, 204

C. Bonded Thick Bed Method (Horizontal Surfaces): Verify 1" (25 mm) nominal bed thickness has been allowed. Apply LATICRETE 254 Platinum with flat trowel as a slurry bond coat approximately 1/16" (1.5 mm) thick over clean concrete slab in compliance with current revision of ANSI A108.1A (2.2 and 5.2). Place LATICRETE 3701 Fortified Mortar Bed mixed with water over slurry bond coat while LATICRETE 254 Platinum slurry bond coat is wet and tacky. Omit reinforcing wire fabric and fully compact bed by tamping. Spread LATICRETE 254 Platinum with flat trowel over surface of "green"/fresh mortar bed as a slurry bond coat approximately 1/16" (1.5 mm) thick. Apply LATICRETE 254 Platinum slurry bond coat to back of ceramic tile, mosaic, paver, brick, stone, trim unit or threshold and place each piece/sheet while slurry bond coats are wet and tacky. Beat with a hardwood block or rubber mallet to level/imbed pieces before mortar bed takes initial set. Clean excess mortar/adhesive from finished surfaces. For installation of tile, brick or stone over cured (pre-floated) latex-portland cement thick bed mortar, follow Thin Bed Method (§ 3.4E).

#### Use the following LATICRETE System Materials

LATICRETE 3701 Fortified Mortar Bed

LATICRETE 254 Platinum

#### References

LATICRETE Data Sheets: 100.0; 677.0

LATICRETE MSDS: 3701FMB; 254

GREENGUARD Certificates: 3701FMB; 254

LATICRETE Technical Data Sheets: 106, 114, 115, 128, 143, 192, 199, 204

D. In addition to installing waterproofing membrane where required, provide proper architectural detailing, especially at critical areas such as any penetrations and copings.

## Section 9 – 9.2 P601 Concrete – Swimming Pool Tank

**NOTE TO SPECIFIER:** Adhesives/mastics, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent water penetration into occupied or storage spaces below. Drains must be a two-part clamping ring style drains with weepers and as per ASME A112.6.3. Place tile spacers or gravel around weep holes to prevent mortar from clogging the weep holes.

**Pre-Treat Cracks and Joints** – Fill all substrate cracks, cold joints and control joints to a smooth finish using a LATICRETE® latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban™ applied with a paint brush or trowel may be used to fill in non-structural joints and cracks. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Coves and Floor/Wall Intersections** – Fill all substrate coves and floor/wall transitions to a smooth finish and changes in plane using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in cove joints and floor/wall transitions <1/8" (3 mm) in width. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Drains** – Drains must be of the clamping ring type, with weepers as per ASME A112.6.3. Apply a liberal coat\* of LATICRETE Hydro Ban around and over the bottom half of drain clamping ring. Cover with a second liberal coat of LATICRETE Hydro Ban. When the LATICRETE Hydro Ban dries, apply a bead of LATICRETE Latasil™ where the LATICRETE Hydro Ban meets the drain throat. Install the top half of drain clamping ring.

**Pre-Treat Penetrations** – Allow for a minimum 1/8" (3 mm) space between drains, pipes, lights, or other penetrations and surrounding ceramic tile, stone or brick. Pack any gaps around pipes, lights or other penetrations with a LATICRETE latex-fortified thin-set. Apply a

liberal coat\* of LATICRETE Hydro Ban around penetration opening. Cover the first coat with a second liberal coat\* of LATICRETE Hydro Ban. Bring LATICRETE Hydro Ban up to level of tile or stone. When LATICRETE Hydro Ban has dried to the touch seal with LATICRETE Latasil.

**Main Application** – Allow any pre-treated areas to dry to the touch. Apply a liberal coat\* of LATICRETE Hydro Ban with a paint brush or heavy napped roller over substrate including pre-treated areas and allow to dry to the touch. Install another liberal coat\* of LATICRETE Hydro Ban over the first coat. Let the top coat of LATICRETE Hydro Ban dry to the touch approximately 1 – 2 hours at 70°F (21°C) and 50% RH. When the top coat has dried to the touch inspect the surface for pinholes, voids, thin spots or other defects. LATICRETE Hydro Ban will dry to an olive green color when fully cured. Use additional LATICRETE Hydro Ban to seal any defects.

**Movement Joints** – Apply a liberal coat\* of LATICRETE Hydro Ban, approximately 8" (200 mm) wide over the areas. Then embed and loop the 6" (150 mm) wide LATICRETE 9235 Waterproofing Membrane Reinforcing Fabric and allow the LATICRETE Hydro Ban liquid to bleed through. Immediately top coat with a second coat of LATICRETE Hydro Ban.

\* Dry coat thickness is 20 – 30 mil (.02 – .03" or .5 – .8 mm); consumption per coat is approximately .01 gal/ft<sup>2</sup> (approx. 0.4 l/m<sup>2</sup>); coverage is approximately 100 ft<sup>2</sup> /gal (approx. 2.5 m<sup>2</sup> /l). LATICRETE® Waterproofing/Anti-Fracture Fabric can be used to pre-treat cracks, joints, curves, corners, drains, and penetrations with LATICRETE Hydro Ban™.

**Protection** – Provide protection for newly installed membrane, even if covered with a thin-bed ceramic tile, stone or brick installation against exposure to rain or other water for a minimum of 24 hours at 70°F (21°C) and 50% RH. For temperatures between 45°F and 69°F (7°C to 21°C) allow a 3 day cure period.

**Flood Testing** – Allow membrane to cure fully before flood testing, typically a minimum 2 hours at 70°F (21°C) and 50% RH. Cold conditions will require a longer curing time.

For temperatures between 50°F and 69°F (10°C to 21°C) allow a minimum 24 hour cure period prior to flood testing. Please refer to LATICRETE TDS 169 “Flood Testing Procedures”, available at [www.laticrete.com](http://www.laticrete.com) for flood testing requirements and procedures.

### Use the following LATICRETE System Materials

LATICRETE Hydro Ban

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 663.0, 663.5

LATICRETE MSDS: Hydro Ban, Fabric

LATICRETE Technical Data Sheets: 169, 203

E. Thin Bed Method: At the conclusion of all surface preparation and prior to the installation of tile, measure the pH level of the substrate. Tile work will not commence until the pH has a value of 10 or less. Install latex portland cement mortar in compliance with current revisions of ANSI A108.02 (3.11), A108.1B and ANSI A108.5. Use the appropriate trowel notch size to ensure proper bedding of the tile, brick or stone selected. Work the latex portland cement mortar into good contact with the substrate and comb with notched side of trowel. Spread only as much latex portland cement mortar as can be covered while the mortar surface is still wet and tacky. When installing large format (>8" x 8"/200 mm x 200 mm) tile/stone, rib/button/lug back tiles, pavers or sheet mounted ceramics/mosaics, spread latex portland cement mortar onto the back of (i.e. ‘back-butter’) each piece/sheet in addition to trowelling latex portland cement mortar over the substrate. Beat each piece/sheet into the latex portland cement mortar with a beating block or rubber mallet to insure full bedding and flatness. Allow installation to set until firm. Clean excess latex portland cement mortar from tile or stone face and joints between pieces.

### Use the following LATICRETE System Materials

LATICRETE 254 Platinum

### References

LATICRETE Data Sheet: 677.0

LATICRETE MSDS: 254

GREENGUARD Certificate: 254

LATICRETE Technical Data Sheets: 105, 115, 118, 129, 192, 199, 204

F. Grouting or Pointing:

**NOTE TO SPECIFIER:** select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Chemical Resistant, Water Cleanable Tile-Grouting Epoxy (ANSI A118.3): Follow manufacturer’s recommendations for minimum cure time prior to grouting. Store liquid components of LATICRETE SpectraLOCK® PRO Grout\*\* for 24 hours at 70–80°F (21–27°C) prior to use to facilitate mixing and application. Substrate temperature must be 40–95°F (4–35°C). Verify joints are free of dirt, debris or grout spacers. Sponge or wipe dust/dirt off tile faces and remove water standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, stone or trim units that are not hot paraffin coated to facilitate cleaning. Cut open pouch and pour LATICRETE SpectraLOCK PRO Grout Part A Liquid into a clean mixing pail. Then open pouch and pour LATICRETE SpectraLOCK PRO Grout Part B Liquid into the mixing pail. Mix by hand or with a slow speed (<300 rpm) mixer until the two liquids are well blended. Then, while mixing, add LATICRETE SpectraLOCK PRO Grout Part C Powder and blend until uniform. Install LATICRETE SpectraLOCK PRO Grout in compliance with current revisions of ANSI A108.02 (3.13) and ANSI A108.6 (3.0–4.0). Spread using a sharp edged, hard rubber float and work grout into joints. Using strokes diagonal (at 45° angle) to the grout lines, pack joints full and free of voids/

pits. Then hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to avoid pulling grout out of filled joints. Once excess grout is removed, a thin film/haze will be left. Initial cleaning of the remaining film/haze can begin approximately 20–30 minutes after grouting (wait longer at colder temperatures). Begin by mixing cleaning additive packet with 2 gallons (7.6 l) of clean water in a clean bucket to make cleaning solution. Dip a clean sponge into the bucket and then wring out cleaning solution until sponge is damp. Using a circular motion, lightly scrub grouted surfaces with the damp sponge to dissolve grout film/haze. Then drag sponge diagonally over the scrubbed surfaces to remove froth. Rinse sponge frequently and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Discard sponges as they become "gummy" with residue. Within one (1) hour of finishing first cleaning, clean the same area again following the same procedure but utilizing a clean white scrub pad and fresh cleaning solution. Rinse scrub pad frequently. Drag a clean sponge diagonally over the scrubbed surfaces to remove froth. Use each side of sponge only once before rinsing and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Allow cleaned areas to dry and inspect tile/stone surface. For persistent grout film/haze (within 24 hours), repeat scrubbing procedure with undiluted white vinegar and clean pad. Rinse with clean water and allow surface to dry. Inspect grout joint for pinholes/voids and repair them with freshly mixed LATICRETE® SpectraLOCK® PRO Grout<sup>†</sup>. CAUTIONS: Do not use undiluted white vinegar on polished marble or limestone unless a test spot in an inconspicuous area indicates no change in finish appearance; do not use acid cleaners on epoxy grout less than 7 days old.

**Use the following LATICRETE System Materials**  
LATICRETE SpectraLOCK PRO Grout

### References

LATICRETE Data Sheets: 685.0, 685.5

LATICRETE MSDS: Pro Part A, Pro Part B, Part C Powder, Cleaning Additive

GREENGUARD Certificate: PRO

LATICRETE Technical Data Sheets: 111, 198, 212, 400

2. Polymer Fortified Cement Grout (ANSI A118.7): Allow ceramic tile, mosaics, pavers, brick or stone installation to cure a minimum of 24 hours at 70°F (21°C). Verify grout joints are free of dirt, debris or tile spacers. Sponge or wipe dust/dirt off veneer face and remove any water standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, or trim units that are not hot paraffin coated to facilitate cleaning. Surface temperature must be between 40–90°F (4–32°C). Pour approximately 64 oz (1.9 l) of clean, potable water into a clean mixing container. Add a 25 lb (11.3 kg) bag of LATICRETE PermaColor™ Grout<sup>^</sup> to the container while mixing. Mix by hand or with a slow speed mixer to a smooth, stiff consistency. Install latex fortified cement grout in compliance with current revisions of ANSI A108.1A (7.0 Grouting of tile), ANSI A108.02 (4.5 Cleaning tile) and ANSI A108.10. Dampen dry surfaces with clean water. Spread using a sharp edged, hard rubber float and work grout into joints. Using diagonal (at 45° angle to direction of grout line) strokes, pack joints full and free of voids/pits. Hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to reduce pulling grout out of filled joints. Initial cleaning can begin as soon as grout has become firm, typically 15–20 minutes after grouting at 70°F (21°C). Higher temperatures may

require faster time to initial cleaning; wider joints or lower temperatures may require a longer time to initial cleaning. Begin initial cleaning by lightly dampening the entire grouted area with a damp sponge. Then wash clean the entire area with a damp (not wet) sponge. Drag a clean towel, dampened with water, or wipe a clean, dampened sponge, diagonally over the veneer face to remove any grout haze left after “squeegeeing.” Rinse towel/sponge frequently and change rinse water at least every 200 ft<sup>2</sup> (19 m<sup>2</sup>). Repeat this cleaning sequence again if grout haze is still present. Allow grout joints to become firm. Buff surface of grout with clean coarse cloth. Inspect joint for pinholes/voids and repair them with freshly mixed grout. Within 24 hours, check for remaining haze and remove it with warm soapy water and a nylon scrubbing pad, using a circular motion, to lightly scrub surfaces and dissolve haze/film. Do not use acid cleaners on latex portland cement grout less than 10 days old.

**NOTE TO SPECIFIER:** Select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Latex-portland cement sanded floor grout for joint widths  $\geq 1/16"$  (1.5 mm) and  $\leq 1/2"$  (12 mm);
2. Latex-portland cement unsanded grout for soft glazed tiles and soft/polished stone with joints widths  $\leq 1/8"$  (3 mm).

### Use the following LATICRETE System Materials

LATICRETE PermaColor Grout

### References

LATICRETE Data Sheets: 250.0

LATICRETE MSDS: 2500

GREENGUARD Certificates: 2500

LATICRETE Technical Data Sheets: 201, 400

G. Expansion and Control Joints: Architect must specify type of joint and show location and details on drawings.

Provide control or expansion joints as located in contract drawings and in full conformity,

especially in width and depth, with architectural details.

1. Substrate joints must carry through, full width, to surface of tile, brick or stone.
2. Install expansion joints in tile, brick or stone work over construction/cold joints or control joints in substrates.
3. Install expansion joints where tile, brick or stone abut restraining surfaces (such as perimeter walls, curbs, columns), changes in plane and corners.
4. Joint width and spacing depends on application – follow TCNA “Handbook for Ceramic Tile Installation” Detail “EJ-171 Expansion Joints” or consult sealant manufacturer for recommendation based on project parameters.
5. Joint width:  $\geq 1/8"$  (3 mm) and  $\leq 1"$  (25 mm).
6. Joint width: depth ~2:1 but joint depth must be  $\geq 1/8"$  (3 mm) and  $\leq 1/2"$  (12 mm).
7. Layout (field defined by joints): 1:1 length: width is optimum but must be  $\leq 2:1$ . Remove all contaminants and foreign material from joint spaces/surfaces, such as dirt, dust, oil, water, frost, setting/grouting materials, sealers and old sealant/backer. Use LATICRETE Latasil™ 9118 Primer for underwater and permanent wet area applications, or for porous stone (e.g. limestone, sandstone etc...) installations. Install appropriate backing material (e.g. closed cell backer rod) based on expansion joint design and as specified in § 07920. Apply masking tape to face of tile, brick or stone veneer. Use caulking gun, or other applicator, to completely fill joints with sealant. Within 5–10 minutes of filling joint, ‘tool’ sealant surface to a smooth finish. Remove masking tape immediately after tooling joint. Wipe smears or excess sealant off the face of non-glazed tile, brick, stone or other absorptive surfaces immediately.

### Use the following LATICRETE System Materials

LATICRETE Latasil

LATICRETE Latasil 9118 Primer

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303, EJ-01, EJ-02, EJ-03, EJ-04, EJ-05, EJ-06, EJ-07, EJ-08, EJ-09, EJ-10, EJ-11, EJ-12, EJ-13, EJ-14 (Sealant treatments only)

LATICRETE Data Sheets: 6200.1, 6524.1, 6526.1

LATICRETE MSDS: Latasil, Primer

LATICRETE Technical Data Sheets: 211, 252

H. Adjusting: Correction of defective work for a period of one (1) year following substantial completion, return to job and correct all defective work. Defective work includes, without limitation, tiles broken in normal abuse due to deficiencies in setting bed, loose tiles or grout, and all other defects which may develop as a result of poor workmanship.

### 3.5 Cleaning

Clean excess mortar/epoxy from veneer surfaces with water before they harden and as work progresses. Do not contaminate open grout/caulk joints while cleaning. Sponge and wash veneers diagonally across joints. Do not use acids for cleaning. Polish with clean dry cloth. Remove surplus materials and leave premises broom clean.

### 3.6 Protection

Protect finished installation under provisions of §01500 and §01535. Close areas to other trades and traffic until tile being installed has set firmly. Keep floors installed with epoxy adhesive closed to traffic for 24 hrs at 70°F (21°C), and to heavy traffic for 48 hours at 70°F (21°C) unless instructed differently by manufacturer. Use kneeling boards, or equivalent, to walk/work on newly tiled floors. Cure tile work in swimming pools, fountains and other continuous immersion applications for 10 days for epoxy based grout at 70°F (21°C)

and 14 days for latex-portland cement based grout at 70°F (21°C) before filling installation with water. Extend period of protection at lower temperatures, below 60°F (16°C) and at high relative humidity (>70% RH) due to retarded set times of mortar/adhesives. Replace or restore work of other trades damaged or soiled by work under this section.

**Filling Pool** – Maintain a differential of 10°F (5.5°C) or less between the fill water and substrate temperatures during fill and drain cycles, and fill pool with water at rate of 2' (600 mm) per 24 hours to allow gradual exposure to water pressure, thermal and moisture differentials. Initial alkalinity of pool water is very high from exposure to portland cement based finishes, grouts, and mortars; careful and frequent balance is required. Do not fill if potential thermal gradients exist (very cold source water, exterior pool exposed to several days of solar radiation, etc..).

**Emptying Pool** – empty pool water at rate of 2' (600 mm) per 24 hours to prevent hydrostatic pressure from de-laminating tiles of leveling mortar (in pools without waterproof membrane).

### Reference

LATICRETE Technical Data Sheet: 192

### Part 4 – Health and Safety

The use of personal protection such as rubber gloves, suitable dust masks, safety glasses and industrial clothing is highly recommended. Discarded packaging, product wash and waste water should be disposed of as per local, state or federal regulations.

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

**Part 3 – Execution**

**3.1 Substrate Examination**

A. Verify that surfaces to be covered with ceramic tile, mosaics, pavers, brick, stone, trim or waterproofing are:

1. Sound, rigid and conform to good design/engineering practices;
2. Systems, including the framing system and panels, over which tile or stone will be installed shall be in conformance with the International Residential Code (IRC) for residential applications, the International Building Code (IBC) for commercial applications, or applicable building codes. The project design should include the intended use and necessary allowances for the expected live load, concentrated load, impact load, and dead load including the weight of the finish and installation materials;
3. Clean and free of dust, dirt, oil, grease, sealers, curing compounds, laitance, efflorescence, form oil, loose plaster, paint, and scale;
4. Thin-set tile installations have a specified subsurface tolerance, for instance 1/4" in 10' (6 mm in 3 m) and 1/16" in 1' (1.5 mm in 300 mm), to conform with the ANSI specifications. Because thin-set is not intended to be used in truing or leveling the work of others, the subsurface typically should not vary by more than 1/16" over 1' (1.5 mm over 300 mm), nor more than 1/32" (0.8 mm) between adjoining edges where applicable (e.g. between sheets of exterior glue plywood or between adjacent concrete masonry units). Should the architect/designer require a more stringent tolerance (e.g. 1/8" in 10' [3 mm in 3 m]), the subsurface specification must reflect that tolerance, or the tile specification must include a specific and separate requirement to bring the 1/4" (6 mm) subsurface tolerance into compliance with the 1/8" (6 mm) tolerance

desired;

5. Not leveled with gypsum or asphalt based compounds;
  6. Dry as per American Society for Testing and Materials (ASTM) D4263 "Standard Test for Determining Moisture in Concrete by the Plastic Sheet Method."
- B. Concrete surfaces shall also be:
1. Cured a minimum of 28 days at 70°F (21°C), including an initial seven (7) day period of wet curing;
  2. Wood float finished, or better, if the installation is to be done by the thin bed method;
- C. Advise General Contractor and Architect of any surface or substrate conditions requiring correction before tile work commences. Beginning of work constitutes acceptance of substrate or surface conditions.

**3.2 Surface Preparation**

A. Concrete Substrate – Concrete surface preparation shall be in accord with ACI 302. Sound and remove all loose concrete to firm substrate. Concrete surfaces shall be roughened to a concrete surface profile (CSP) of 3 to 5 (per ICRI CSP Standards 7 to 9 for acceptable profile height). Thoroughly wash/rinse with clean potable water. Surface defects or holes in the substrate shall be patched per manufacturer's recommendations.

(Insert any Special Means of Preparation in addition to the surface preparation requirements listed in § 3.1)

B. (List other Substrates as required and means of preparation as required)

(Insert any Special Means of Preparation in addition to the surface preparation requirements listed in § 3.1)

C. At the conclusion of all surface preparation and prior to the installation of tile, measure the pH level of the substrate. Tile work will not commence until the pH has a value of 10 or less.

**NOTE TO SPECIFIER:** Edit substrate and preparation section based on project specific surfaces and conditions.

### 3.3 Installation – Accessories

#### A. Waterproofing:

**NOTE TO SPECIFIER:** Adhesives/mastics, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent water penetration into occupied or storage spaces below.

Install the waterproofing membrane in compliance with current revisions of ANSI A108.1 (2.7 Waterproofing) and ANSI A108.13. Review the installation and plan the application sequence.

Pre-cut LATICRETE® Waterproofing/Anti-Fracture Fabric (if required), allowing 2" (50 mm) for overlap at ends and sides to fit the areas as required. Roll up the pieces for easy handling and placement. Shake or stir LATICRETE Hydro Ban™ before using.

**Pre-Treat Cracks and Joints** – Fill all substrate cracks, cold joints and control joints to a smooth finish using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in non-structural joints and cracks. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Coves and Floor/Wall Intersections** – Fill all substrate coves and floor/wall transitions to a smooth finish and changes in plane using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in cove joints and floor/wall transitions <1/8" (3mm) in width. Apply a liberal coat\* of LATICRETE Hydro Ban™ approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Drains** – Drains must be of the clamping ring type, with weepers as per ASME A112.6.3. Apply a liberal coat\* of LATICRETE Hydro Ban around and over the bottom half of drain clamping ring. Cover with a second liberal coat of LATICRETE Hydro Ban. When the LATICRETE Hydro Ban dries, apply a bead of LATICRETE Latasil™ where the LATICRETE Hydro Ban meets the drain throat. Install the top half of drain clamping ring.

**Pre-Treat Penetrations** – Allow for a minimum 1/8" (3 mm) space between drains, pipes, lights, or other penetrations and surrounding ceramic tile, stone or brick. Pack any gaps around pipes, lights or other penetrations with a LATICRETE latex-fortified thin-set. Apply a liberal coat\* of LATICRETE Hydro Ban around penetration opening. Cover the first coat with a second liberal coat\* of LATICRETE Hydro Ban. Bring LATICRETE Hydro Ban up to level of tile or stone. When LATICRETE Hydro Ban has dried to the touch seal with LATICRETE Latasil.

**Main Application** – Allow any pre-treated areas to dry to the touch. Apply a liberal coat\* of LATICRETE Hydro Ban with a paint brush or heavy napped roller over substrate including pre-treated areas and allow to dry to the touch. Install another liberal coat\* of LATICRETE Hydro Ban over the first coat. Let the top coat of LATICRETE Hydro Ban dry to the touch approximately 1 – 2 hours at 70°F (21°C) and 50% RH. When the top coat has dried to the touch inspect the surface for pinholes, voids, thin spots or other defects. LATICRETE Hydro Ban will dry to an olive green color when fully cured. Use additional LATICRETE Hydro Ban to seal any defects.

**Movement Joints** – Apply a liberal coat\* of LATICRETE Hydro Ban, approximately 8" (200mm) wide over the areas. Then embed and loop the 6" (150 mm) wide LATICRETE Waterproofing/Anti-Fracture Fabric and allow the LATICRETE Hydro Ban liquid to bleed through. Immediately apply a second coat of LATICRETE Hydro Ban.

\* Dry coat thickness is 20 – 30 mil (0.02 – 0.03" or 0.5 – 0.8 mm); consumption per coat is approximately 0.01 gal/ft<sup>2</sup> (approx. 0.4 l/m<sup>2</sup>); coverage is approximately 100 ft<sup>2</sup>/gal (approx. 2.5 m<sup>2</sup>/l). LATICRETE® Waterproofing/Anti-Fracture Fabric can be used to pre-treat cracks, joints, curves, corners, drains, and penetrations with LATICRETE Hydro Ban™.

**Protection** – Provide protection for newly installed membrane, even if covered with a thin-bed ceramic tile, stone or brick installation against exposure to rain or other water for a minimum of 2 hours at 70°F (21°C) and 50% RH. For temperatures between 45°F and 69°F (7°C to 21°C) allow a minimum 24 hour cure period.

**Flood Testing** – Allow membrane to cure fully before flood testing, typically a minimum 2 hours at 70°F (21°C) and 50% RH. Cold conditions will require a longer curing time. For temperatures between 50°F and 69°F (10°C to 21°C) allow a minimum 24 hour cure period prior to flood testing. Please refer to LATICRETE TDS 169 “Flood Testing Procedures”, available at [www.laticrete.com](http://www.laticrete.com) for flood testing requirements and procedures.

**Use the following LATICRETE System Materials**  
LATICRETE Hydro Ban

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 663.0, 663.5

LATICRETE MSDS: Hydro Ban, Fabric

GREENGUARD Certificate: Hydro Ban

LATICRETE Technical Data Sheets: 169, 203

### 3.4 Installation – Tile, Brick and Stone

A. General: Install in accordance with current versions of American National Standards Institute, Inc. (ANSI) “A108 American National Standard Specifications for Installation of Ceramic Tile” and TCNA “Handbook for Ceramic Tile Installation.” Cut and fit ceramic tile, brick or stone neatly around corners, fittings, and obstructions. Perimeter pieces to be minimum half tile, brick or stone. Chipped, cracked, split

pieces and edges are not acceptable. Make joints even, straight, plumb and of uniform width to tolerance +/-1/16" over 8' (1.5 mm in 2.4 m). Install divider strips at junction of flooring and dissimilar materials.

B. Waterproofing Membrane installed over pre-sloped floor substrate and turned up onto the walls. In addition to installing waterproofing membrane where required, provide proper architectural detailing, especially at critical areas such as any penetrations and copings.

**NOTE TO SPECIFIER:** Adhesives/mastics, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent water penetration into occupied or storage spaces below. Drains must be a two-part clamping ring style drains with weepers and as per ASME A112.6.3. Place tile spacers or gravel around weep holes to prevent mortar from clogging the weep holes.

Install the waterproofing membrane in compliance with current revisions of ANSI A108.1 (2.7 Waterproofing) and ANSI A108.13. Review the installation and plan the application sequence. Pre-cut LATICRETE Waterproofing/Anti-Fracture Fabric (if required), allowing 2" (50 mm) for overlap at ends and sides to fit the areas as required. Roll up the pieces for easy handling and placement. Shake or stir LATICRETE Hydro Ban before using.

**Pre-Treat Cracks and Joints** – Fill all substrate cracks, cold joints and control joints to a smooth finish using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in non-structural joints and cracks. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Coves and Floor/Wall Intersections** – Fill all substrate coves and floor/wall transitions to a smooth finish and changes in plane using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to

fill in cove joints and floor/wall transitions <math>1/8''</math> (3 mm) in width. Apply a liberal coat\* of LATICRETE® Hydro Ban™ approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Drains** – Drains must be of the clamping ring type, with weepers as per ASME A112.6.3. Apply a liberal coat\* of LATICRETE Hydro Ban around and over the bottom half of drain clamping ring. Cover with a second liberal coat of LATICRETE Hydro Ban. When the LATICRETE Hydro Ban dries, apply a bead of LATICRETE Latasil™ where the LATICRETE Hydro Ban meets the drain throat. Install the top half of drain clamping ring.

**Pre-Treat Penetrations** – Allow for a minimum  $1/8''$  (3 mm) space between drains, pipes, lights, or other penetrations and surrounding ceramic tile, stone or brick. Pack any gaps around pipes, lights or other penetrations with a LATICRETE latex-fortified thin-set. Apply a liberal coat\* of LATICRETE Hydro Ban around penetration opening. Cover the first coat with a second liberal coat\* of LATICRETE Hydro Ban. Bring LATICRETE Hydro Ban up to level of tile or stone. When LATICRETE Hydro Ban has dried to the touch seal with LATICRETE Latasil.

**Main Application** – Allow any pre-treated areas to dry to the touch. Apply a liberal coat\* of LATICRETE Hydro Ban with a paint brush or heavy napped roller over substrate including pre-treated areas and allow to dry to the touch. Install another liberal coat\* of LATICRETE Hydro Ban over the first coat. Let the top coat of LATICRETE Hydro Ban dry to the touch approximately 1 – 2 hours at 70°F 21°C and 50% RH. When the top coat has dried to the touch inspect the surface for pinholes, voids, thin spots or other defects. LATICRETE Hydro Ban will dry to an olive green color when fully cured. Use additional LATICRETE Hydro Ban to seal any defects.

**Movement Joints** – Apply a liberal coat\* of LATICRETE Hydro Ban, approximately 8" (200 mm) wide over the areas. Then embed and loop the 6" (150 mm) wide LATICRETE Waterproofing/Anti-Fracture Fabric and allow the LATICRETE Hydro Ban liquid to bleed through. Immediately apply a second coat of LATICRETE Hydro Ban.

\* Dry coat thickness is 20 – 30 mil (0.02 - 0.03" or 0.5 – 0.8 mm); consumption per coat is approximately 0.01 gal/ft<sup>2</sup> (approx. 0.4 l/m<sup>2</sup>); coverage is approximately 100 ft<sup>2</sup> /gal (approx. 2.5 m<sup>2</sup> / l). LATICRETE® Waterproofing/Anti-Fracture Fabric can be used to pre-treat cracks, joints, curves, corners, drains, and penetrations with LATICRETE Hydro Ban™.

**Protection** – Provide protection for newly installed membrane, even if covered with a thin-bed ceramic tile, stone or brick installation against exposure to rain or other water for a minimum of 2 hours at 70°F (21°C) and 50% RH. For temperatures between 45°F and 69°F (7°C to 21°C) allow a minimum 24 hour cure period.

**Flood Testing** – Allow membrane to cure fully before flood testing, typically a minimum 2 hours at 70°F (21°C) and 50% RH. Cold conditions will require a longer curing time. For temperatures between 50°F and 69°F (10°C to 21°C) allow a minimum 24 hour cure period prior to flood testing. Please refer to LATICRETE TDS 169 "Flood Testing Procedures", available at [www.laticrete.com](http://www.laticrete.com) for flood testing requirements and procedures.

**Use the following LATICRETE System Materials**  
LATICRETE Hydro Ban

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 663.0, 663.5

LATICRETE MSDS: Hydro Ban, Fabric

GREENGUARD Certificate: Hydro Ban

LATICRETE Technical Data Sheets: 169, 203

C. Thin Bed Method: At the conclusion of all surface preparation and prior to the installation of tile, measure the pH level of the substrate. Tile work will not commence until the pH has a value of 10 or less. Install latex portland cement mortar in compliance with current revisions of ANSI A108.02 (3.11), A108.1B and ANSI A108.5. Use the appropriate trowel notch size to ensure proper bedding of the tile, brick or stone selected. Work the latex portland cement mortar into good contact with the substrate and comb with notched side of trowel. Spread only as much latex portland cement mortar as can be covered while the mortar surface is still wet and tacky. When installing large format (>8" x 8"/200 mm x 200 mm) tile/stone, rib/button/lug back tiles, pavers or sheet mounted ceramics/mosaics, spread latex portland cement mortar onto the back of (i.e. 'back-butter') each piece/sheet in addition to trowelling latex portland cement mortar over the substrate. Beat each piece/sheet into the latex portland cement mortar with a beating block or rubber mallet to insure full bedding and flatness. Allow installation to set until firm. Clean excess latex portland cement mortar from tile or stone face and joints between pieces.

### Use the following LATICRETE System Materials

LATICRETE 254 Platinum

### References

LATICRETE Data Sheet: 677.0

LATICRETE MSDS: 254

GREENGUARD Certificate: 254

LATICRETE Technical Data Sheets: 105, 115, 118, 129, 192, 199, 204

### D. Grouting or Pointing:

**NOTE TO SPECIFIER:** Select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Chemical Resistant, Water Cleanable Tile-Grouting Epoxy (ANSI A118.3): Follow manufacturer's recommendations for minimum cure time prior to grouting.

Store liquid components of LATICRETE® SpectraLOCK® PRO Grout\* for 24 hours at 70–80°F (21–27°C) prior to use to facilitate mixing and application. Substrate temperature must be 40–95°F (4–35°C). Verify joints are free of dirt, debris or grout spacers. Sponge or wipe dust/dirt off tile faces and remove water standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, stone or trim units that are not hot paraffin coated to facilitate cleaning. Cut open pouch and pour LATICRETE SpectraLOCK PRO Grout Part A Liquid into a clean mixing pail. Then open pouch and pour LATICRETE SpectraLOCK PRO Grout Part B Liquid into the mixing pail. Mix by hand or with a slow speed (<300 rpm) mixer until the two liquids are well blended. Then, while mixing, add LATICRETE SpectraLOCK PRO Grout Part C Powder and blend until uniform. Install LATICRETE SpectraLOCK PRO Grout in compliance with current revisions of ANSI A108.02 (3.13) and ANSI A108.6 (3.0–4.0). Spread using a sharp edged, hard rubber float and work grout into joints. Using strokes diagonal (at 45° angle) to the grout lines, pack joints full and free of voids/pits. Then hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to avoid pulling grout out of filled joints. Once excess grout is removed, a thin film/haze will be left. Initial cleaning of the remaining film/haze can begin approximately 20–30 minutes after grouting (wait longer at colder temperatures). Begin by mixing cleaning additive packet with 2 gallons (7.6 l) of clean water in a clean bucket to make cleaning solution. Dip a clean sponge into the bucket and then wring out cleaning solution until sponge is damp. Using a circular motion, lightly scrub grouted surfaces with the damp sponge to dissolve grout film/haze. Then drag sponge

diagonally over the scrubbed surfaces to remove froth. Rinse sponge frequently and change cleaning solution at least every 50 ft<sup>2</sup> (4.7m<sup>2</sup>). Discard sponges as they become "gummy" with residue. Within one (1) hour of finishing first cleaning, clean the same area again following the same procedure but utilizing a clean white scrub pad and fresh cleaning solution. Rinse scrub pad frequently. Drag a clean sponge diagonally over the scrubbed surfaces to remove froth. Use each side of sponge only once before rinsing and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Allow cleaned areas to dry and inspect tile/stone surface. For persistent grout film/haze (within 24 hours), repeat scrubbing procedure with undiluted white vinegar and clean pad. Rinse with clean water and allow surface to dry. Inspect grout joint for pinholes/voids and repair them with freshly mixed LATICRETE® SpectraLOCK® PRO Grout<sup>†</sup>. CAUTIONS: Do not use undiluted white vinegar on polished marble or limestone unless a test spot in an inconspicuous area indicates no change in finish appearance; do not use acid cleaners on epoxy grout less than 7 days old.

**Use the following LATICRETE® System Materials**  
LATICRETE SpectraLOCK PRO Grout

### References

LATICRETE Data Sheets: 685.0, 685.5

LATICRETE MSDS: Pro Part A, Pro Part B, Part C Powder, Cleaning Additive

GREENGUARD Certificate: PRO

LATICRETE Technical Data Sheets: 111, 198, 212, 400

2. Polymer Modified Cement Grout (ANSI A118.7): Allow ceramic tile, mosaics, pavers, brick or stone installation to cure a minimum of 24 hours at 70°F (21°C). Verify grout joints are free of dirt, debris or tile spacers. Sponge or wipe dust/dirt off veneer face and remove any water

standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, or trim units that are not hot paraffin coated to facilitate cleaning. Surface temperature must be between 40–90°F (4–32°C). Pour approximately 64 oz (1.9 l) of clean, potable water into a clean mixing container. Add a 25 lb. (11.3 kg) bag of LATICRETE PermaColor™ Grout<sup>†</sup> to the container while mixing. Mix by hand or with a slow speed mixer to a smooth, stiff consistency. Install latex fortified cement grout in compliance with current revisions of ANSI A108.1A (7.0 Grouting of tile), ANSI A108.02 (4.5 Cleaning tile) and ANSI A108.10. Dampen dry surfaces with clean water. Spread using a sharp edged, hard rubber float and work grout into joints. Using diagonal (at 45° angle to direction of grout line) strokes, pack joints full and free of voids/pits. Hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to reduce pulling grout out of filled joints. Initial cleaning can begin as soon as grout has become firm, typically 15–20 minutes after grouting at 70°F (21°C). Higher temperatures may require faster time to initial cleaning; wider joints or lower temperatures may require a longer time to initial cleaning. Begin initial cleaning by lightly dampening the entire grouted area with a damp sponge. Then wash clean the entire area with a damp (not wet) sponge. Drag a clean towel, dampened with water, or wipe a clean, dampened sponge, diagonally over the veneer face to remove any grout haze left after "squeegeeing." Rinse towel/sponge frequently and change rinse water at least every 200 ft<sup>2</sup> (19 m<sup>2</sup>). Repeat this cleaning sequence again if grout haze is still present. Allow grout joints to become firm. Buff surface of grout with clean coarse cloth. Inspect joint for pinholes/

voids and repair them with freshly mixed grout. Within 24 hours, check for remaining haze and remove it with warm soapy water and a nylon scrubbing pad, using a circular motion, to lightly scrub surfaces and dissolve haze/film. Do not use acid cleaners on latex portland cement grout less than 10 days old.

**NOTE TO SPECIFIER:** Select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Latex-portland cement sanded floor grout for joint widths  $\geq 1/16"$  (1.5 mm) and  $\leq 1/2"$  (12 mm);
2. Latex-portland cement unsanded grout for soft glazed tiles and soft/polished stone with joints widths  $\leq 1/8"$  (3 mm).

### Use the following LATICRETE System Materials

LATICRETE PermaColor Grout

### References

LATICRETE Data Sheets: 250.0

LATICRETE MSDS: 2500

GREENGUARD Certificates: 2500

LATICRETE Technical Data Sheets: 201, 400

E. Expansion and Control Joints: Architect must specify type of joint and show location and details on drawings.

Provide control or expansion joints as located in contract drawings and in full conformity, especially in width and depth, with architectural details.

1. Substrate joints must carry through, full width, to surface of tile, brick or stone.
2. Install expansion joints in tile, brick or stone work over construction/cold joints or control joints in substrates.
3. Install expansion joints where tile, brick or stone abut restraining surfaces (such as perimeter walls, curbs, columns), changes in plane and corners.

4. Joint width and spacing depends on application – follow TCNA “Handbook for Ceramic Tile Installation” Detail “EJ-171 Expansion Joints” or consult sealant manufacturer for recommendation based on project parameters.

5. Joint width:  $\geq 1/8"$  (3mm) and  $\leq 1"$  (25 mm).
6. Joint width: depth ~2:1 but joint depth must be  $\geq 1/8"$  (3mm) and  $\leq 1/2"$  (12 mm).

7. Layout (field defined by joints): 1:1 length: width is optimum but must be  $\leq 2:1$ . Remove all contaminants and foreign material from joint spaces/surfaces, such as dirt, dust, oil, water, frost, setting/grouting materials, sealers and old sealant/backer. Use LATICRETE Latasil™ 9118 Primer for underwater and permanent wet area applications, or for porous stone (e.g. limestone, sandstone etc...) installations. Install appropriate backing material (e.g. closed cell backer rod) based on expansion joint design and as specified in § 07920. Apply masking tape to face of tile, brick or stone veneer. Use caulking gun, or other applicator, to completely fill joints with sealant. Within 5–10 minutes of filling joint, ‘tool’ sealant surface to a smooth finish. Remove masking tape immediately after tooling joint. Wipe smears or excess sealant off the face of non-glazed tile, brick, stone or other absorptive surfaces immediately.

### Use the following LATICRETE System Materials

LATICRETE Latasil™

LATICRETE Latasil 9118 Primer

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303, EJ-01, EJ-02, EJ-03, EJ-04, EJ-05, EJ-06, EJ-07, EJ-08, EJ-09, EJ-10, EJ-11, EJ-12, EJ-13, EJ-14 (Sealant treatments only)

LATICRETE Data Sheets: 6200.1, 6528.1

LATICRETE MSDS: Latasil, Primer

LATICRETE Technical Data Sheets: 211, 252

F. Adjusting: Correction of defective work for a period of one (1) year following substantial completion, return to job and correct all defective work. Defective work includes, without limitation, tiles broken in normal abuse due to deficiencies in setting bed, loose tiles or grout, and all other defects which may develop as a result of poor workmanship.

### 3.5. Protection

Protect finished installation under provisions of §01500 and §01535. Close areas to other trades and traffic until tile being installed has set firmly. Keep floors installed with epoxy adhesive closed to traffic for 24 hrs at 70°F (21°C), and to heavy traffic for 48 hrs at 70°F (21°C) unless instructed differently by manufacturer. Use kneeling boards, or equivalent, to walk/work on newly tiled floors. Cure tile work in swimming pools, fountains and other continuous immersion applications for 10 days for epoxy based grout at 70°F (21°C) and 14 days for latex-portland cement based grout at 70°F (21°C) before filling installation with water. Extend period of protection at lower temperatures, below 60°F (16°C) and at high relative humidity (>70% RH) due to retarded set times of mortar/adhesives. Replace or restore work of other trades damaged or soiled by work under this section.

**Filling Pool** – Maintain a differential of 10°F (5.5°C) or less between the fill water and substrate temperatures during fill and drain cycles, and fill pool with water at rate of 2' (600 mm) per 24 hrs to allow gradual exposure to water pressure, thermal and moisture differentials. Initial alkalinity of pool water is very high from exposure to portland cement based finishes, grouts, and mortars; careful and frequent balance is required. Do not fill if potential thermal gradients exist (very cold source water, exterior pool exposed to several days of solar radiation, etc...).

**Emptying Pool** – empty pool water at rate of 2' (600 mm) per 24 hrs to prevent

hydrostatic pressure from de-laminating tiles of leveling mortar (in pools without waterproof membrane)

### Reference

LATICRETE Technical Data Sheet: 192

### 3.6 Cleaning

Clean excess mortar/epoxy from veneer surfaces with water before they harden and as work progresses. Do not contaminate open grout/caulk joints while cleaning. Sponge and wash veneers diagonally across joints. Do not use acids for cleaning. Polish with clean dry cloth. Remove surplus materials and leave premises broom clean.

### Part 4 – Health and Safety

The use of personal protection such as rubber gloves, suitable dust masks, safety glasses and industrial clothing is highly recommended. Discarded packaging, product wash and waste water should be disposed of as per local, state or federal regulations.

\* United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

### Part 3 – Execution

#### 3.1 Substrate Examination

A. Verify that surfaces to be covered with ceramic tile, mosaics, pavers, brick, stone, trim or waterproofing are:

1. Sound, rigid and conform to good design/engineering practices;
2. Systems, including the framing system and panels, over which tile or stone will be installed shall be in conformance with the International Residential Code (IRC) for residential applications, the International Building Code (IBC) for commercial applications, or applicable building codes. The project design should include the intended use and necessary allowances for the expected live load, concentrated load, impact load, and dead load including the weight of the finish and installation materials;
3. Clean and free of dust, dirt, oil, grease, sealers, curing compounds, laitance, efflorescence, form oil, loose plaster, paint, and scale;
4. Thin-set tile installations have a specified subsurface tolerance, for instance 1/4" in 10' (6 mm in 3 m) and 1/16" in 1' (1.5 mm in 300 mm), to conform with the ANSI specifications. Because thin-set is not intended to be used in truing or leveling the work of others, the subsurface typically should not vary by more than 1/16" over 1' (1.5 mm over 300 mm), nor more than 1/32" (0.8 mm) between adjoining edges where applicable (e.g. between sheets of exterior glue plywood or between adjacent concrete masonry units). Should the architect/designer require a more stringent tolerance (e.g. 1/8" in 10' [3 mm in 3 m]), the subsurface specification must reflect that tolerance, or the tile specification must include a specific and separate requirement to bring the 1/4" (6 mm) subsurface tolerance into compliance with the 1/8" (6 mm) tolerance desired;

5. Not leveled with gypsum or asphalt based compounds;

6. Dry as per American Society for Testing and Materials (ASTM) D4263 "Standard Test for Determining Moisture in Concrete by the Plastic Sheet Method."

B. Concrete surfaces shall also be:

1. Cured a minimum of 28 days at 70°F (21°C), including an initial seven (7) day period of wet curing;

**NOTE TO SPECIFIER: LATICRETE® Latex Portland Cement Mortars do not require a minimum cure time for concrete substrates or mortar beds;**

2. Wood float finished, or better, if the installation is to be done by the thin bed method;

C. Advise General Contractor and Architect of any surface or substrate conditions requiring correction before tile work commences. Beginning of work constitutes acceptance of substrate or surface conditions.

#### 3.2 Surface Preparation

A. Steel Surfaces

Steel or metal must be stainless or galvanized for this method. Wash steel surfaces with strong detergent to ensure that all manufacturing oils are removed; rinse completely and allow to dry. If possible, scuff steel surface with sandpaper or emery cloth and then re-wash steel, rinse completely and allow to dry.

B. Concrete Substrates

(Insert any Special Means of Preparation – In addition to the surface preparation requirements listed above; ...)

C. (List other Substrates as required and means of preparation as required)

(Insert any Special Means of Preparation – In addition to the surface preparation requirements listed above; ...)

### 3.3 Installation – Accessories

#### A. Waterproofing:

**NOTE TO SPECIFIER:** Adhesives/mastics, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent water penetration into occupied or storage spaces below.

Install the waterproofing membrane in compliance with current revisions of ANSI A108.01 (2.7 Waterproofing) and ANSI A108.13. Review the installation and plan the application sequence. Main application: apply product to steel substrate using 3/16" x 5/32" v-notch trowel. Allow the trowel to gauge the appropriate amount of material onto the surface using the v-notch side. Once material is applied, use the flat side of the trowel to "knock down" or flatten all ridges to produce a smooth, flat surface. Be sure to look for any "pinholes" or areas not covered by the material. If any voids appear, cover same or next day with LATAPOXY® Waterproof Flashing Mortar. Make sure all 90° angles at coves and corners are properly filled.

Drain and pipe penetrations: Make sure that pipes and drains are free from rust, oil, dirt, and any other contaminants that might prevent adequate bonding. For PVC penetrations, scarify pipe with sandpaper where membrane will be applied. Ensure that pipes and drains are securely fastened, stable, rigid, and do not allow movement. Pack all voids around pipes or penetrations with closed cell backer rod in appropriate manner. Apply LATAPOXY Waterproof Flashing Mortar directly to the pipe penetration, extending 3 inches above point of installation. No fabric or sealant is required. The membrane will bond directly to the pipe. Ensure that proper thickness of 1mm (40mil) is achieved. For metal drains, flash LATAPOXY Waterproof Flashing Mortar directly over metal flange of drain – do not cover the weep holes. A two-part clamping ring style drain should be used.

Use the following LATICRETE® System Materials LATAPOXY Waterproof Flashing Mortar

#### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 682.o, 682.5

LATICRETE MSDS: 24hr Part A, 24hr Part B, 24hr Part C

LATICRETE Technical Data Sheets: 169, 202

### 3.4 Installation – Tile, Brick and Stone

- A. General: Install in accordance with current versions of American National Standards Institute, Inc. (ANSI) "A108 American National Standard Specifications for Installation of Ceramic Tile" and TCNA "Handbook for Ceramic Tile Installation." Cut and fit ceramic tile, brick or stone neatly around corners, fittings, and obstructions. Perimeter pieces to be minimum half tile, brick or stone. Chipped, cracked, split pieces and edges are not acceptable. Make joints even, straight, plumb and of uniform width to tolerance +/- 1/16" over 8' (1.5 mm in 2.4 m). Install divider strips at junction of flooring and dissimilar materials.
- B. Thin Bed Method: Install epoxy adhesive in compliance with current revisions of ANSI A108.02 (3.11) and ANSI A108.6. Use the appropriate trowel notch size to ensure proper bedding of the tile or stone selected. Work the epoxy adhesive into good contact with the substrate and comb with notched side of trowel. Spread only as much epoxy adhesive as can be covered while the adhesive surface is still wet and tacky. When installing large format (>8" x 8"/200 mm x 200 mm) tile/stone, rib/button/lug back tiles, pavers or sheet mounted ceramics/mosaics, spread epoxy adhesive onto the back of (i.e. 'back-butter') each piece/sheet in addition to trowelling epoxy adhesive over the substrate. Beat each piece/sheet into the epoxy adhesive with a beating block or rubber mallet to insure full

bedding and flatness. Allow installation to set until firm. Clean excess epoxy adhesive from tile or stone face and joints between pieces.

### Use the following LATICRETE System Materials

LATAPOXY 300 Adhesive

### References

LATICRETE Data Sheets: 633.0

LATICRETE MSDS: 300 Part A, 300 Part B, 300 Part C

GREENGUARD Certificate: 300

LATICRETE Technical Data Sheets: 105, 146, 199

C. Grouting or Pointing:

**NOTE TO SPECIFIER:** Select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Chemical Resistant, Water Cleanable Tile-Grouting Epoxy (ANSI A118.3): Follow manufacturer's recommendations for minimum cure time prior to grouting. Store liquid components of LATICRETE® SpectraLOCK® PRO Grout\*\* for 24 hours at 70–80°F (21–27°C) prior to use to facilitate mixing and application. Substrate temperature must be 40–95°F (4–35°C). Verify joints are free of dirt, debris or grout spacers. Sponge or wipe dust/dirt off tile faces and remove water standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, stone or trim units that are not hot paraffin coated to facilitate cleaning. Cut open pouch and pour LATICRETE SpectraLOCK PRO Grout Part A Liquid into a clean mixing pail. Then open pouch and pour LATICRETE SpectraLOCK PRO Grout Part B Liquid into the mixing pail. Mix by hand or with a slow speed (<300 rpm) mixer until the two liquids are well blended. Then, while mixing, add LATICRETE SpectraLOCK PRO Grout Part C Powder and blend until uniform. Install LATICRETE SpectraLOCK PRO Grout in compliance with current revisions of ANSI A108.02 (3.13) and ANSI A108.6

(3.0–4.0). Spread using a sharp edged, hard rubber float and work grout into joints. Using strokes diagonal (at 45° angle) to the grout lines, pack joints full and free of voids/pits. Then hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to avoid pulling grout out of filled joints. Once excess grout is removed, a thin film/haze will be left. Initial cleaning of the remaining film/haze can begin approximately 20–30 minutes after grouting (wait longer at colder temperatures). Begin by mixing cleaning additive packet with 2 gallons (7.6 l) of clean water in a clean bucket to make cleaning solution. Dip a clean sponge into the bucket and then wring out cleaning solution until sponge is damp. Using a circular motion, lightly scrub grouted surfaces with the damp sponge to dissolve grout film/haze. Then drag sponge diagonally over the scrubbed surfaces to remove froth. Rinse sponge frequently and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Discard sponges as they become "gummy" with residue. Within one (1) hour of finishing first cleaning, clean the same area again following the same procedure but utilizing a clean white scrub pad and fresh cleaning solution. Rinse scrub pad frequently. Drag a clean sponge diagonally over the scrubbed surfaces to remove froth. Use each side of sponge only once before rinsing and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Allow cleaned areas to dry and inspect tile/stone surface. For persistent grout film/haze (within 24 hours), repeat scrubbing procedure with undiluted white vinegar and clean pad. Rinse with clean water and allow surface to dry. Inspect grout joint for pinholes/voids and repair them with freshly mixed LATICRETE SpectraLOCK PRO Grout. CAUTIONS: Do not use undiluted white vinegar on polished marble or limestone unless a test spot in an inconspicuous area indicates no change in finish appearance; do not use acid cleaners on epoxy grout less than 7 days old.

### Use the following LATICRETE® System Materials

LATICRETE® SpectraLOCK® PRO Grout†

#### References

LATICRETE Data Sheets: 685.0, 685.5

LATICRETE MSDS: Pro Part A, Pro Part B, Part C Powder, Cleaning Additive

GREENGUARD Certificate: PRO

LATICRETE Technical Data Sheets: 111, 198, 212, 400

#### D. Expansion and Control Joints:

**NOTE TO SPECIFIER:** The chemical resistance of joint sealants for ceramic tile, mosaics, pavers, brick and stone will typically depend on:

1. Reagent composition and/or concentration;

2. Temperature;

3. Duration of exposure.

Review manufacturer's performance data and recommendations, in the context of expected chemical exposures.

Provide control or expansion joints as located in contract drawings and in full conformity, especially in width and depth, with architectural details.

1. Substrate joints must carry through, full width, to surface of tile, brick or stone.
2. Install expansion joints in tile, brick or stone work over construction/cold joints or control joints in substrates.
3. Install expansion joints where tile, brick or stone abut restraining surfaces (such as perimeter walls, curbs, columns), changes in plane and corners.
4. Joint width and spacing depends on application – follow TCNA "Handbook for Ceramic Tile Installation" Detail "EJ-171 Expansion Joints" or consult sealant manufacturer for recommendation based on project parameters.
5. Joint width:  $\geq 1/8"$  (3 mm) and  $\leq 1"$  (25 mm).
6. Joint width: depth  $\sim 2:1$  but joint depth must be  $\geq 1/8"$  (3 mm) and  $\leq 1/2"$  (12 mm).

7. Layout (field defined by joints): 1:1 length: width is optimum but must be  $\leq 2:1$ . Remove all contaminants and foreign material from joint spaces/surfaces, such as dirt, dust, oil, water, frost, setting/grouting materials, sealers and old sealant/backer. Use LATICRETE Latasil™ 9118 Primer for underwater and permanent wet area applications, or for porous stone (e.g. limestone, sandstone etc...) installations. Install appropriate backing material (e.g. closed cell backer rod) based on expansion joint design and as specified in § 07920. Apply masking tape to face of tile, brick or stone veneer. Use caulking gun, or other applicator, to completely fill joints with sealant. Within 5–10 minutes of filling joint, 'tool' sealant surface to a smooth finish. Remove masking tape immediately after tooling joint. Wipe smears or excess sealant off the face of non-glazed tile, brick, stone or other absorptive surfaces immediately.

### Use the following LATICRETE System Materials

LATICRETE Latasil™

LATICRETE Latasil 9118 Primer

#### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303, EJ-03, EJ-04, EJ-05, EJ-06, EJ-07, EJ-09, EJ-11, EJ-12, EJ-13, EJ-14 (Sealant treatments only)

LATICRETE Data Sheets: 6200.1, 6528.1

LATICRETE MSDS: Latasil, Primer

LATICRETE Technical Data Sheets: 211, 252

- E. Adjusting: Correction of defective work for a period of one year following substantial completion, return to job and correct all defective work. Defective work includes, without limitation, tiles broken in normal abuse due to deficiencies in setting bed, loose tiles or grout, and all other defects which may develop as a result of poor workmanship.

### 3.5 Cleaning

Clean excess mortar/epoxy from veneer surfaces with water before they harden and as work progresses. Do not contaminate open grout/caulk joints while cleaning. Sponge and wash veneers diagonally across joints. Do not use acids for cleaning. Polish with clean dry cloth. Remove surplus materials and leave premises broom clean.

### 3.6 Protection

A. Protect finished installation under provisions of §01500 and §01535. Close areas to other trades and traffic until tile being installed has set firmly. Keep traffic off horizontal portland cement thick bed mortar installations for at least 72 hours at 70°F (21°C).

B. Keep floors installed with epoxy adhesive closed to traffic for 24 hrs at 70°F (21°C), and to heavy traffic for 48 hours at 70°F (21°C) unless instructed differently by manufacturer. Use kneeling boards, or equivalent, to walk/work on newly tiled floors. Cure tile work in swimming pools, fountains and other continuous immersion applications for 10 days for epoxy based grout and 14 days for latex portland cement based grout at 70°F (21°C) before flood testing or filling installation with water. Extend period of protection of tile work at lower temperatures, below 60°F (15°C), and at high relative humidity (>70% RH) due to retarded set times of mortar/adhesives. Replace or restore work of other trades damaged or soiled by work under this section.

C. Filling Pool – Maintain a differential of 10°F (5.5°C) or less between the fill water and substrate temperatures during fill and drain cycles, and fill pool with water at rate of 2' (600 mm) per 24 hrs to allow gradual exposure to water pressure, thermal and moisture differentials. Do not fill if potential thermal gradients exist (very cold source water, exterior pool exposed to several days of solar radiation, etc...).

D. Emptying Pool – empty pool water at rate of 2' (600 mm) per 24 hrs to prevent hydrostatic pressure from de-laminating tiles of leveling mortar (in pools without waterproof membrane).

### Part 4 – Health and Safety

The use of personal protection such as rubber gloves, suitable dust masks, safety glasses and industrial clothing is highly recommended. Discarded packaging, product wash and waste water should be disposed of as per local, state or federal regulations.

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

### Part 3 – Execution

#### 3.1 Substrate Examination

A. Verify that surfaces to be covered with ceramic tile, mosaics, pavers, brick, stone, trim or waterproofing are:

1. Sound, rigid and conform to good design/engineering practices;
2. Systems, including the framing system and panels, over which tile or stone will be installed shall be in conformance with the International Residential Code (IRC) for residential applications, the International Building Code (IBC) for commercial applications, or applicable building codes. The project design should include the intended use and necessary allowances for the expected live load, concentrated load, impact load, and dead load including the weight of the finish and installation materials;
3. Clean and free of dust, dirt, oil, grease, sealers, curing compounds, laitance, efflorescence, form oil, loose plaster, paint, and scale;
4. Thin-set tile installations have a specified subsurface tolerance, for instance 1/4" in 10' (6 mm in 3 m) and 1/16" in 1' (1.5 mm in 300 mm), to conform with the ANSI specifications. Because thin-set is not intended to be used in truing or leveling the work of others, the subsurface typically should not vary by more than 1/16" over 1' (1.5 mm over 300 mm), nor more than 1/32" (0.8 mm) between adjoining edges where applicable (e.g. between sheets of exterior glue plywood or between adjacent concrete masonry units). Should the architect/designer require a more stringent tolerance (e.g. 1/8" in 10' [3 mm in 3 m]), the subsurface specification must reflect that tolerance, or the tile specification must include a specific and separate requirement to bring the 1/4" (6 mm) subsurface tolerance into compliance with the 1/8" (6 mm) tolerance desired;

5. Not leveled with gypsum or asphalt based compounds;

6. Dry as per American Society for Testing and Materials (ASTM) D4263 "Standard Test for Determining Moisture in Concrete by the Plastic Sheet Method."

B. Concrete surfaces shall also be:

1. Cured a minimum of 28 days at 70°F (21°C), including an initial seven (7) day period of wet curing;

**NOTE TO SPECIFIER: LATICRETE® latex portland cement mortars do not require a minimum cure time for concrete substrates or mortar beds;**

2. Wood float finished, or better, if the installation is to be done by the thin bed method;

C. Advise General Contractor and Architect of any surface or substrate conditions requiring correction before tile work commences. Beginning of work constitutes acceptance of substrate or surface conditions.

#### 3.2 Surface Preparation

A. Steel Surfaces

Wash steel surfaces with strong detergent to ensure that all manufacturing oils are removed; rinse completely and allow to dry.

B. Concrete Substrates

(Insert any Special Means of Preparation in addition to the surface preparation requirements listed in § 3.1;...)

C. (List other Substrates as required and means of preparation as required)

(Insert any Special Means of Preparation in addition to the surface preparation requirements listed in § 3.1;...)

**NOTE TO SPECIFIER: Edit substrate and preparation section based on project specific surfaces and conditions.**

#### 3.3 Installation – Accessories

A. Waterproofing:

**NOTE TO SPECIFIER: Adhesives/mastics, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent water penetration into occupied or storage spaces below.**

Install the waterproofing membrane in compliance with current revisions of ANSI A108.1 (2.7 Waterproofing) and ANSI A108.13. Review the installation and plan the application sequence. Pre-cut LATICRETE® Waterproofing/Anti-Fracture Fabric (if required), allowing 2" (50 mm) for overlap at ends and sides to fit the areas as required. Roll up the pieces for easy handling and placement. Shake or stir LATICRETE Hydro Ban™ before using.

**Pre-Treat Cracks and Joints** – Fill all substrate cracks, cold joints and control joints to a smooth finish using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in non-structural joints and cracks. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Coves and Floor/Wall Intersections** – Fill all substrate coves and floor/wall transitions to a smooth finish and changes in plane using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in cove joints and floor/wall transitions <math><1/8''</math> (3 mm) in width. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Drains** – Drains must be of the clamping ring type, with weepers as per ASME A112.6.3. Apply a liberal coat\* of LATICRETE Hydro Ban around and over the bottom half of drain clamping ring. Cover with a second liberal coat of LATICRETE Hydro Ban. When the LATICRETE Hydro Ban dries, apply a bead of LATICRETE Latasil™ where the LATICRETE Hydro Ban meets the drain throat. Install the top half of drain clamping ring.

**Pre-Treat Penetrations** – Allow for a minimum 1/8" (3 mm) space between drains, pipes, lights, or other penetrations and surrounding ceramic tile, stone or brick. Pack any gaps around pipes, lights or other penetrations with a LATICRETE latex-fortified thin-set. Apply a liberal coat\* of LATICRETE Hydro Ban around penetration opening. Cover the first coat with a second liberal coat\* of LATICRETE Hydro Ban. Bring LATICRETE Hydro Ban up to level of tile or stone. When LATICRETE Hydro Ban has dried to the touch seal with LATICRETE Latasil.

**Main Application** – Allow any pre-treated areas to dry to the touch. Apply a liberal coat\* of LATICRETE Hydro Ban with a paint brush or heavy napped roller over substrate including pre-treated areas and allow to dry to the touch. Install another liberal coat\* of LATICRETE Hydro Ban over the first coat. Let the top coat of LATICRETE Hydro Ban dry to the touch approximately 1 – 2 hours at 70°F (21°C) and 50% RH. When the top coat has dried to the touch inspect the surface for pinholes, voids, thin spots or other defects. LATICRETE Hydro Ban will dry to an olive green color when fully cured. Use additional LATICRETE Hydro Ban to seal any defects.

**Movement Joints** – Apply a liberal coat\* of LATICRETE Hydro Ban, approximately 8" (200 mm) wide over the areas. Then embed and loop the 6" (150 mm) wide LATICRETE Waterproofing/Anti-Fracture Fabric and allow the LATICRETE Hydro Ban liquid to bleed through. Immediately apply a second coat of LATICRETE Hydro Ban.

\* Dry coat thickness is 20 – 30 mil (0.02 – 0.03" or 0.5 – 0.8 mm); consumption per coat is approximately 0.01 gal/ft<sup>2</sup> (approx. 0.4 l/m<sup>2</sup>); coverage is approximately 100 ft<sup>2</sup>/gal (approx. 2.5 m<sup>2</sup>/l). LATICRETE® Waterproofing/Anti-Fracture Fabric can be used to pre-treat cracks, joints, curves, corners, drains, and penetrations with LATICRETE Hydro Ban™.

**Protection** – Provide protection for newly installed membrane, even if covered with a thin-bed ceramic tile, stone or brick installation against exposure to rain or other water for a minimum of 2 hours at 70°F (21°C) and 50% RH. For temperatures between 45°F and 69°F (7°C to 21°C) allow a minimum 24 hour cure period.

**Flood Testing** – Allow membrane to cure fully before flood testing, typically a minimum 2 hours at 70°F (21°C) and 50% RH. Cold conditions will require a longer curing time. For temperatures between 50°F and 69°F (10°C to 21°C) allow a minimum 24 hour cure period prior to flood testing. Please refer to LATICRETE TDS 169 “Flood Testing Procedures”, available at [www.laticrete.com](http://www.laticrete.com) for flood testing requirements and procedures.

**Use the following LATICRETE® System Materials**  
LATICRETE® Hydro Ban™

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 663.0, 663.5

LATICRETE MSDS: Hydro Ban, Fabric

GREENGUARD Certificate: Hydro Ban

LATICRETE Technical Data Sheets: 169, 203

### 3.4 Installation – Tile, Brick and Stone

A. General: Install in accordance with current versions of American National Standards Institute, Inc. (ANSI) “A108 American National Standard Specifications for Installation of Ceramic Tile” and TCNA “Handbook for Ceramic Tile Installation.” Cut and fit ceramic tile, brick or stone neatly around corners, fittings, and obstructions. Perimeter pieces to be minimum half tile, brick or stone. Chipped, cracked, split pieces and edges are not acceptable. Make joints even, straight, plumb and of uniform width to tolerance +/- 1/16" over 8' (1.5 mm in 2.4 m). Install divider strips at junction of flooring and dissimilar materials.

B. Lath and Plaster Method: Tack weld or mechanically fasten 3.4# diamond metal lath complying with the current revision of ANSI A108.1 (3.3 Requirements for lathing and portland cement plastering), ANSI A108.02 (3.6 Metal lath) and A108.1A (1.0 – 1.2, 1.4, and 5.1). Apply latex portland cement mortar as scratch/leveling coat over wire lath, concrete or masonry in compliance with current revision of ANSI A108.01 (3.3-5.1) and A108.1A (1.4). Float surface of scratch/leveling coat plumb, true and allow mortar to set until firm. For installation of tile, brick or stone, follow Thin Bed Method (§ 3.4D).

### Use the following LATICRETE System Materials

LATICRETE 3701 Fortified Mortar Bed

### References

LATICRETE Data Sheets: 100.0

LATICRETE MSDS: 3701FMB

GREENGUARD Certificates: 3701FMB

LATICRETE Technical Data Sheets: 105, 106, 114, 118, 122, 130, 199, 204

### C. Waterproofing:

**NOTE TO SPECIFIER:** Adhesives, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent penetration by wind blown rain and other moisture through façades/walls. In addition to installing waterproofing membrane where required, provide proper architectural detailing (water-stops, flashings, weeps, etc.) to conduct water to the building exterior, especially at critical areas such as window heads/sills, penetrations and parapet walls.

Install the waterproofing membrane in compliance with current revisions of ANSI A108.1 (2.7 Waterproofing) and ANSI A108.13. Review the installation and plan the application sequence. Pre-cut LATICRETE Waterproofing/Anti-Fracture Fabric (if required), allowing 2" (50 mm) for overlap at ends and sides to fit the areas as required. Roll up the pieces for easy handling and placement. Shake or stir LATICRETE Hydro Ban before using.

**Pre-Treat Cracks and Joints** – Fill all substrate cracks, cold joints and control joints to a smooth finish using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in non-structural joints and cracks. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Coves and Floor/Wall Intersections** – Fill all substrate coves and floor/wall transitions to a smooth finish and changes in plane using a LATICRETE latex-fortified thin-set. Alternatively, a liberal coat\* of LATICRETE Hydro Ban applied with a paint brush or trowel may be used to fill in cove joints and floor/wall transitions <1/8" (3 mm) in width. Apply a liberal coat\* of LATICRETE Hydro Ban approximately 8" (200 mm) wide over substrate cracks, cold joints, and control joints using a paint brush or heavy napped paint roller.

**Pre-Treat Drains** – Drains must be of the clamping ring type, with weepers as per ASME A112.6.3. Apply a liberal coat\* of LATICRETE Hydro Ban around and over the bottom half of drain clamping ring. Cover with a second liberal coat of LATICRETE Hydro Ban. When the LATICRETE Hydro Ban dries, apply a bead of LATICRETE Latasil™ where the LATICRETE Hydro Ban meets the drain throat. Install the top half of drain clamping ring.

**Pre-Treat Penetrations** – Allow for a minimum 1/8" (3 mm) space between drains, pipes, lights, or other penetrations and surrounding ceramic tile, stone or brick. Pack any gaps around pipes, lights or other penetrations with a LATICRETE latex-fortified thin-set. Apply a liberal coat\* of LATICRETE Hydro Ban around penetration opening. Cover the first coat with a second liberal coat\* of LATICRETE Hydro Ban. Bring LATICRETE Hydro Ban up to level of tile or stone. When LATICRETE Hydro Ban has dried to the touch seal with LATICRETE Latasil.

**Main Application** – Allow any pre-treated areas to dry to the touch. Apply a liberal coat\* of LATICRETE Hydro Ban with a paint brush or heavy napped roller over substrate including pre-treated areas and allow to dry to the touch. Install another liberal coat\* of LATICRETE Hydro Ban over the first coat. Let the top coat of LATICRETE Hydro Ban dry to the touch approximately 1 – 2 hours at 70°F (21°C) and 50% RH. When the top coat has dried to the touch inspect the surface for pinholes, voids, thin spots or other defects. LATICRETE Hydro Ban will dry to an olive green color when fully cured. Use additional LATICRETE Hydro Ban to seal any defects.

**Movement Joints** – Apply a liberal coat\* of LATICRETE Hydro Ban, approximately 8" (200 mm) wide over the areas. Then embed and loop the 6" (150 mm) wide LATICRETE Waterproofing/Anti-Fracture Fabric and allow the LATICRETE Hydro Ban liquid to bleed through. Immediately apply a second coat of LATICRETE Hydro Ban.

\* Dry coat thickness is 20 – 30 mil (0.02 – 0.03" or 0.5 – 0.8mm); consumption per coat is approximately 0.01 gal/ft<sup>2</sup> (approx. 0.4 l/m<sup>2</sup>); coverage is approximately 100 ft<sup>2</sup>/gal (approx. 2.5 m<sup>2</sup>/l). LATICRETE® Waterproofing/Anti-Fracture Fabric can be used to pre-treat cracks, joints, curves, corners, drains, and penetrations with LATICRETE Hydro Ban™.

**Protection** – Provide protection for newly installed membrane, even if covered with a thin-bed ceramic tile, stone or brick installation against exposure to rain or other water for a minimum of 2 hours at 70°F (21°C) and 50% RH. For temperatures between 45°F and 69°F (7°C to 21°C) allow a minimum 24 hour cure period.

**Flood Testing** – Allow membrane to cure fully before flood testing, typically a minimum 2 hours at 70°F (21°C) and 50% RH. Cold conditions will require a longer curing time. For temperatures between 50°F and 69°F (10°C to 21°C) allow a minimum 24 hour cure period prior to flood testing. Please refer to LATICRETE TDS 169 "Flood Testing Procedures",

available at [www.laticrete.com](http://www.laticrete.com) for flood testing requirements and procedures.

### Use the following LATICRETE® System Materials

LATICRETE® Hydro Ban™

#### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 663.0, 663.5

LATICRETE MSDS: Hydro Ban, Fabric

GREENGUARD Certificate: Hydro Ban

LATICRETE Technical Data Sheets: 169, 203

D. Thin Bed Method: At the conclusion of all surface preparation and prior to the installation of tile, measure the pH level of the substrate. Tile work will not commence until the pH has a value of 10 or less. Install latex portland cement mortar in compliance with current revisions of ANSI A108.02 (3.11), A108.1B and ANSI A108.5. Use the appropriate trowel notch size to ensure proper bedding of the tile, brick or stone selected. Work the latex portland cement mortar into good contact with the substrate and comb with notched side of trowel. Spread only as much latex portland cement mortar as can be covered while the mortar surface is still wet and tacky. When installing large format (>8" x 8"/200 mm x 200 mm) tile/stone, rib/button/lug back tiles, pavers or sheet mounted ceramics/mosaics, spread latex portland cement mortar onto the back of (i.e. 'back-butter') each piece/sheet in addition to trowelling latex portland cement mortar over the substrate. Beat each piece/sheet into the latex portland cement mortar with a beating block or rubber mallet to insure full bedding and flatness. Allow installation to set until firm. Clean excess latex portland cement mortar from tile or stone face and joints between pieces.

### Use the following LATICRETE System Materials

LATICRETE 254 Platinum

#### References

LATICRETE Data Sheet: 677.0

LATICRETE MSDS: 254

GREENGUARD Certificate: 254

LATICRETE Technical Data Sheets: 105, 129, 199, 204

E. Grouting or Pointing:

**NOTE TO SPECIFIER:** Select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Chemical Resistant, Water Cleanable Tile-Grouting Epoxy (ANSI A118.3): Follow manufacturer's recommendations for minimum cure time prior to grouting. Store liquid components of LATICRETE SpectraLOCK® PRO Grout\*\* for 24 hours at 70–80°F (21–27°C) prior to use to facilitate mixing and application. Substrate temperature must be 40–95°F (4–35°C). Verify joints are free of dirt, debris or grout spacers. Sponge or wipe dust/dirt off tile faces and remove water standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, stone or trim units that are not hot paraffin coated to facilitate cleaning. Cut open pouch and pour LATICRETE SpectraLOCK PRO Grout Part A Liquid into a clean mixing pail. Then open pouch and pour LATICRETE SpectraLOCK PRO Grout Part B Liquid into the mixing pail. Mix by hand or with a slow speed (<300 rpm) mixer until the two liquids are well blended. Then, while mixing, add LATICRETE SpectraLOCK PRO Grout Part C Powder and blend until uniform. Install LATICRETE SpectraLOCK PRO Grout in compliance with current revisions of ANSI A108.02 (3.13) and ANSI A108.6 (3.0–4.0). Spread using a sharp edged, hard rubber float and work grout into joints. Using strokes diagonal (at 45° angle) to the grout lines, pack joints full and free of voids/pits. Then hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to

avoid pulling grout out of filled joints. Once excess grout is removed, a thin film/haze will be left. Initial cleaning of the remaining film/haze can begin approximately 20–30 minutes after grouting (wait longer at colder temperatures). Begin by mixing cleaning additive packet with 2 gallons (7.6 l) of clean water in a clean bucket to make cleaning solution. Dip a clean sponge into the bucket and then wring out cleaning solution until sponge is damp. Using a circular motion, lightly scrub grouted surfaces with the damp sponge to dissolve grout film/haze. Then drag sponge diagonally over the scrubbed surfaces to remove froth. Rinse sponge frequently and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Discard sponges as they become "gummy" with residue. Within one (1) hour of finishing first cleaning, clean the same area again following the same procedure but utilizing a clean white scrub pad and fresh cleaning solution. Rinse scrub pad frequently. Drag a clean sponge diagonally over the scrubbed surfaces to remove froth. Use each side of sponge only once before rinsing and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Allow cleaned areas to dry and inspect tile/stone surface. For persistent grout film/haze (within 24 hrs), repeat scrubbing procedure with undiluted white vinegar and clean pad. Rinse with clean water and allow surface to dry. Inspect grout joint for pinholes/voids and repair them with freshly mixed LATICRETE SpectraLOCK PRO Grout. CAUTIONS: Do not use undiluted white vinegar on polished marble or limestone unless a test spot in an inconspicuous area indicates no change in finish appearance; do not use acid cleaners on epoxy grout less than 7 days old.

### Use the following LATICRETE System Materials

LATICRETE SpectraLOCK PRO Grout

### References

LATICRETE Data Sheets: 685.o, 685.5

LATICRETE MSDS: Pro Part A, Pro Part B, Part C Powder, Cleaning Additive

GREENGUARD Certificate: PRO

LATICRETE Technical Data Sheets: 111, 198, 212, 400

- F. Expansion and Control Joints: Provide control or expansion joints as located in contract drawings and in full conformity, especially in width and depth, with architectural details.
1. Substrate joints must carry through, full width, to surface of tile, brick or stone.
  2. Install expansion joints in tile, brick or stone work over construction/cold joints or control joints in substrates.
  3. Install expansion joints where tile, brick or stone abut restraining surfaces (such as perimeter walls, curbs, columns), changes in plane and corners.
  4. Joint width and spacing depends on application – follow TCNA "Handbook for Ceramic Tile Installation" Detail "EJ-171 Expansion Joints" or consult sealant manufacturer for recommendation based on project parameters.
  5. Joint width:  $\geq 1/8"$  (3 mm) and  $\leq 1"$  (25 mm).
  6. Joint width: depth ~2:1 but joint depth must be  $\geq 1/8"$  (3 mm) and  $\leq 1/2"$  (12 mm).
  7. Layout (field defined by joints): 1:1 length: width is optimum but must be  $\leq 2:1$ . Remove all contaminants and foreign material from joint spaces/surfaces, such as dirt, dust, oil, water, frost, setting/grouting materials, sealers and old sealant/backer. Use LATICRETE Latasil™ 9118 Primer for underwater and permanent wet area applications, or for porous stone (e.g. limestone, sandstone etc...) installations. Install appropriate backing material (e.g. closed cell backer rod) based on expansion joint design and as specified in § 07920. Apply masking tape to face of tile, brick or

stone veneer. Use caulking gun, or other applicator, to completely fill joints with sealant. Within 5–10 minutes of filling joint, ‘tool’ sealant surface to a smooth finish. Remove masking tape immediately after tooling joint. Wipe smears or excess sealant off the face of non-glazed tile, brick, stone or other absorptive surfaces immediately.

### Use the following LATICRETE® System Materials

LATICRETE Latasil™

LATICRETE Latasil 9118 Primer

### References

LATICRETE Detail Drawings: WP300, EJ-01, EJ-02, EJ-05, EJ-06, EJ-08, EJ-10 (Sealant treatments only)

LATICRETE Data Sheets: 6200.1, 6528.1

LATICRETE MSDS: Latasil, Primer

LATICRETE Technical Data Sheets: 211, 252

G. Adjusting: Correction of defective work for a period of one (1) year following substantial completion, return to job and correct all defective work. Defective work includes, without limitation, tiles broken in normal abuse due to deficiencies in setting bed, loose tiles or grout, and all other defects which may develop as a result of poor workmanship.

### 3.5 Cleaning

Clean excess mortar/epoxy from veneer surfaces with water before they harden and as work progresses. Do not contaminate open grout/caulk joints while cleaning. Sponge and wash veneers diagonally across joints. Do not use acids for cleaning. Polish with clean dry cloth. Remove surplus materials and leave premises broom clean.

### 3.6 Protection

- A. Protect finished installation under provisions of §01500 and §01535. Close areas to other trades and traffic until tile being installed has set firmly. Keep traffic off horizontal portland cement thick bed mortar installations for at least 72 hours at 70°F (21°C).
- B. Keep floors installed with epoxy adhesive closed to traffic for 24 hrs. at 70°F (21°C), and to heavy traffic for 48 hours at 70°F (21°C) unless instructed differently by manufacturer. Use kneeling boards, or equivalent, to walk/work on newly tiled floors. Cure tile work in swimming pools, fountains and other continuous immersion applications for 10 days for epoxy based grout and 14 days for latex portland cement based grout at 70°F (21°C) before flood testing or filling installation with water. Extend period of protection of tile work at lower temperatures, below 60°F (15°C), and at high relative humidity (>70% RH) due to retarded set times of mortar/adhesives. Replace or restore work of other trades damaged or soiled by work under this section.
- C. Filling Pool – Maintain a differential of 10°F (5.5°C) or less between the fill water and substrate temperatures during fill and drain cycles, and fill pool with water at rate of 2' (600 mm) per 24 hrs to allow gradual exposure to water pressure, thermal and moisture differentials. Initial alkalinity of pool water is very high from exposure to portland cement based finishes, grouts, and mortars; careful and frequent balance is required. Do not fill if potential thermal gradients exist (very cold source water, exterior pool exposed to several days of solar radiation, etc...).
- D. Emptying Pool – empty pool water at rate of 2' (600 mm) per 24 hrs to prevent hydrostatic pressure from de-laminating tiles of leveling mortar (in pools without waterproof membrane).

### Part 4 – Health and Safety

The use of personal protection such as rubber gloves, suitable dust masks, safety glasses and industrial clothing is highly recommended. Discarded packaging, product wash and waste water should be disposed of as per local, state or federal regulations.

\* United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

### Part 3 – Execution

#### 3.1 Substrate Examination

A. Verify that surfaces to be covered with ceramic tile, mosaics, pavers, brick, stone, trim or waterproofing are:

1. Sound, rigid and conform to good design/engineering practices;
2. Systems, including the framing system and panels, over which tile or stone will be installed shall be in conformance with the International Residential Code (IRC) for residential applications, the International Building Code (IBC) for commercial applications, or applicable building codes. The project design should include the intended use and necessary allowances for the expected live load, concentrated load, impact load, and dead load including the weight of the finish and installation materials;
3. Clean and free of dust, dirt, oil, grease, sealers, curing compounds, laitance, efflorescence, form oil, loose plaster, paint, and scale;
4. Thin-set tile installations have a specified subsurface tolerance, for instance 1/4" in 10' (6 mm in 3 m) and 1/16" in 1' (1.5 mm in 300 mm), to conform with the ANSI specifications. Because thin-set is not intended to be used in truing or leveling the work of others, the subsurface typically should not vary by more than 1/16" over 1' (1.5 mm over 300 mm), nor more than 1/32" (0.8 mm) between adjoining edges where applicable (e.g. between sheets of exterior glue plywood or between adjacent concrete masonry units). Should the architect/designer require a more stringent tolerance (e.g. 1/8" in 10' [3 mm in 3 m]), the subsurface specification must reflect that tolerance, or the tile specification must include a specific and separate requirement to bring the 1/4" (6 mm) subsurface tolerance into compliance with the 1/8" (6 mm) tolerance desired;

5. Not leveled with gypsum or asphalt based compounds;

6. Dry as per American Society for Testing and Materials (ASTM) D4263 "Standard Test for Determining Moisture in Concrete by the Plastic Sheet Method."

B. Concrete surfaces shall also be:

1. Cured a minimum of 28 days at 70°F (21°C), including an initial seven (7) day period of wet curing;

**NOTE TO SPECIFIER: LATICRETE® latex portland cement mortars do not require a minimum cure time for concrete substrates or mortar beds;**

2. Wood float finished, or better, if the installation is to be done by the thin bed method;

C. Advise General Contractor and Architect of any surface or substrate conditions requiring correction before tile work commences. Beginning of work constitutes acceptance of substrate or surface conditions.

#### 3.2 Surface Preparation

A. Fiberglass Surfaces

Wash fiberglass surfaces with strong detergent to ensure that all potential bond breaking materials are removed; rinse completely and allow to dry. Scuff the fiberglass surface slightly with medium sandpaper and clean the surface thoroughly. Allow to dry.

B. Concrete Substrates

(Insert any Special Means of Preparation – In addition to the surface preparation requirements listed above; ...)

C. (List other Substrates as required and means of preparation as required)

(Insert any Special Means of Preparation – In addition to the surface preparation requirements listed above; ...)

### 3.3 Installation – Accessories

#### A. Waterproofing:

**NOTE TO SPECIFIER:** Adhesives/mastics, mortars and grouts for ceramic tile, mosaics, pavers, brick and stone are not replacements for waterproofing membranes and will not prevent water penetration into occupied or storage spaces below.

Install the waterproofing membrane in compliance with current revisions of ANSI A108.01 (2.7 Waterproofing) and ANSI A108.13. Review the installation and plan the application sequence. Main application: apply product to steel substrate using 3/16" x 5/32" v-notch trowel. Allow the trowel to gauge the appropriate amount of material onto the surface using the v-notch side. Once material is applied, use the flat side of the trowel to "knock down" or flatten all ridges to produce a smooth, flat surface. Be sure to look for any "pinholes" or areas not covered by the material. If any voids appear, cover same or next day with LATAPOXY® Waterproof Flashing Mortar. Make sure all 90° angles at coves and corners are properly filled.

Drain and pipe penetrations: Make sure that pipes and drains are free from rust, oil, dirt, and any other contaminants that might prevent adequate bonding. For PVC penetrations, scarify pipe with sandpaper where membrane will be applied. Ensure that pipes and drains are securely fastened, stable, rigid, and do not allow movement. Pack all voids around pipes or penetrations with closed cell backer rod in appropriate manner. Apply LATAPOXY Waterproof Flashing Mortar directly to the pipe penetration, extending 3 inches above point of installation. No fabric or sealant is required. The membrane will bond directly to the pipe. Ensure that proper thickness of 1mm (40mil) is achieved. For metal drains, flash LATAPOXY Waterproof Flashing Mortar directly over metal flange of drain – do not cover the weep holes. A two-part clamping ring style drain should be used.

**Use the following LATICRETE® System Materials**  
LATAPOXY Waterproof Flashing Mortar

#### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303

LATICRETE Data Sheets: 682.0, 682.5

LATICRETE MSDS: 24hr Part A, 24hr Part B, 24hr Part C

LATICRETE Technical Data Sheets: 169, 202

### 3.4 Installation – Tile, Brick and Stone

A. General: Install in accordance with current versions of American National Standards Institute, Inc. (ANSI) "A108 American National Standard Specifications for Installation of Ceramic Tile" and TCNA "Handbook for Ceramic Tile Installation." Cut and fit ceramic tile, brick or stone neatly around corners, fittings, and obstructions. Perimeter pieces to be minimum half tile, brick or stone. Chipped, cracked, split pieces and edges are not acceptable. Make joints even, straight, plumb and of uniform width to tolerance +/- 1/16" over 8' (1.5 mm in 2.4 m). Install divider strips at junction of flooring and dissimilar materials.

B. Thin Bed Method: Install epoxy adhesive in compliance with current revisions of ANSI A108.02 (3.11) and ANSI A108.6. Use the appropriate trowel notch size to ensure proper bedding of the tile or stone selected. Work the epoxy adhesive into good contact with the substrate and comb with notched side of trowel. Spread only as much epoxy adhesive as can be covered while the adhesive surface is still wet and tacky. When installing large format (>8" x 8"/200 mm x 200 mm) tile/stone, rib/button/lug back tiles, pavers or sheet mounted ceramics/mosaics, spread epoxy adhesive onto the back of (i.e. 'back-butter') each piece/sheet in addition to trowelling epoxy adhesive over the substrate. Beat each piece/sheet into the epoxy adhesive with a beating block or rubber mallet to insure full bedding and flatness. Allow installation to set until firm. Clean excess epoxy adhesive from tile or stone face and joints between pieces.

Use the following **LATICRETE® System Materials**  
LATAPOXY® 300 Adhesive

### References

LATICRETE Data Sheets: 633.0

LATICRETE MSDS: 300 Part A, 300 Part B, 300 Part C

GREENGUARD Certificate: 300

LATICRETE Technical Data Sheets: 105, 146, 199

### C. Grouting or Pointing:

**NOTE TO SPECIFIER:** Select one of following and specify color for each type/color of ceramic tile, mosaic, paver, trim unit:

1. Chemical Resistant, Water Cleanable Tile-Grouting Epoxy (ANSI A118.3): Follow manufacturer's recommendations for minimum cure time prior to grouting. Store liquid components of LATICRETE® SpectraLOCK® PRO Grout\*\* for 24 hours at 70–80°F (21–27°C) prior to use to facilitate mixing and application. Substrate temperature must be 40–95°F (4–35°C). Verify joints are free of dirt, debris or grout spacers. Sponge or wipe dust/dirt off tile faces and remove water standing in joints. Apply grout release to face of absorptive, abrasive, non-slip or rough textured ceramic tile, pavers, bricks, stone or trim units that are not hot paraffin coated to facilitate cleaning. Cut open pouch and pour LATICRETE SpectraLOCK PRO Grout Part A Liquid into a clean mixing pail. Then open pouch and pour LATICRETE SpectraLOCK PRO Grout Part B Liquid into the mixing pail. Mix by hand or with a slow speed (<300 rpm) mixer until the two liquids are well blended. Then, while mixing, add LATICRETE SpectraLOCK PRO Grout Part C Powder and blend until uniform. Install LATICRETE SpectraLOCK PRO Grout in compliance with current revisions of ANSI A108.02 (3.13) and ANSI A108.6 (3.0 – 4.0). Spread using a sharp edged, hard rubber float and work grout into joints. Using strokes diagonal (at 45°

angle) to the grout lines, pack joints full and free of voids/pits. Then hold float face at a 90° angle to grouted surface and use float edge to "squeegee" off excess grout, stroking diagonally to avoid pulling grout out of filled joints. Once excess grout is removed, a thin film/haze will be left. Initial cleaning of the remaining film/haze can begin approximately 20–30 minutes after grouting (wait longer at colder temperatures). Begin by mixing cleaning additive packet with 2 gallons (7.6 l) of clean water in a clean bucket to make cleaning solution. Dip a clean sponge into the bucket and then wring out cleaning solution until sponge is damp. Using a circular motion, lightly scrub grouted surfaces with the damp sponge to dissolve grout film/haze. Then drag sponge diagonally over the scrubbed surfaces to remove froth. Rinse sponge frequently and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Discard sponges as they become "gummy" with residue. Within one (1) hour of finishing first cleaning, clean the same area again following the same procedure but utilizing a clean white scrub pad and fresh cleaning solution. Rinse scrub pad frequently. Drag a clean sponge diagonally over the scrubbed surfaces to remove froth. Use each side of sponge only once before rinsing and change cleaning solution at least every 50 ft<sup>2</sup> (4.7 m<sup>2</sup>). Allow cleaned areas to dry and inspect tile/stone surface. For persistent grout film/haze (within 24 hrs), repeat scrubbing procedure with undiluted white vinegar and clean pad. Rinse with clean water and allow surface to dry. Inspect grout joint for pinholes/voids and repair them with freshly mixed LATICRETE SpectraLOCK PRO Grout. CAUTIONS: Do not use undiluted white vinegar on polished marble or limestone unless a test spot in an inconspicuous area indicates no change in finish appearance; do not use acid cleaners on epoxy grout less than 7 days old.

### Use the following LATICRETE System Materials

LATICRETE SpectraLOCK PRO Grout

### References

LATICRETE Data Sheets: 685.0, 685.5

LATICRETE MSDS: Pro Part A, Pro Part B, Part C Powder, Cleaning Additive

GREENGUARD Certificate: PRO

LATICRETE Technical Data Sheets: 111, 198, 212, 400

### D. Expansion and Control Joints:

**NOTE TO SPECIFIER:** The chemical resistance of joint sealants for ceramic tile, mosaics, pavers, brick and stone will typically depend on:

1. Reagent composition and/or concentration;
2. Temperature;
3. Duration of exposure.

Review manufacturer's performance data and recommendations, in the context of expected chemical exposures.

Provide control or expansion joints as located in contract drawings and in full conformity, especially in width and depth, with architectural details.

1. Substrate joints must carry through, full width, to surface of tile, brick or stone.
2. Install expansion joints in tile, brick or stone work over construction/cold joints or control joints in substrates.
3. Install expansion joints where tile, brick or stone abut restraining surfaces (such as perimeter walls, curbs, columns), changes in plane and corners.
4. Joint width and spacing depends on application – follow TCNA "Handbook for Ceramic Tile Installation" Detail "EJ-171 Expansion Joints" or consult sealant manufacturer for recommendation based on project parameters.
5. Joint width:  $\geq 1/8"$  (3 mm) and  $\leq 1"$  (25 mm).
6. Joint width: depth ~2:1 but joint depth must be  $\geq 1/8"$  (3 mm) and  $\leq 1/2"$  (12 mm).
7. Layout (field defined by joints): 1:1 length: width is optimum but must be  $\leq 2:1$ . Remove

all contaminants and foreign material from joint spaces/surfaces, such as dirt, dust, oil, water, frost, setting/grouting materials, sealers and old sealant/backer. Use LATICRETE Latasil™ 9118 Primer for underwater and permanent wet area applications, or for porous stone (e.g. limestone, sandstone etc...) installations. Install appropriate backing material (e.g. closed cell backer rod) based on expansion joint design and as specified in § 07920. Apply masking tape to face of tile, brick or stone veneer. Use caulking gun, or other applicator, to completely fill joints with sealant. Within 5-10 minutes of filling joint, 'tool' sealant surface to a smooth finish. Remove masking tape immediately after tooling joint. Wipe smears or excess sealant off the face of non-glazed tile, brick, stone or other absorptive surfaces immediately.

### Use the following LATICRETE System Materials

LATICRETE Latasil™

LATICRETE Latasil 9118 Primer

### References

LATICRETE Detail Drawings: WP300, WP301, WP302, WP303, EJ-03, EJ-04, EJ-05, EJ-06, EJ-07, EJ-09, EJ-11, EJ-12, EJ-13, EJ-14 (Sealant treatments only)

LATICRETE Data Sheets: 6200.1, 6528.1

LATICRETE MSDS: Latasil, Primer

LATICRETE Technical Data Sheets: 211, 252

E. Adjusting: Correction of defective work for a period of one year following substantial completion, return to job and correct all defective work. Defective work includes, without limitation, tiles broken in normal abuse due to deficiencies in setting bed, loose tiles or grout, and all other defects which may develop as a result of poor workmanship.

### 3.5 Cleaning

Clean excess mortar/epoxy from veneer surfaces with water before they harden and as work progresses. Do not contaminate open grout/caulk joints while cleaning. Sponge and wash veneers diagonally across joints. Do not use acids for cleaning. Polish with clean dry cloth. Remove surplus materials and leave premises broom clean.

### 3.6 Protection

- A. Protect finished installation under provisions of §01500 and §01535. Close areas to other trades and traffic until tile being installed has set firmly. Keep traffic off horizontal portland cement thick bed mortar installations for at least 72 hours at 70°F (21°C).
- B. Keep floors installed with epoxy adhesive closed to traffic for 24 hrs at 70°F (21°C), and to heavy traffic for 48 hours at 70°F (21°C) unless instructed differently by manufacturer. Use kneeling boards, or equivalent, to walk/work on newly tiled floors. Cure tile work in swimming pools, fountains and other continuous immersion applications for 10 days for epoxy based grout and 14 days for latex portland cement based grout at 70°F (21°C) before flood testing or filling installation with water. Extend period of protection of tile work at lower temperatures, below 60°F (15°C), and at high relative humidity (>70% RH) due to retarded set times of mortar/adhesives. Replace or restore work of other trades damaged or soiled by work under this section.
- C. Filling Pool – Maintain a differential of 10°F (5.5°C) or less between the fill water and substrate temperatures during fill and drain cycles, and fill pool with water at rate of 2' (600 mm) per 24 hours to allow gradual exposure to water pressure, thermal and moisture differentials. Do not fill if potential thermal gradients exist (very cold source water, exterior pool exposed to several days of solar radiation, etc...).

- D. Emptying Pool – empty pool water at rate of 2' (600 mm) per 24 hrs to prevent hydrostatic pressure from de-laminating tiles of leveling mortar (in pools without waterproof membrane).

### Part 4 – Health and Safety

The use of personal protection such as rubber gloves, suitable dust masks, safety glasses and industrial clothing is highly recommended. Discarded packaging, product wash and waste water should be disposed of as per local, state or federal regulations.

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

# Section 10 – Swimming Pool, Fountain and Spa Detail Drawings




## Section 10 – Swimming Pool, Fountain and Spa Detail Drawings

The following section includes typical details for use in specifying and installing ceramic tile and stone installations in swimming pools, fountains, spas, and water features. Details are subject to change without notice. For the most current revision of these details and the corresponding specifications please visit [www.laticrete.com/ag](http://www.laticrete.com/ag).

## 10.1 CONCRETE – SWIMMING POOL TANK P601

Drawing No. ES P601

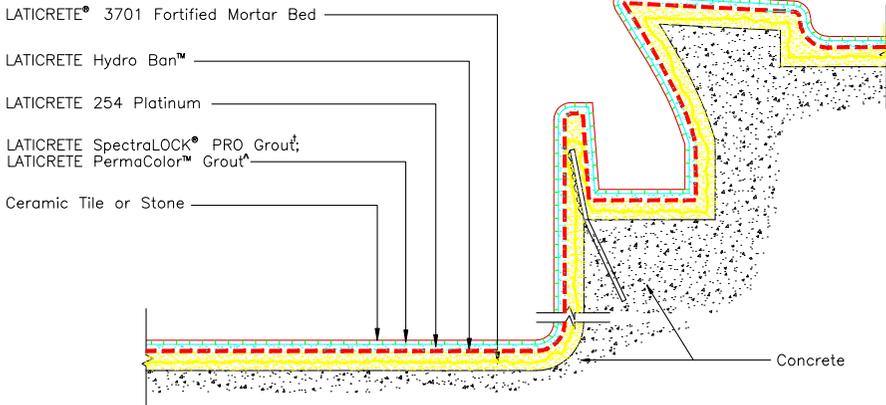

Note:  
Slurry Bond Coat of LATICRETE 254 Platinum is required under the mortar bed at all horizontal surfaces.

<sup>†</sup> United States Patent No.: 6881768 (and other Patents).

<sup>^</sup> United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.2 CONCRETE – SWIMMING POOL GUTTER P601A

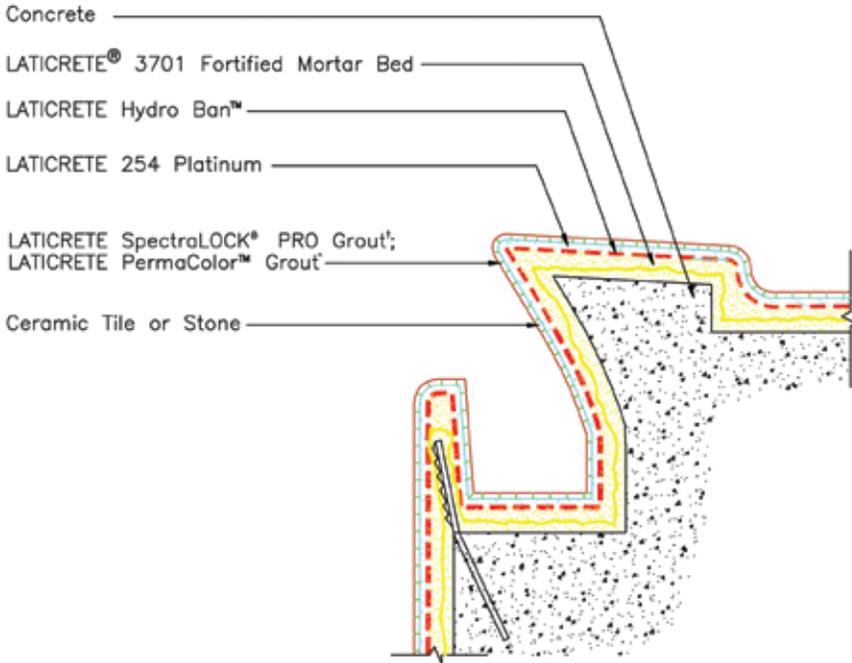

Note:  
Slurry Bond Coat of LATICRETE 254 Platinum  
is required under the mortar bed at all horizontal surfaces.

† United States Patent No.: 6881768 (and other Patents).  
^ United States Patent No.: 6784229 B2 (and other Patents).


REVISION DATE: 4/09 SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## 10.3 CONCRETE – SWIMMING POOL ROL OUT RIM P601B

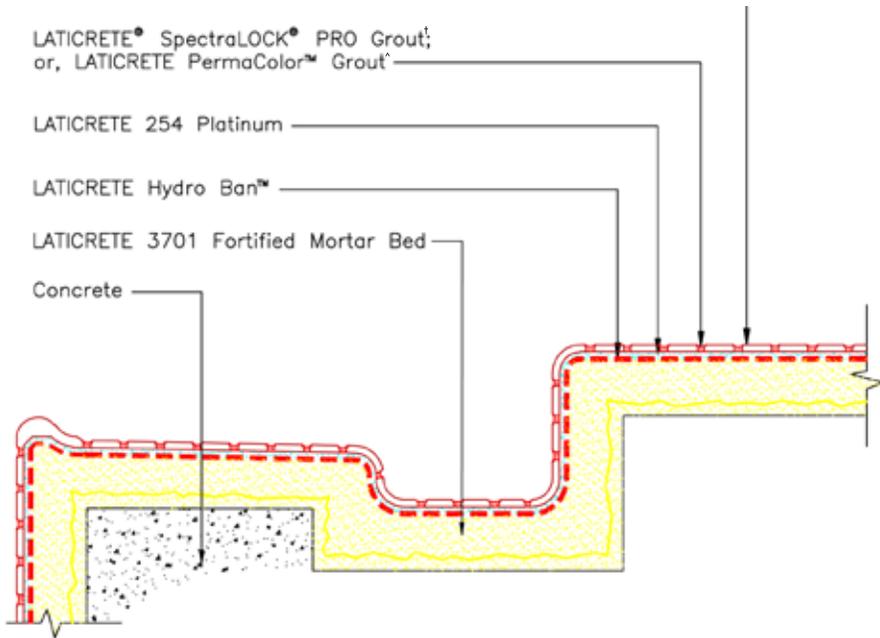

Note:  
Slurry Bond Coat of LATICRETE 254 Platinum  
is required under the mortar bed at all horizontal surfaces.

<sup>†</sup> United States Patent No.: 6881768 (and other Patents).

<sup>^</sup> United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.4 CONCRETE – SWIMMING POOL DECK/TRENCH DRAIN P601C

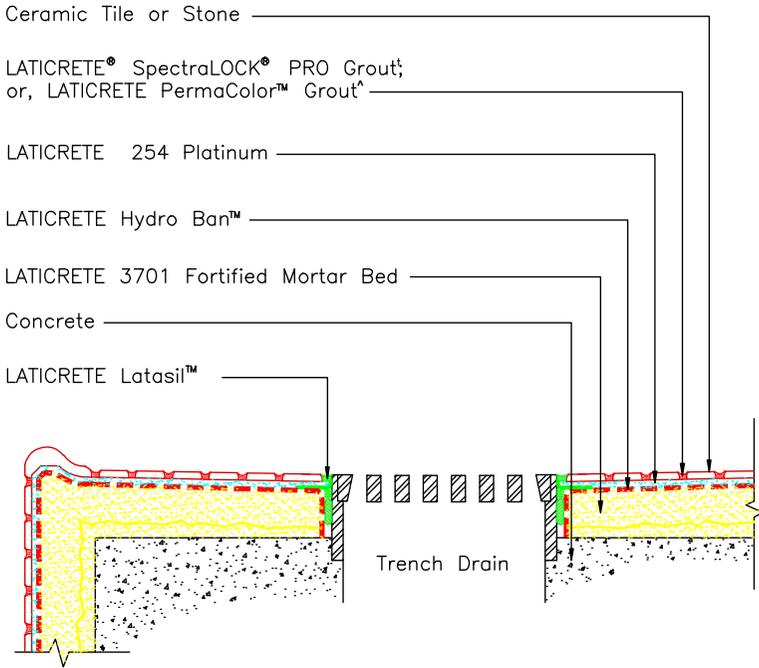

Note:  
Slurry Bond Coat of LATICRETE 254 Platinum  
is required under the mortar bed at all horizontal surfaces.

† United States Patent No.: 6881768 (and other Patents).  
^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## 10.5 CONCRETE – SWIMMING POOL DIRECT BOND P601D

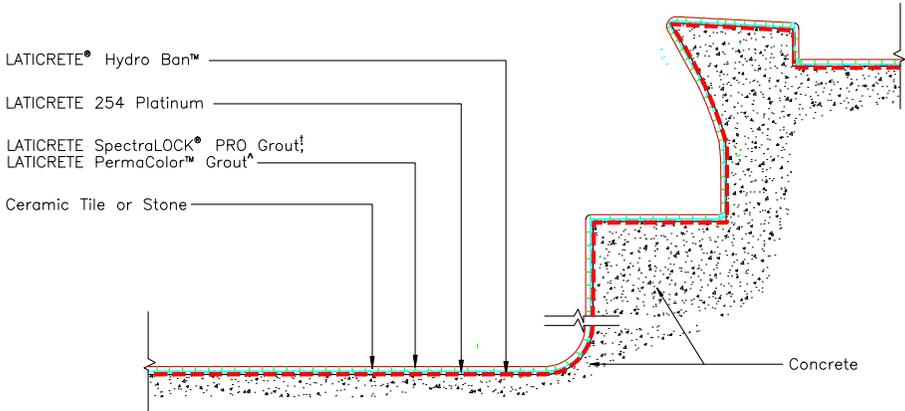

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.6 STAINLESS STEEL – POOL/SPA THIN-BED P602

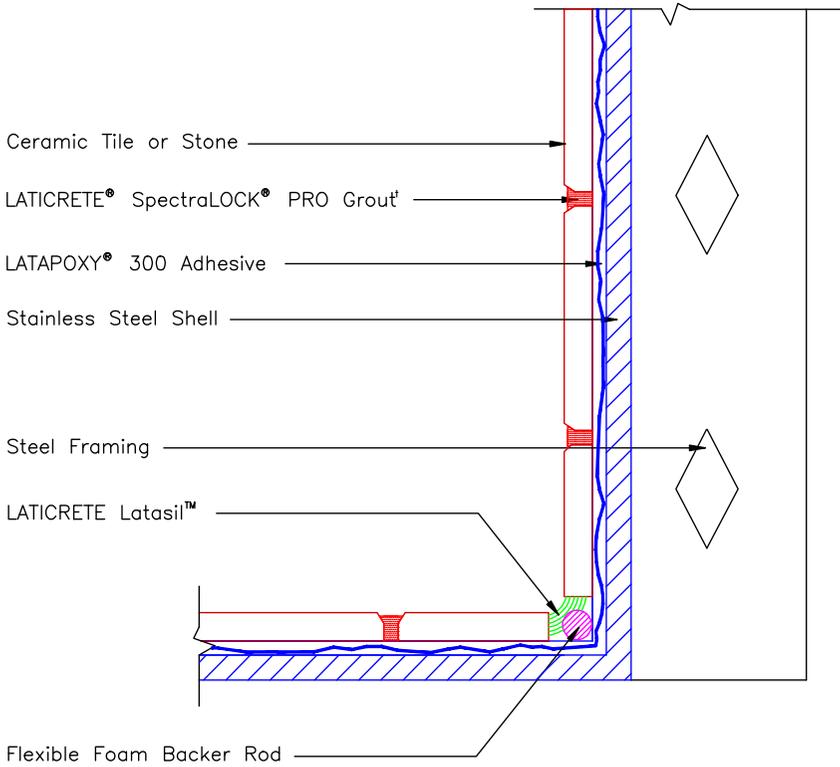

† United States Patent No.: 6881768 (and other Patents).

REVISION DATE: 4/09

SCALE: NTS


For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

# Section 10 – Swimming Pool, Fountain and Spa Detail Drawings

## 10.7 STAINLESS STEEL – POOL/SPA THICK BED P603

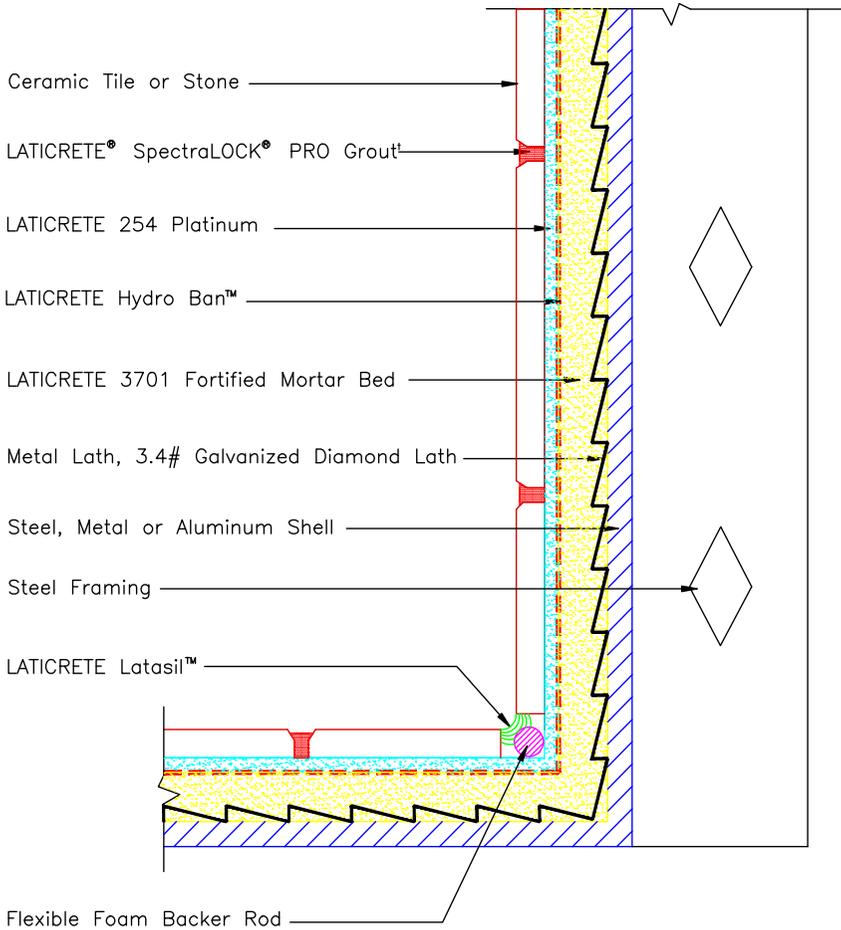

† United States Patent No.: 6881768 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.8 FIBERGLASS – POOL/SPA THIN BED P604

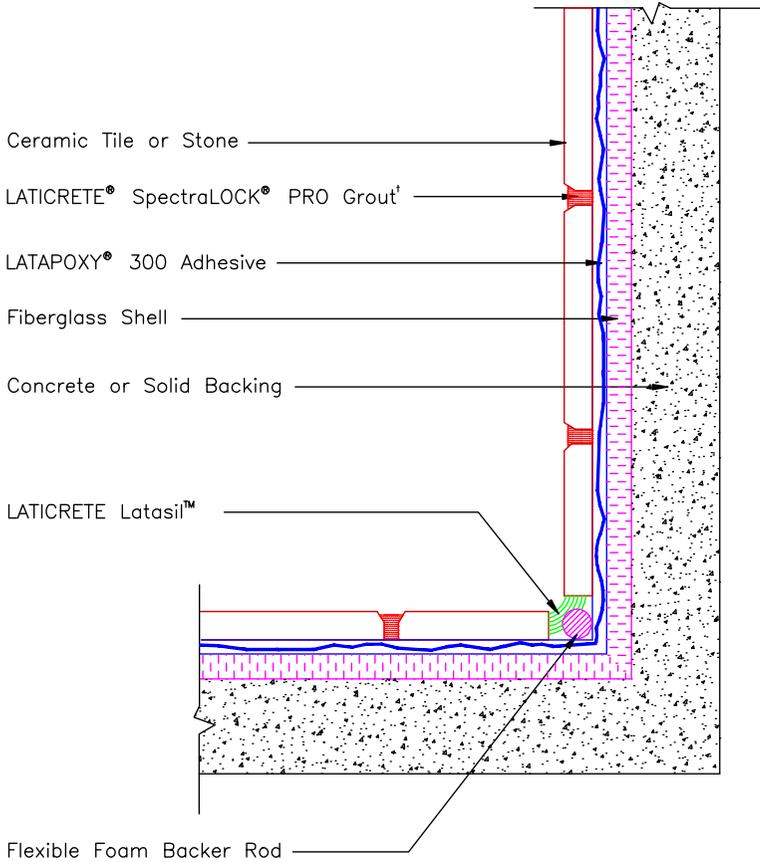

<sup>†</sup> United States Patent No.: 6881768 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## 10.9 CONCRETE – SLAB-ON-GRADE – BONDED THICK BED F101

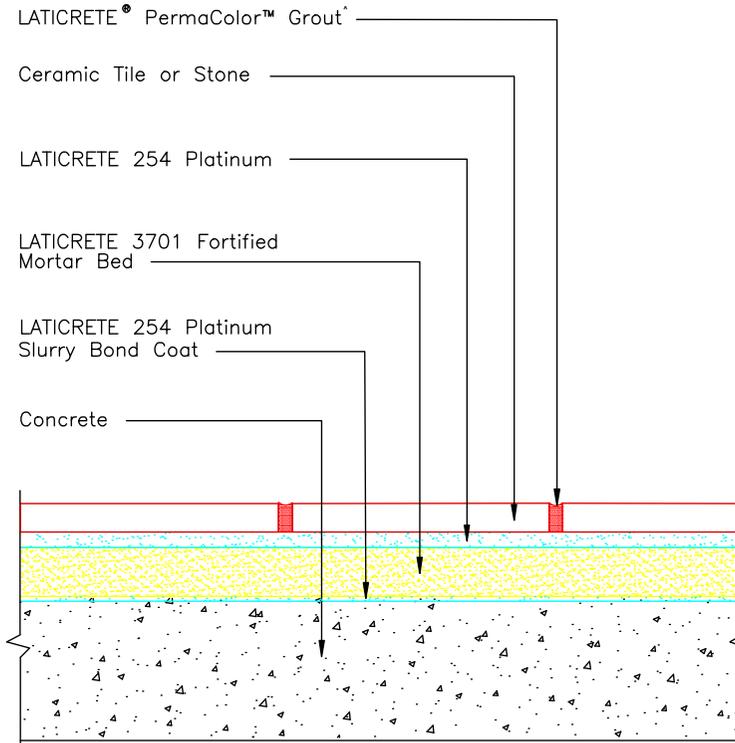

<sup>^</sup> United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.10 CONCRETE – SLAB-ON-GRADE – BONDED THICK BED WITH WATERPROOFING MEMBRANE F101B

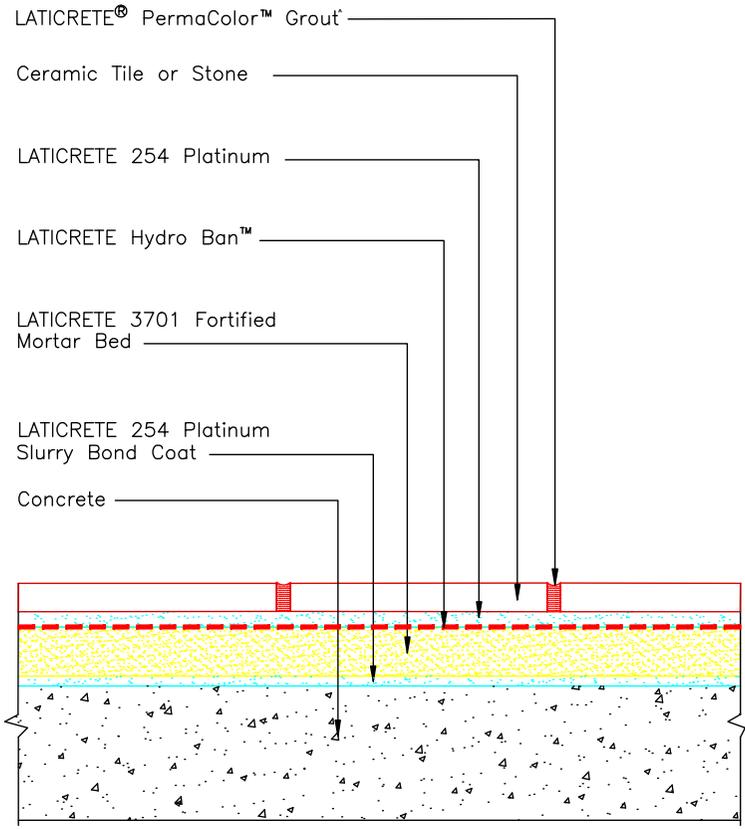

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## 10.11 CONCRETE – SLAB-ON-GRADE – THIN BED F102

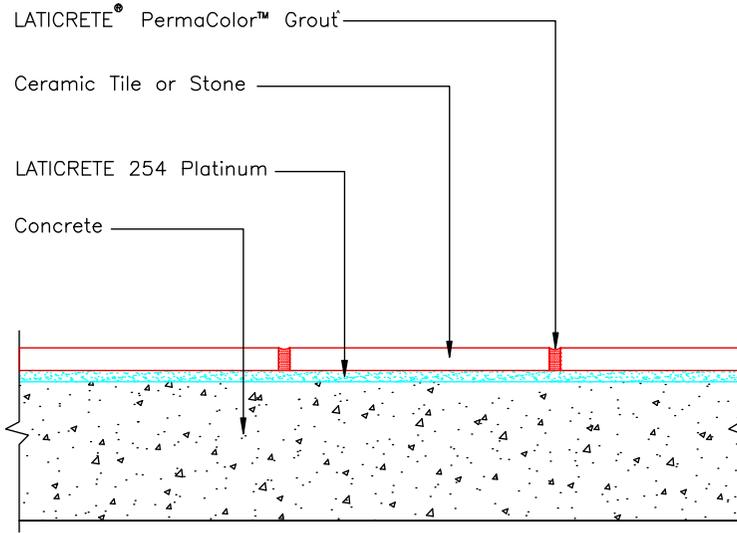

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.12 CONCRETE – SLAB-ON GRADE OR SUSPENDED – UNBONDED THICK BED F111

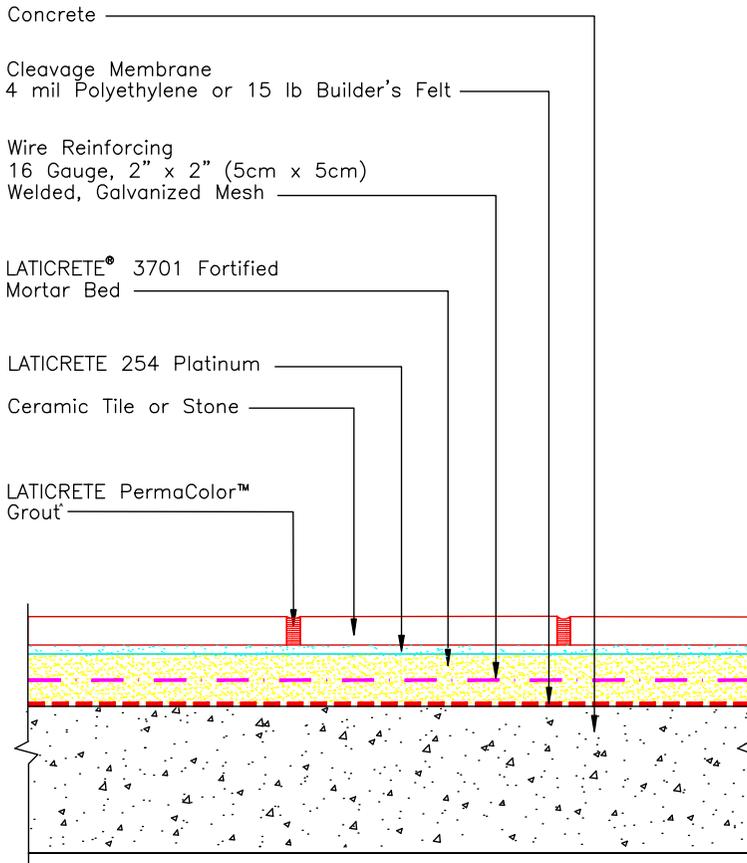

† United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## 10.13 CONCRETE – SLAB-ON-GRADE OR SUSPENDED – UNBONDED THICK BED WITH WATERPROOFING MEMBRANE F111B

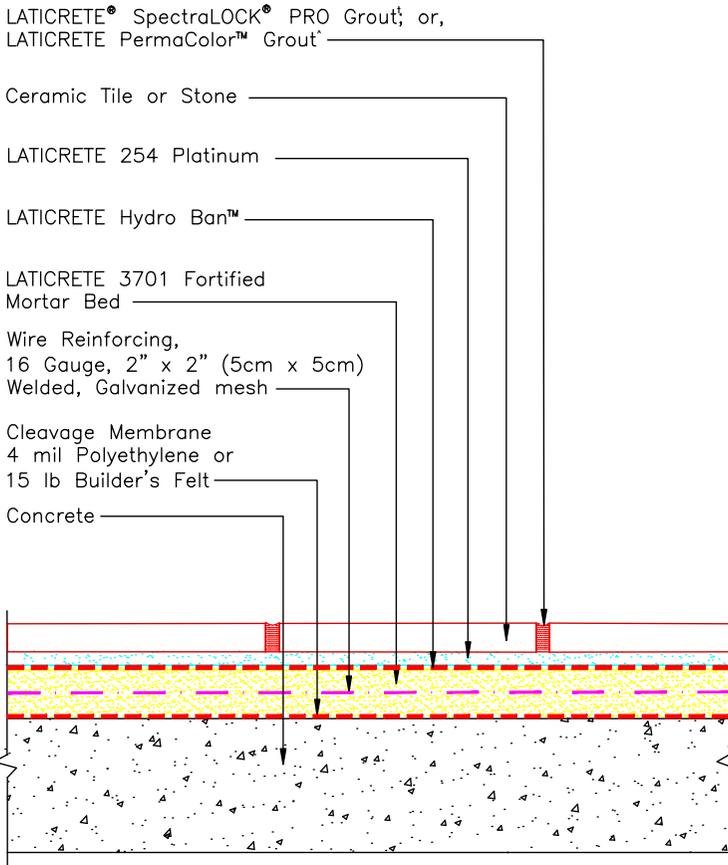

<sup>†</sup> United States Patent No.: 6881768 (and other Patents).

<sup>^</sup> United States Patent No. 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.14 CONCRETE – TUBS, FOUNTAINS AND CURBS B417A

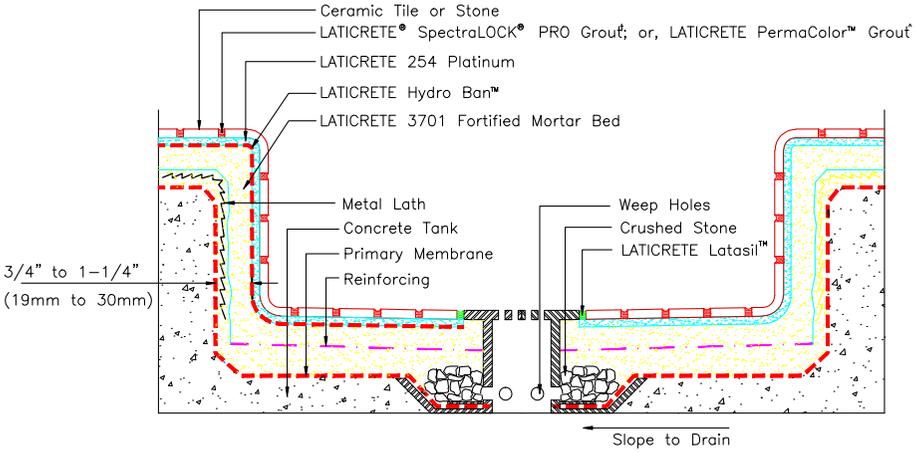

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09

SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)


As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

# Section 10 – Swimming Pool, Fountain and Spa Detail Drawings

## 10.15 WOOD FORM – TUBS, FOUNTAINS AND CURBS B417B

Drawing No. ES B417B

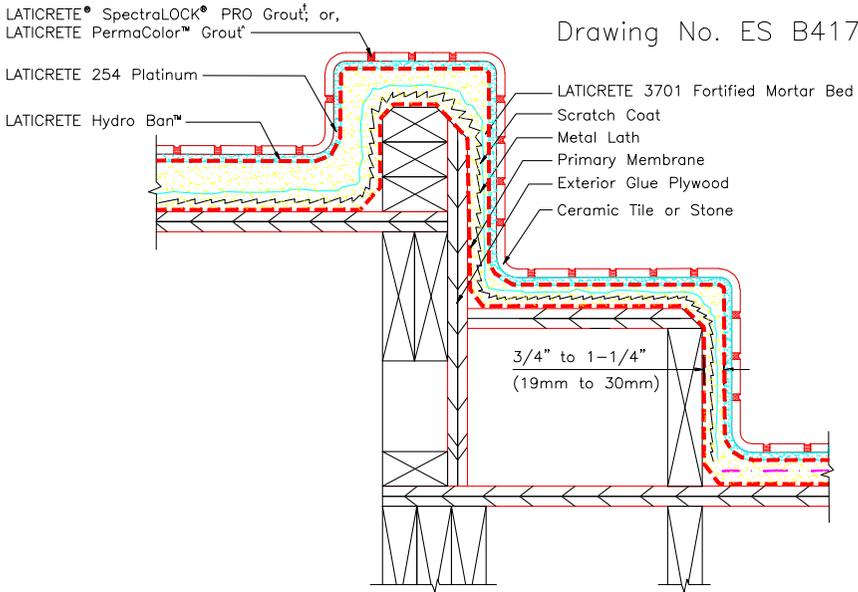

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.16 CEMENT BACKER BOARD – STEEL FRAMING – EXTERIOR AND WET AREAS  
W244(E)

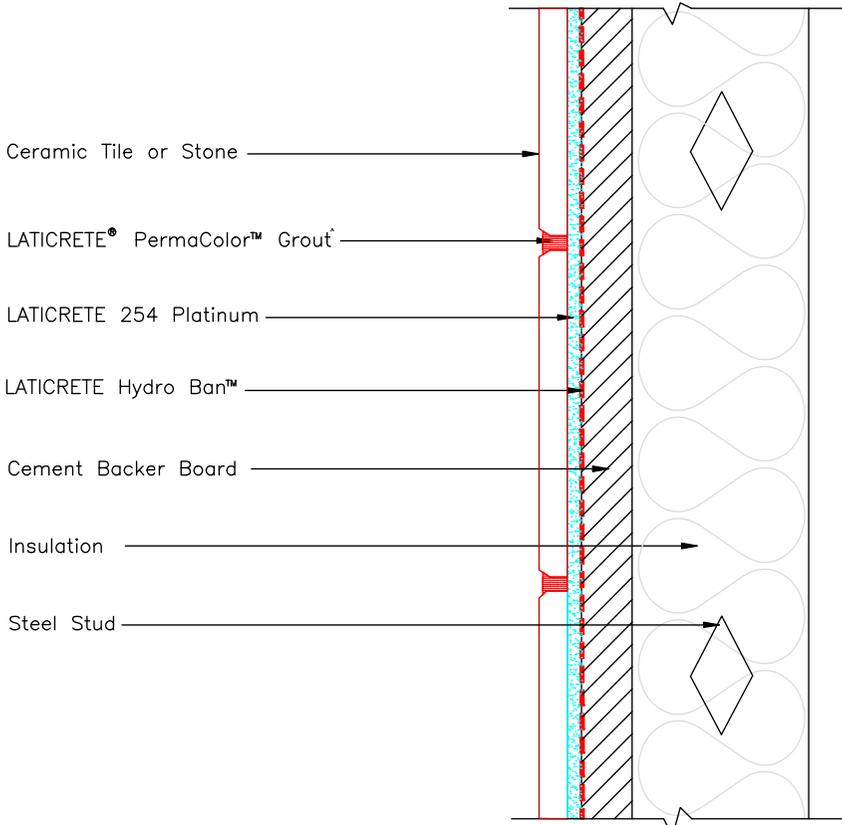

Note:  
Vapor Barrier and Insulation –  
Type/Location to be Determined by Design Professional

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectralOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## 10.17 TYPICAL PIPE PENETRATION WP300

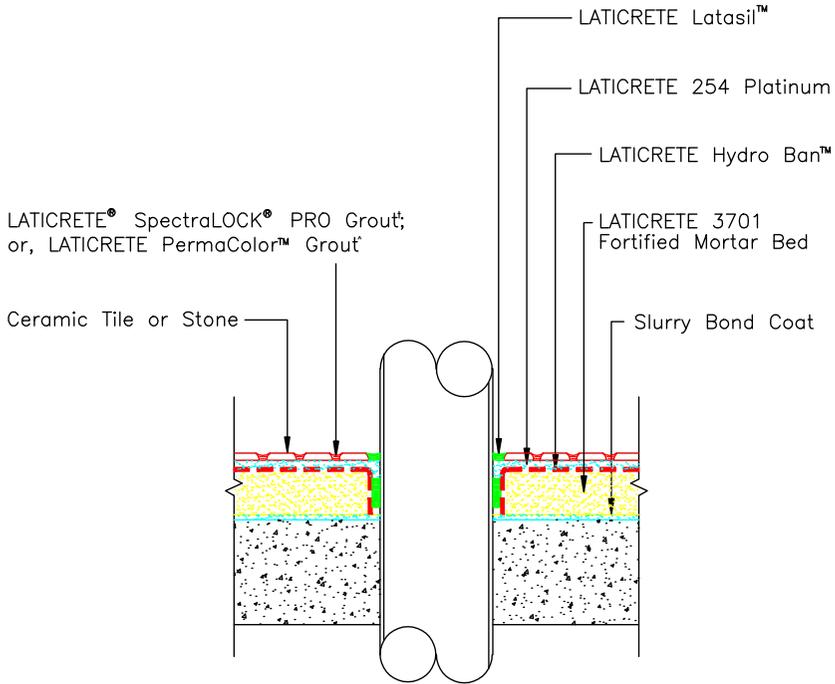

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09


SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

10.18 TYPICAL DRAIN DETAIL WP301

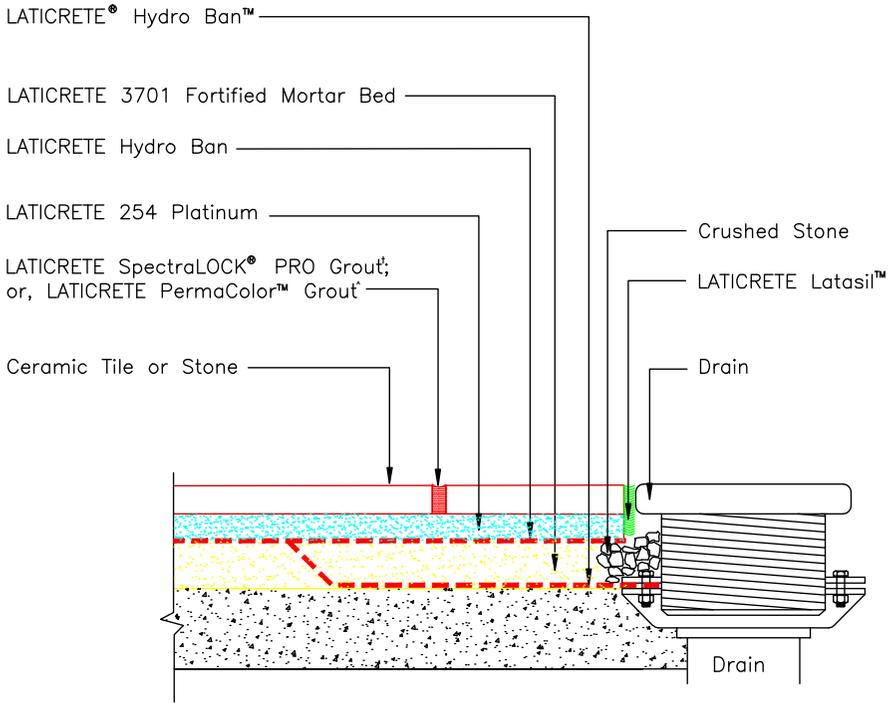

† United States Patent No.: 6881768 (and other Patents).

^ United States Patent No.: 6784229 B2 (and other Patents).

REVISION DATE: 4/09

SCALE: NTS


For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.

## Section 10 – Swimming Pool, Fountain and Spa Detail Drawings

### 10.19 DRAIN DETAIL – EXPLODED VIEW WP302

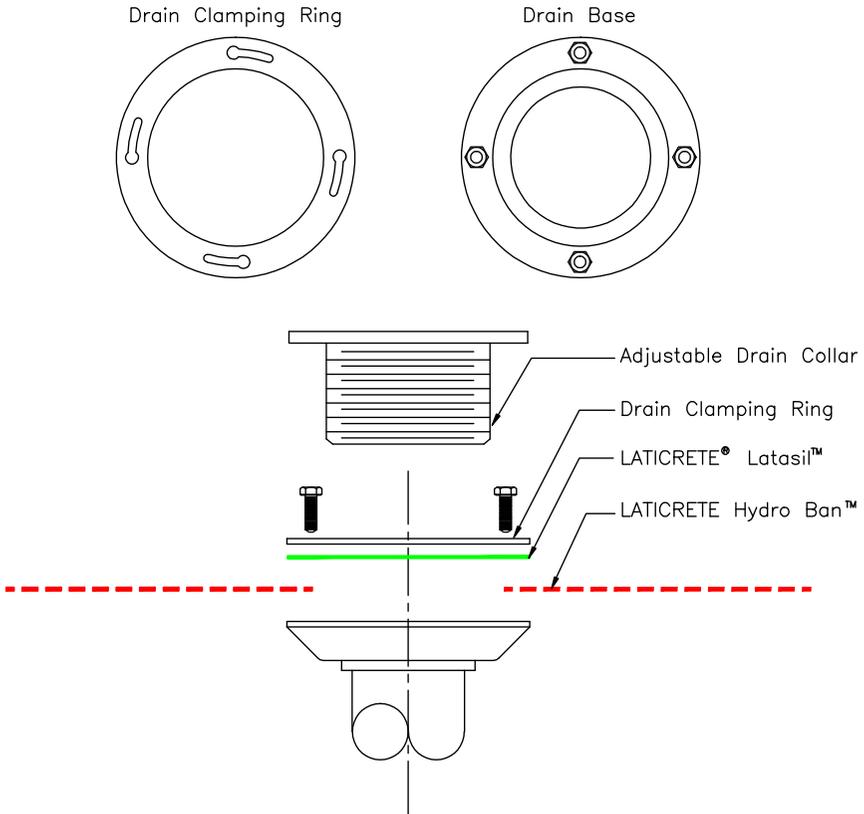


REVISION DATE: 4/09

SCALE: NTS

For latest revision of this and all LATICRETE details please visit [www.laticrete.com/ag](http://www.laticrete.com/ag)

As a professional courtesy, LATICRETE offers technical services free of charge. The user maintains all responsibility for verifying the applicability and suitability of the technical service or information provided.

©2009 LATICRETE International, Inc. All rights reserved. The right to utilize LATICRETE details for commercial purposes is granted exclusively to contractors, architects, quantity surveyors, engineers, and specifications writers. LATICRETE®, LATAPOXY® and SpectraLOCK® are registered trademarks of LATICRETE International, Inc. US and foreign patent and trademark offices. Marca registrada. All other trademarks are property of their respective companies.



## Section 11 – Pool Water and Tile Installation Maintenance



### 11.1 Fill and Drain Rates

Swimming pools and fountains which have had tile and stone installed should be filled and drained at a prescribed rate of 1" (25 mm) per hour. Following this prescribed fill rate will help to alleviate the rapid expansion of the pool walls due to the weight of the water, moisture expansion of the tile and thermal gradient variation. Maintain a differential of 10°F (5.5°C) or less between the fill water and substrate temperatures during fill cycles. While the movement joints and sealant will accommodate most of this movement they will be stressed during the fill period so a slow fill can help the movement joints better fulfill their intended purpose.

During the drain periods the slow rate will allow the movement joints and tile system to shrink back at a slower and safer rate. As the tile or stone, immersed in water for extended periods, dry out they will experience shrinkage movement due to the loss of moisture. The weight of the water in the pool goes down and the walls can shrink back due to the loss of pressure. The slow empty rate allows for a normal process to take place without damage to the pool or tile system. The slow drain rate also helps to prevent hydrostatic pressure from causing delamination of tile in pools without a waterproofing membrane.

**NOTE:** The prescribed fill and drain rate described above is recommended for pools, fountains and water features which have received a tile or stone installation. Filling or emptying these vessels which have received other finish types may not be necessary or recommended. Please check with the finish material manufacturer for their recommended fill and drain rates.

While the prescribed rate of 1" (25 mm) per hour is rather slow, damage caused by filling or emptying too quickly can be far more time consuming and costly than waiting a few days longer to fill the pool.

Initial alkalinity of pool water may be very high, due to exposure to plaster, grouts and mortars so careful and frequent balancing of the pool water is required. The pool or fountain should not be filled if potential thermal gradients

are present (e.g. very cold water source, pool exposed to direct sunlight for extended periods, etc...).

### 11.2 Opening and Closing Seasonal Swimming Pools and Water Features

**Opening** – Opening a swimming pool, depending on the climate, is an annual rite of spring for pool owners. The process of opening a swimming pool involves many different tasks and allows for routine inspection and maintenance to be performed.

For swimming pools in northern climates the list includes;

- Removing, Cleaning and Storing the Pool Cover
- Testing Water Balance, pH, Calcium, Cyanuric Acid, Calcium Hardness, and Alkalinity Levels
- Inspecting Electrical Service, Filters, Ladders, Diving Boards, Plugs, Gauges, and Other Important Components of the System
- Lubricate Fittings, Valves, O-Rings, and Plugs
- Inspect Tile and Grout Installations, and Clean Tiles and Skimmer With Cleanser
- Clean and Inspect Pool Deck
- Skim Pool Water Surface and Vacuum Pool Bottom
- Backwash Filter if Necessary
- Shock Pool Water to Breakpoint Levels

Failure to inspect and correct any problems during the opening may result in down time of the pool during the warmer season when the pool will be utilized the most.

For swimming pools in southern climates, where the pool will be open year round, it is still necessary for an inspection and maintenance regimen to be followed. This will help keep the pool sanitary and safe for the users and prevent significant down time due to improper upkeep.<sup>1</sup>

In many cases a professional pool maintenance company is utilized to make sure that the pool is running efficiently, the pool mineral and chemical levels are properly maintained, and that the entire pool system is working properly.

**Closing** – Closing a pool for the winter is also a common sight in cold weather climates. The process of closing a pool is just as important to the long term performance of the pool as the opening. Some of the steps to closing the pool properly typically include (check local guidelines for proper pool closing requirements);

- Balance the Pool Water Chemistry
- Remove Skimmer Baskets, Cleaners, Ladders, Wall Fittings, and Solar Blankets From the Pool
- Lower the Water Level in the Pool to Below the Skimmer Level in the Pool
- Drain All Pumping, Filtering, Heating, and Sanitizing Equipment to Prevent Damage Caused By Breezing
- Lubricate O-Rings, Valves and Plugs to Make Opening the Pool in the Spring Easier
- Clean and Vacuum the Pool
- Winterize the Plumbing by Blowing Out the Lines and Plug the Lines With Expansion Plugs
- Add Winterizing Algaecide
- Cover the Pool With a Tight Fitting Cover

In warmer climates many people simply reduce the amount of filtration times per day and also find that the pool requires fewer chemicals. As the use of the pool decreases, the opportunity to inspect and provide maintenance to the pool increases.<sup>2</sup>

**NOTE:** It is important to note that swimming pools and water features which are in use year round also require the same regular attention and maintenance as seasonal swimming pools and water features.

### 11.3 Water Treatments and Tile Installations

It is not the goal of this manual to provide advice or recommendations for the proper treatment of swimming pool, fountain, water feature, or spa water. The best advice that we can offer along these lines is to consult with a pool professional who knows the water conditions and best water treatment options available for your pool and geographical region. For more information on locating a qualified pool professional in your area, please contact The Association of Pool and Spa Professionals at [www.apsp.org](http://www.apsp.org).

To get a better understanding of pool water balance we will look at several aspects of water treatment;

**Sanitizers** – A pool sanitizer and its accompanying shock is commonly referred to as either a sanitizer, a disinfectant or an oxidizer, but, these products must be able to perform all 3 tasks.

- **Sanitizing** – Killing all bacteria, living organisms and other contaminants that are present in water
- **Disinfecting** – Kills all potential disease-carrying capabilities of these bacteria, living organisms and other contaminants
- **Oxidizing** – Oxidizes any ammonia that is present in the pool due to environmental factors, fertilizers blowing into the pool, or swimmer waste (e.g. urine, saliva, perspiration, suntan lotions, saliva, body oils, etc...). Ammonia is usually only oxidized using a pool shock suitable for use with the sanitizer being used in the pool

There are currently several methods for sanitizing pools, fountains and water features;

**Chlorine** – Chlorine is the most commonly used pool sanitizer in the industry today. Chlorine will take a leadership role in sanitizing, disinfecting and oxidizing when present in any water. Unfortunately, it is not as easy as adding chlorine to your pool from time

to time, expecting the water to stay crystal clear and sparkling. The chlorine levels must be monitored on a continual basis based on environmental conditions (e.g. temperature, humidity, sunlight, rain, wind, and evaporation) and bather load. Failure to do so can cause the water to turn murky and green with the growth of algae.

For a better understanding of chlorine and how it works we will look at some terminology regarding this type of chemistry;

**Chlorine Demand** – The amount of chlorine needed to kill bacteria, living organisms and other pollutants in the water.

**Free Chlorine** – The chlorine not presently being used to kill bacteria, living organisms or other pollutants in the water.

**Chloramines** – Formed when chlorine combines with ammonia in pool water. Chloramines are ineffective at sanitizing, disinfecting and oxidizing pool water.

**Total Chlorine** – The combined reading combination of Free Chlorine and Chloramines.

Chlorine levels are measured on two scales; Total Chlorine and Free Chlorine. The results of testing for Total Chlorine tells you when to shock the pool to get rid of excess chloramines and ammonia, and, the test results for Free Chlorine tells you when to add chlorine to the pool. When chlorine is added to water, a dissociation occurs. In other words,  $\text{Cl}_2$  (chlorine) +  $2\text{H}_2\text{O}$  (water) =  $\text{HOCl}$  (hypochlorous acid) +  $\text{HCl}$  (hydrochloric acid). Hypochlorous acid is the active by product of this reaction that is responsible for killing bacteria, living organisms or other pollutants in the pool water. The chlorine molecule or ion kills microorganisms by entering through cell walls and destroying inner enzymes, structures and processes. When this occurs the cell is effectively deactivated or oxidized. The hypochlorous molecule or ion continues working until it combines with a nitrogen or

ammonia compound, becoming a chloramine, or is broken down into its component atoms, becoming deactivated itself.

Chlorine is available in many forms for use in a swimming pool;

- **Granular Chlorine** – Granular chlorine has many advantages; it is fast dissolving, typically has 63% available chlorine, contains cyanuric acid, has a long shelf life, has a pH level of 6.8 (fairly close to the desired level), does not add any by-products to the water, and can be used both for sanitizing and shocking. Disadvantages include a cost higher than chlorine tablets and less available chlorine than tablets
- **Chlorine Tablets** – Easily the most common form of chlorine sold for pool treatments. Chlorine tablets contain about 90% available chlorine, contains cyanuric acid, have long shelf life, and are less expensive than granular chlorine. The disadvantages are few and are easily corrected. Chlorine tablets have a pH between 2.8 – 3.0, which can lower the pH level in the pool water. If the pH level is not monitored and corrected often then degradation of metal in the pool, as well as cement based tile and stone installation materials (e.g. grout) can occur
- **Liquid Chlorine** – Liquid chlorine is inexpensive, easy to use, and begins working immediately after it is added to the pool or fountain. Disadvantages include the fact that liquid chlorine provides only about 12 – 15% available chlorine which can be exhausted quickly due to exposure to sunlight and a short shelf life. The use of liquid chlorine may also add unwanted salts to the pool water (a result of the production process of the liquid chlorine)
- **Chlorine Gas** – Chlorine gas is reasonably inexpensive, provides 100% available chlorine and adds no by-products to the pool water. This form of chlorine is rarely used in swimming pools mainly because of its one significant disadvantage – if

misused, chlorine gas is deadly. Chlorine gas is difficult to handle, making misuse easy

Cyanuric acid is a necessary addition to any pool treated with a chlorine product. Chlorine tablets and granular chlorine are Cyanurates, which simply means they contain cyanuric acid. Typically sold as either “Conditioner” or “Stabilizer” cyanuric acid protects chlorine from being destroyed by sunlight. Cyanuric acid needs to be added whenever a pool is drained, cleaned and refilled because tap water contains almost none of this chemical. The recommended range for cyanuric acid is 30 – 80 ppm (30 – 80 ml/l) with a maximum of 100 ppm. If the level of cyanuric acid rises above 100 ppm the only way to achieve a suitable reading is to drain the pool completely and refill with new water. Cyanuric acid has a pH of 4.0, so if the pH level is not monitored and corrected often then degradation of metal in the pool, as well as cement based tile and stone installation materials can occur.

**Bromine** – Bromine is an effective alternative to chlorine that comes in both tablet (far more commonly used) and granular forms. Bromine is far more stable at higher temperatures, and, as such, is used more often than chlorine to sanitize, disinfect and oxidize spas. Due to the presence of ammonia in pool water, bromamines (like chloramines) will be present in pool water. But, unlike chloramines, bromamines are at least marginally effective at assisting in sanitizing, disinfecting and oxidizing the water. Unlike chloramines, bromamines will breakdown by themselves but they should be removed from the water by regular shocking to maintain a stable water environment.

The main drawback of bromine, coupled with its non-chlorine shock, Potassium Peroxymonosulfate (required to get rid of ammonia and bromamines), is its expense. Bromine is more expensive than chlorine and only equally effective at producing results. Another drawback is that it will be destroyed

by sunlight and that it cannot be protected by the use of cyanuric acid. Bromine has a pH of 4.0, therefore, constant monitoring of the pool water will be necessary to avoid possible problems caused by low pH (acidic).

Bromine by itself, cannot oxidize. In other words, to be effective, bromine requires a catalyst; and the catalyst is often chlorine. The tablet mixture is typically around 60% bromine, 28% chlorine and 12% inert ingredients. Bromine levels should be maintained at 2.5 – 4.0 ppm (2.5 – 4.0 ml/l) with an industry accepted minimum level of 2.0 ppm (2.0 ml/l). It is best to add bromine when the level reaches 2.5 to avoid any potential problems.

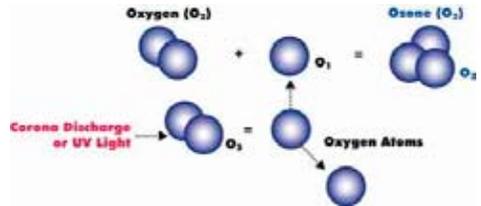


Figure 11.1 – Diagram of how ozone is created by an ozone generator.

**Salt Water** – Salt water pools are becoming more and more prevalent, and this method of sanitizing a pool is very effective. A salt water pool has 3 main components; salt, a salt cell and a control box.

First, it will be best to explain that the level of salt used to sanitize a swimming pool or fountain is not the same as ocean salt water. Ocean salt water contains about 20,000 ppm (20 ml/l) of salt, while a salt water pool contains only about 3,000 ppm (3 ml/l). At 3,000 ppm (3 ml/l) you generally cannot even taste the salt; in fact, your eyes contain about 9,000 ppm (9 ml/l) of salt. Any water under 6,000 ppm (6 ml/l) is still considered fresh water.

A salt water pool system works to sanitize a pool based on the fact that chlorine can be produced by running the salt water through a series of plates (the salt cell) with opposite electrical charges. As the water passes through these plates electrolysis takes place which

releases the chlorine in the salt. The control box sends electricity to the salt cell and controls how much chlorine is produced by regulating how long the electricity is applied to the cell.

Salt water pools do not have the ability to shock the pool water so a chlorine shock (super chlorinator) is used to quickly raise

the chlorine level when necessary. Cyanuric acid would also be required at 30 – 80 ppm (30 – 80 ml/l) since chlorine is the end result of the salt water electrolysis process. Another benefit of salt water pools is that the water is softer, since salts are commonly used to soften water. Salt water may have an effect on a tile or stone installation system as well as many other cement based finishes; efflorescence.

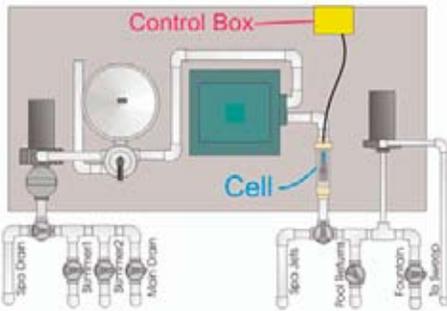


Figure 11.2 – A typical salt water circulation and treatment system<sup>4</sup>.

There are other water treatment options but these are used infrequently, and will not be mentioned in this text. However, choosing the water treatment option best suited for your conditions is very important and the decision should be after consultation with a qualified pool professional.

### Supplemental Sanitizers

**Ozone** – In its natural state, ultraviolet (UV) light from the sun converts oxygen molecules into ozone molecules. Ozone is the earth's natural purifier and cleaner; and this fact makes it a perfect choice to assist in the sanitization of swimming pool water. Ozone is a supplement to be used with chlorine or bromine to fully sanitize the pool water. In combination, the end result is crystal clear, sparkling water at

a fraction of the cost of using chlorine and bromine alone. In fact, ozone has been proven to purify, clean and sanitize pool water faster and more effectively than traditional chlorine or bromine alone.

When used in conjunction with chlorine or bromine, ozone will kill or get rid of all bacteria, living organisms, ammonia, swimmer wastes, algae, dirt, debris, and other contaminants virtually on contact. This is done with no odor and without leaving any by-products in the water, other than oxygen.

The ozone sanitizing process works by placing an ozonator in line with the pool circulation equipment after the filter. Water flows through the pump and passes through the filter where any dirt, debris or particles are trapped. The water continues through the heater (if present) and then through the ozonator where the water will be exposed to a specific wavelength of UV light. The UV light converts oxygen molecules into ozone molecules where the water is cleaned naturally.

**Ultraviolet Light (UV)** – UV lamps are useful for supplemental sanitation in swimming pool and spa water. Although UV light is very effective against microorganisms, UV lamps cannot be used as stand-alone sanitizers since they do not impart a sanitizer residual into the water. As such, UV lamps can only be used in conjunction with a suitable EPA registered pool water sanitizer to ensure bathers are protected against disease and infection. For the UV lamp to be effective as a germicide it must emit UV light wavelengths in the 200 – 310 nanometer (nm) which is in the UV-C range, and to a lesser extent UV-B.

UV light inactivates microorganisms by damaging their nucleic acid, thereby preventing the microorganism from replicating which thereby prevents infecting a host.

### Pool Water Chemistry

Water, by itself, is rarely free of harsh minerals and various chemicals or contaminants (e.g. bacteria, ammonia, living organisms, and

other pollutants). Some of these contaminants are evident in the water used to fill the pool, some come from certain environmental factors, and others result from pool chemistry. The fact is that the majority of these minerals and impurities must be eliminated from your pool. To do this requires the addition of certain chemicals to combat the undesired effects caused by the contamination, and to have the proper amount of minerals to achieve “balanced water”. Alkalinity, pH, and hardness are your water balancers and are responsible for creating optimal water chemistry. If these levels are within their desired ranges, if water circulation is adequate, and a proper maintenance program is followed, the result will be clean, clear sparkling blue water.

When water is considerably less than saturated (minerals) it is said to be in a corrosive or aggressive condition. When water is over saturated and can no longer hold the minerals in solution it is in a scaling condition. Balanced water is that which is neither over-saturated nor under-saturated. Water which is under-saturated will attempt to saturate itself by dissolving everything in contact with it in order to increase its own mineral content. Water which is over saturated will attempt to rid itself of this content by precipitating minerals out of solution in the form of scale. This gives a whole new meaning to the phrase “water seeks its own level”.<sup>3</sup>

**pH** – Although a pH of 7.0 is considered “neutral” for everyday water, it is not ideal for pool water. The ideal pH range for pool water is 7.2 – 7.8, with pH of 7.4 – 7.6 being optimal. Therefore, for a swimming pool, the pH scale has to be revised:

- A pH Level Between 1.0 – 7.19 Will Be Considered Acidic (Having a Low pH)
- A pH Level Between 7.2 – 7.8 is Good For Pool Water
- A pH Level Between 7.81 – 14.0 Will Be Considered Alkaline (Having a High pH)

The pH affects three key aspects of pool operation as well as swimmer comfort and safety:

- Water maintained within the range of 7.2 – 7.8 is generally not irritating to eyes and skin.
- The pH range of 7.2 – 7.8 is good in terms of the sanitizing and oxidizing efficiency of chlorine sanitizers. At higher pH, only a small fraction of the free available chlorine will be in hypochlorous acid form, and hypochlorous acid is far more effective as a sanitizer and oxidizer than is hypochlorite ion. At lower pH, chlorine gas may form resulting in inefficiencies due to chlorine loss and possible breathing hazards for occupants. The effectiveness of other sanitizers (e.g. bromine, Polyhexamethylene biguanide [PHMB]) is not dependent on pH.
- pH is a key driver in maintaining water balance by avoiding conditions in which the water is excessively corrosive to plumbing and pool surfaces, or, predisposed to deposit scale on exposed surfaces.

pH can be raised or lowered with the addition of certain chemicals. Sodium Bisulfate is commonly used to reduce pH and Sodium Carbonate is commonly used to raise pH. At the conclusion of all surface preparation and prior to the installation of tile, measure the pH level of the substrate. This work should not commence until the pH value is 10 or less.

**Total Alkalinity** – Alkalinity is often confused with pH as a unified and singular water-balancing chemical. While alkalinity has a definite affect on pH, they are certainly not the same. A pH test will show the acidity or alkalinity of water, while the Total Alkalinity test will show the quantity of alkaline material in the water. Some alkaline material is required in the water to maintain proper water chemistry. Both pH and Total Alkalinity play a role in achieving and maintaining water chemistry; therefore both must be adjusted on a regular basis. It should also be known that the Total

Alkalinity level must be adjusted first and then the pH. This is because Total Alkalinity is a measure of the pH buffering capacity of the water (the ability of the water to resist pH change); if Total Alkalinity is in range, the pH is far less likely to fluctuate. For adequate buffering of the pool pH, a Total Alkalinity level of 60 – 180 ppm as calcium carbonate (CaCO<sub>3</sub>) must be maintained. Ideally, the Total Alkalinity level should be between 80 – 100 ppm as CaCO<sub>3</sub> where calcium hypochlorite, lithium hypochlorite and sodium hypochlorite are used because these sanitizers will cause the pH to rise.

Total Alkalinity is generally expressed in terms of the equivalent concentration of calcium carbonate in mg/L (or ppm). For protection of calcium based materials (cement based grouts, cement plasters, etc...) within the pool, it is important to maintain sufficient carbonate alkalinity.

**Calcium Hardness** – The Calcium Hardness of pool water is the measure of primarily calcium and magnesium combined. Maintenance of Calcium Hardness in the recommended range helps to keep water balanced per the Langelier Saturation Index, influencing the water's corrosiveness or tendency to scale, depending on the degree of calcium saturation. Low levels of Calcium Hardness are not as important for non-cement based surfaces, but, regardless of the pool surfaces, it is important to keep the calcium concentration below the maximum to avoid production of scale and cloudy water. Problems associated with low Calcium Hardness levels affecting the grout can be avoided by using LATICRETE® SpectraLOCK® PRO Grout<sup>†</sup> instead of a cement based grout.

Pool water Calcium Hardness shall be maintained between 150 – 1000 ppm as CaCO<sub>3</sub>, and ideally between 200 – 400 ppm for swimming pools. In spas, Calcium Hardness shall be maintained between 100 – 800 ppm as CaCO<sub>3</sub>, and ideally between 150 – 250 ppm.

Typically, Calcium Hardness levels should be maintained between 200 – 450 ppm (0.2 – 0.45 mℓ/ℓ) with a maximum of 500 ppm (0.5 mℓ/ℓ). Maintaining Hardness levels within the accepted range is important and levels too high or too low can lead to a variety of problems.

If the Hardness level gets too low these problems may occur;

- Dissolved Metallic Parts of Your Pool
- Stained and Etched Concrete or Cement Products in Your Pool (Including Cement Based Grout)
- Stained Liner in Vinyl-Lined Pools
- Blistering or Delamination of Fiberglass in Fiberglass Pools
- Minimizes the Effects of Chlorine or Bromine
- Foam
- Eye and Skin Irritation

If the Hardness level in a pool is too low it can be raised with the addition of Calcium Chloride.

If the Hardness level gets too high the following problems can occur;

- Cloudy Water (Turbidity)
- Scale Formation (Heavy Metal Minerals in Suspension Which Form Deposits on Interior Pool Surfaces)
- Poor Filtration (Caused by Scale Build up in Plumbing Which Restricts Water Circulation)
- Minimizes the Effects of Chlorine
- Eye and Skin Irritation

If the Hardness level is too high then lowering it should be done immediately, but, it is not possible to lower the Hardness level with the addition of a chemical or treatment. The Hardness level can only be lowered by draining the pool, either partially or completely. The use of a Metal Sequestering Agent is recommended to rid the water of the excess minerals which lead to elevated Calcium Hardness levels.

Metal	Sources	Colors
Calcium	Plaster, grout, mortar, cal-hypo chlorine shock	White crystals or precipitate
Cobalt	Fiberglass shells	Red, blue, gray, or black
Copper	Copper algacides, ionizers, corrosion of copper pipes, fittings and heaters	Blue, green, blue/green, black, dark red, or teal
Iron	Well water, corrosion of iron pipe and fittings	Dark red, brown, black, gray or green
Manganese	Well water	Pink, red, or black

Figure 11.3 – Heavy metals found in pool water, their sources and scale or water color with excessive levels<sup>5</sup>.

**Total Dissolved Solids** – Total Dissolved Solids is a measurement of the total amount of matter (minerals, chemical residue and other particles) that remains in water after evaporation.

**Total Dissolved Solids (TDS)** – Total dissolved solids is a measure of all dissolved ions (total amount of solid matter) in the water and may or may not indicate a problematic condition. The following will contribute to TDS: source water, rain water, treatment chemicals, and bather waste. As water evaporates, only the water itself evaporates while the particulate matter (solids) remains in the pool water, thereby increasing concentration. High TDS levels (1500 ppm and above) may correlate with the presence of undesirable substances that may cause poor water quality and indicate the need for water replacement. It is necessary to replace water lost to evaporation with tap water, or other source, as well as additional chemicals. However, this new addition of water and chemicals will increase the TDS in the water.

This process will continue for extended periods and the TDS will continue to rise. However, if the amount of solids in the pool water gets too high then the particulate matter will act as a sponge and minimize the effects of new pool chemicals added to the water. Typically, it takes 6 – 8 years for the TDS level to reach

a critical level, and the only way to correct the problem is to empty water from the pool and replace with new water and chemicals.

Salt water pools intentionally have high concentrations of sodium chloride which contribute to TDS, but will not cause decreased sanitizer efficiency or cloudy water.

If the Total Dissolved Solids get too high, the following indicators or problems may occur;

- Continual Addition of Excess Chemicals
- Water Chemistry Tests Fine But Water is Not Clean and Sparkling (Water Has Odd Tint But You Can Still See Pool Bottom)
- Algae Growth Despite a Good Chlorine Reading and Pool Water Chemistry
- Varying and False Readings on Chemical Tests

The Saturation Index (SI), also known as the Langelier Saturation Index (LSI), is used to equate the calcium carbonate solubility of pool water and its effect on pool surfaces and equipment. Premature failure of equipment can occur with excessive corrosion. Clogging restrictions in pipes due to excessive scaling can result in reduced flows, increased back pressures, or reduced heater efficiency.

The formula is  $SI = pH + TF + CF + AF - 12.1$ , or, Saturation Index = pH + Temperature Factor (TF) + Calcium Hardness Factor (CF) + Total Alkalinity Factor (AF) minus 12.1. The 12.1 is a constant applied for Total Dissolved Solids between 0 and 1,000 ppm. When TDS is greater than 1,000 ppm, use the Table shown in Figure 11.3. The TF, CF and AF are factors based on the temperature, Total Alkalinity and Calcium Hardness levels in the water and are shown in Figure 11.4. The A result of between -0.3 and +0.5 indicates balanced water. The first step in properly balancing water is, knowing how to test the water. Once the test procedures are properly performed it is necessary to know how to read the data and treat the water accordingly. Tests for pH, alkalinity, water hardness, mineral content, and sanitizer levels must be performed on a regular basis. In order

## Section 11 – Pool Water and Tile Installation Maintenance

to combat the effects of bacteria, improper mineral levels, wrong pH levels, and poor sanitizer levels the person who is monitoring the pool water should know what treatment must be provided to correct the problems).

TDS	Factor
<1,000	12.10
1,000	12.19
2,000	12.29
3,000	12.35
4,000	12.41
5,000	12.44

Figure 11.4 – Factor conversions for elevated TDS levels.

Temperature		Total Alkalinity†		Calcium Hardness	
°F	TF	ppm	AF	ppm	CF
32	0.0	25	1.4	25	1.0
37	0.1	50	1.7	50	1.3
46	0.2	75	1.9	75	1.5
53	0.3	100	2.0	100	1.6
60	0.4	125	2.1	125	1.7
66	0.5	150	2.2	150	1.8
76	0.6	200	2.3	200	1.9
84	0.7	250	2.4	250	2.0
94	0.8	300	2.5	300	2.1
105	0.9	400	2.6	400	2.2
		800	2.9	800	2.5

Use the reading closest to your actual reading in choosing the factor.

† Total alkalinity in this context refers to the total of carbonate and bicarbonate alkalinity. If cyanuric acid is used, a correction factor must be used (refer to local pool water specialist for the cyanuric acid correction factor).

Source: ANSI/APSP-11 2009

Figure 11.5 – Conversion factors for Temperature, Total Alkalinity and Calcium Hardness when using the Langelier Saturation Index (LSI).

For example: The Langelier Saturation Index of pool water (without cyanuric acid correction factor) with a pH of 7.6, a temperature of 81°F (TF), Total Alkalinity (AF) of 100, and Calcium Hardness (CF) of 400, and a TDS of 850 is calculated as  $SI = 7.6 + 0.7 + 2.0 + 2.2 - 12.1 = 0.4$ .

It should be noted that it is possible to have an ideal LSI and still have pool water that is corrosive or scaling. Each of the levels affecting pool water chemistry must be maintained within ideal ranges. For instance, an LSI which calculates as  $SI = 8.1 + 0.7 + 2.0 + 1.3 - 12.1 = 0.00$  which states that the LSI is very good but the pH is high. In this state, the high pH can have a corrosive effect on cement based products if the calcium level is low.

Once water chemistry is balanced, it can be lost within 24 hours. Maintaining proper water balance requires constant monitoring, testing and chemical additions. Unfortunately, water chemistry balance is not as easy as adding one pound of treatment every other day; it requires knowledge, good record-keeping, patience, and dedication to keep the pool functioning properly and the users of the pool safe.

**Mineral Balance** – When discussing minerals in water chemistry the reference is usually to the presence of copper, iron, calcium, manganese, and magnesium, as well as various other minerals. Water is a solvent, in fact, it is often referred to as the universal solvent. As a solvent, when water chemistry is out of balance, water will dissolve any metallic material that it comes in contact with to satisfy its own needs for certain minerals and to achieve saturation point. After achieving saturation point, water will rid itself of any excess dissolved material (known as the precipitation point of water). In fact, water has the ability to dissolve, corrode, stain, scale, or calcify any surface in your pool in which the water comes in contact. This list of surfaces includes walls, floors, ladders, hand rails, light fixtures, internal pump and filter parts, grout, adhesives, and stone. The fact that water is volatile and must be kept under close supervision is critical to the long term performance of any pool system. The effects of improper mineral (metal) balance can also lead to colored water, stains and the formation of scale.

Measurement of pool chemicals and minerals utilize parts per million (PPM) as their reading, and pH is measured using the pH scale.

CHEMICAL	MINIMUM	IDEAL	MAXIMUM
Chlorine (Free Available Chlorine)	1 ppm (0.001 ml/l)	2 – 3 ppm (0.002 – 0.003 ml/l)	4 ppm (0.004 ml/l)
Cyanuric Acid	25 ppm (0.025 ml/l)	30 – 50 ppm (0.030 – 0.050 ml/l)	100 ppm (0.1 ppm)
Bromine	1 ppm (0.001 ml/l) for pools 2 ppm (0.002 ml/l) for spas	3 – 4 ppm (0.003 – 0.004 ml/l) for pools 4 – 6 ppm (0.004 – 0.006 ml/l) for spas	5 ppm (0.005 ml/l) for pools 6 ppm (0.006 ml/l) for spas
Total Alkalinity	60 ppm (0.06 ml/l)	80 – 100 ppm (0.08 – 0.1 ml/l)	180 ppm (0.18 ml/l)
Calcium Hardness	150 ppm (0.15 ml/l) as CaCO <sub>3</sub>	200 – 400 ppm (0.2 – 0.4 ml/l) as CaCO <sub>3</sub>	1000 ppm 1.0 ml/l as CaCO <sub>3</sub>
pH	7.2	7.4 – 7.6	7.8

Figure 11.6 – Ideal PPM (parts per million) Readings for Successful Pool Water Chemistry (ANSI/APSP-112009).

### 11.4 Pool Water Chemistry and How It Affects Tile or Stone Installations

Maintaining pool water chemistry at proper levels is extremely important, not only to the owner and users of the pool, but also to the tile or stone installation or plaster located in the pool. Pool water which is out of balance can be unhealthy, unsightly, as well as time consuming and expensive to correct.

Correcting any problems with pool chemistry can actually take the pool out of use for a period of time until the proper balance is achieved to ensure the safety and well being of the pool users.

Tile and stone installations may also be affected by the pool chemistry. A big difference between correcting the pool water chemistry and fixing the tile or stone installation is how long the pool may be out of commission to make repairs. Let's look at how pool water

chemistry can cause problems with a tile or stone installation;

The pH of pool water should be between 7.2 and 7.8 on the pH scale. If the pH level gets too low then any cementitious material within the pool can be affected. Portland cement is reactive when exposed to acids and this exposure can have a deteriorating affect on the concrete or cement based product (e.g. grout, plaster, gunite). While the level of acidity is usually not very strong, there can be cumulative effects if the problem is not treated promptly or repeats over periods of time. If the pH of the pool is too low (acidic) the effects on the tile or stone installation can be;

- Etched Cement Based Grout or Plaster
- Cement Based Grout or Plaster Erosion
- Blotchy Cement Based Grout or Plaster
- Fading Cement Based Grout Color
- Calcite Loss in Marble and Limestone (Loss of Stone Surface Material)
- Calcium Loss in Portland Cement Based Installation Materials Which Can Lead to Weakening and Erosion of Materials
- Stains on Horizontal Grout or Plaster

If the pH of the pool water gets too high (alkaline) the effects on the tile or stone installation can be;

- Scale Formation on Pool Walls and Floor
- Greater Potential for Algae Growth

If the Total Alkalinity and/or Total Hardness of the pool water get outside of their specific ranges there could be an effect on a tile or stone installation. If the Alkalinity or Hardness gets too low the effects on tile or stone can be;

- Staining and Etching of Cement Based Grout or Plaster
- Stains (in the Stone and/or Grout) Caused by Dissolving Metallic Components of the Pool

A problem resulting from Alkalinity and/or Total Hardness of the pool water being too high can lead to this effect on the tile or stone installations;

- Scale formation on pool walls and floors

Pool water balance issues are very common in public pools and water features. The use of epoxy based grouts and setting material is a great choice to help overcome some of these potential issues. Epoxy materials are typically not affected by the etching or erosion problems inherent in cement based products by pH, alkalinity and hardness imbalance. LATICRETE recommends the use of LATICRETE® SpectraLOCK® PRO Grout† for all submerged pool, fountain, spa, or water feature installations. LATICRETE SpectraLOCK PRO Grout utilizes non-pigmented technology which means that the grout will not become blotchy or fade due to imbalanced pool water chemistry.

LATAPOXY® 300 Adhesive will provide the ultimate in adhesive performance in submerged installations. Providing incredible bond strength and high chemical resistance, LATAPOXY 300 Adhesive is the product of choice for installations in pools and spas with steel or fiberglass shells.

### 11.5 Tile Installation Maintenance and Repairs

It will be necessary, from time to time, to inspect the pool for possible problems with plumbing, lighting, fixtures, tile or stone, and fittings/connections. Improper water balance and exposure to chemicals can lead to potential problems with these installations so routine inspection is required. During some of these inspections, repairs and water balancing treatments it will be necessary to drain the pool.

Replacing tile, stone or grout should only be attempted when a pool is drained and sufficiently dry to accept a tile or stone installation. There should be no repairs or

replacement attempted while submerged. To replace any tile, stone or grout in a pool, fountain, water feature or spa the use of any of the LATICRETE materials listed in Section 7 can be used for the particular substrate in question.

Proper maintenance of pool water chemistry will help to prevent problems and limit the down time of the swimming pool, fountain, spa, or water feature.

Unless otherwise noted, much of the information used in this section was excerpted from ANSI/APSP-11 2009, ANSI/NSPI-1 2003, and [www.poolmanual.com](http://www.poolmanual.com).

1. Spring Pool Openings, Retrieved on September 24, 2008 from [www.poolcenter.com](http://www.poolcenter.com).
2. Fall Pool Closings, Retrieved on September 24, 2008 from [www.poolcenter.com](http://www.poolcenter.com).
3. Water Balancing, Retrieved on September 24, 2008 from [www.poolcenter.com](http://www.poolcenter.com).
4. Benefits of Salt Water Pools, Retrieved on March 14, 2007 from [www.poolplaza.com](http://www.poolplaza.com).

† United States Patent No.: 6881768 (and other Patents).

## Section 12 – Troubleshooting and Case Study



### Section 12 – Troubleshooting and Case Study

This section will cover some of the most common installation issues and pitfalls surrounding swimming pool, fountain and spa applications. In contrast, the case study will highlight and stress the critical aspects of a tile or stone installation in wet area applications.

#### 12.1 Troubleshooting Pictorial



Figure 12.1 – Exterior applications must be protected from the elements during the installation and installation materials cure periods. A temporary tent was erected over this swimming pool to protect the application from direct sunlight, wind and rain.



Figure 12.2 – Effects of exposure to rain prior to the waterproofing membrane reaching its full cure. This damaged waterproofing membrane will need to be removed, reinstalled, protected and allowed to reach its full cure.



Figure 12.3 – Once the waterproofing membrane is applied, it should be protected from traffic and work from other trades.



Figure 12.4 – The liquid applied waterproofing membrane must be flashed into a two part clamping style drain to create a watertight seal.



Figure 12.5 – Steel pool tank. Porcelain mosaic tiles are installed with a 100% solids epoxy thin set mortar adhesive (e.g. LATAPOXY® 300 Epoxy Adhesive) to achieve a suitable bond to the steel tank assembly.



Figure 12.6 – The increased use of prefabricated tubs (e.g. fiberglass or stainless steel) requires the use of a 100% solids epoxy adhesive (e.g. LATAPOXY 300 Adhesive). In this instance, a typical latex fortified portland cement based thin set mortar was used over a fiberglass tub that resulted in bond failure.



Figure 12.7 – Porcelain mosaic tiles installed on pool deck. Notice the ribbons of latex fortified thin set mortar combed in one direction to maximize coverage.



Figure 12.8 – Only enough latex fortified portland cement thin set mortar is spread to allow the installation of the porcelain mosaics within the mortar's typical open time – generally 15 minutes at 70°F (21°C).



Figure 12.9 – It is good practice to periodically lift / remove freshly installed tiles or stones to verify that a minimum 95% continuous adhesive mortar is achieved. If the desired coverage is not achieved, use a larger trowel to dispense adequate adhesive mortar and beat-in the tiles correctly to achieve the desired results.



Figure 12.10 – The effects of a mesh mounted glass tile utilizing an adhesive and mesh that are not suitable for continuous submersion. The adhesive has expanded and lost bond to the back of the tiles.

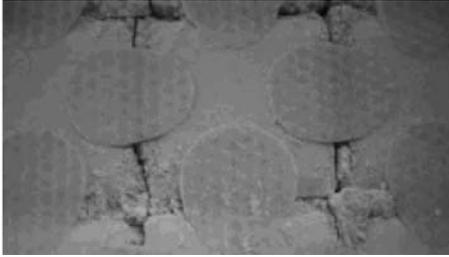


Figure 12.11 – Large PVC dots on rear/edge mounted porcelain mosaic tiles can lead to bonding issues as is evidenced from these photos. Latex fortified portland cement based thin set mortars may have a difficult time achieving a sufficient bond to the PVC rubber. The PVC dots are covering 50 – 60% of the tile back. An epoxy adhesive may be required to install tile mounted in this fashion in wet area and continuous submersion applications.

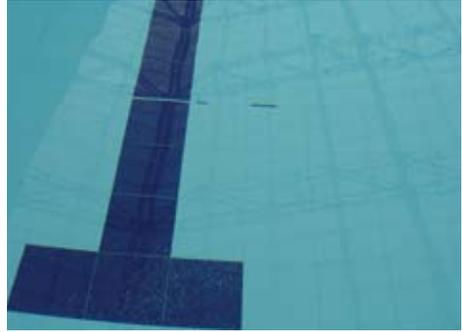


Figure 12.12 – Sealant in the movement joint is missing. In order for the sealant to maintain its functional ability, the joint must be correctly designed. Namely:

1. The joint depth must be at least  $1/2$  the width of the joint. Therefore, if a joint is  $1/2$ " (12 mm) wide, the joint depth must be at least  $1/4$ " (6 mm).
2. Closed cell polyurethane backer rod should be used in joints with sufficient depth. The backer rod must fit neatly into the joint without compacting. Bond breaker tape can be used in joints that will not allow the use of backer rod.
3. Sealant primer is generally used in wet area applications. Use non-solvent based primers.
4. The sealant and primer must be suitable for wet area applications and must not bond to the backup materials.
5. Use a class 25 sealant. This is a sealant that can withstand an increase and decrease of  $\pm 25\%$  of joint width.
6. Joint flanks (tile edges) to which the sealant will bond, must be kept clean and dry.
7. According to the Tile Council of North America's Movement Joints – Vertical and Horizontal Detail EJ-171, typical wet area movement joints should be spaced every 8 – 12' (2.6 – 4 m) in each direction and against all restraining surfaces. Movement joints that are 8' (2.6 m) on center should be a minimum of  $3/8$ " (9 mm) wide and joints that 12' (4 m) on center should be a minimum of  $1/2$ " (12 mm) wide.

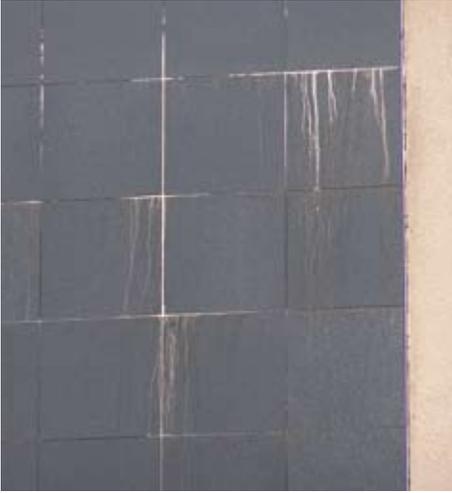


Figure 12.13 – Efflorescence becomes apparent in this baptismal font once the water is drained. When the vessel is full of water, the efflorescence remains in solution and is not visible. However, upon draining the water, the soluble salts crystallize and manifests as efflorescence. Proper attention to negative side vapor retarder placement is critical in wet applications. The proper placement and use of a suitable vapor retarder behind the concrete wall assembly would have minimized this unsightly issue.



Figure 12.14 – Notice the difference in color between the tile and grout above the water line and below the water line. This condition is typical because cement-based grout absorbs water and creates the darker look at the water line. Expectations should be managed accordingly.

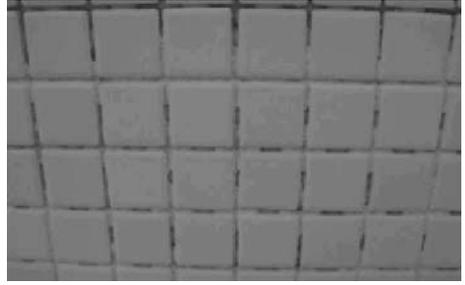


Figure 12.15 – Erosion of grout joints is the diagnosis on this application. Possible causes are as follows:

1. Premature exposure to water or filling the vessel with water prior to the grout reaching its full cure (typically 14 days 70°F (21°C) if a latex fortified portland cement based grout is used or 10 days if an epoxy based grout is used.
2. Poor pool water maintenance. Improper balance of pool water pH, alkalinity and water hardness can all lead to this condition. Refer to section 11 for more information.
3. Edge mounted PVC dots that do not allow sufficient grout joint depth.
4. Insufficient packing of the joints during installation (e.g. bridging joints).

### 12.2 Case Study – Australian Pool Project



**Case Study 1** – Concrete Pool Structure is being prepared to receive the tile finish. Examination of the concrete shell is made to evaluate and determine if leveling / preparation is required. The concrete shell is scheduled to receive a waterproofing membrane and subsequent porcelain tile finish. The concrete will require preparation prior to the installation of these materials. Notice the tile mechanic as he floats and shapes the contour of the pool utilizing templates, floats and screeds to achieve the desired form and height of the renders and mortar beds.



**Case Study 2** – Mechanic is using a wooden template to shape and screed the swale in the water feature tank. Latex fortified portland cement mortars and renders are used for this purpose. Skilled mechanics determine and set finished tile heights, spots, and intersections using lasers, levels and site line builder's transit levels.





**Case Study 3** – The use of a LATICRETE® liquid latex fortified portland cement based leveling mortar is used to correct any irregularities in the concrete shell. Proper surface preparation will result in an aesthetically pleasing tile or stone finish.



**Case Study 4** – Once the concrete shell is prepared, it is now ready to receive the waterproofing membrane. The leveling mortars are typically allowed to cure 48 to 72 hours at 70°F (21°C) prior to the installation of the waterproofing membrane. The penetrations, drains, lights, windows, pipes, etc...are prepared first. In this instance LATICRETE 9235 Waterproofing Membrane, the gold standard in waterproofing membranes for tile and stone installations, is being used. The liquid component and fabric is used to first treat these areas.



**Case Study 5** – Coves, corners, and any changes of plane are also pretreated.

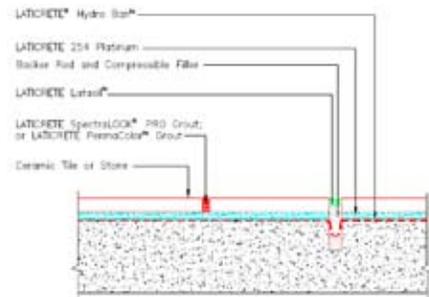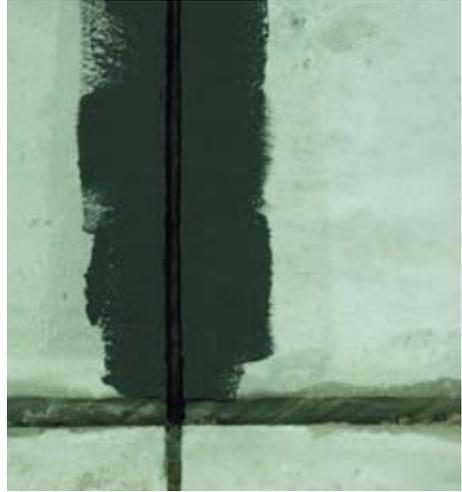

**Case Study 6** – Movement joints are also included in the pre-treated areas. The waterproofing membrane is looped down into the movement joint (to accommodate any potential movement). The waterproofing membrane must be given enough “slack” when looped into the joint to accommodate the anticipated movement. The waterproofing membrane is then lapped onto the concrete / mortar bed joint flanks and horizontal areas by at least 2 – 4" (50 – 100 mm) to receive the main waterproofing membrane treatment.



**Case Study 7** – Once the pre-treated areas are dry, the main membrane application can commence. Notice how the fabric component is pre-cut in order to be placed quickly into the freshly applied liquid component. Generally, the waterproofing membrane is overlapped by a minimum of 2" (50 mm) onto adjacent areas. A vacuum cleaner is used to ensure that the concrete is cleaned of any dust or debris prior to the application of the waterproofing membrane. The concrete is then dampened with a sponge and clean water in an effort to reduce the suction effect of the concrete and allow the membrane to remain workable for an extended period of time.




**Case Study 8** – The waterproofing installation is complete. The waterproofing membrane must be allowed to fully cure prior to the flood test. Full cure rates will vary by product type. Consult with the waterproofing manufacturer for full details.




**Case Study 9** – The penetrations are sealed with a suitable flexible sealant. Generally, 100% silicone sealant (e.g. LATICRETE® Latasil™ with LATICRETE 9118 Primer) or urethane sealant with non-solvent based primers can be used. All precautions to create a complete watertight tank must be taken to ensure a successful flood test.



**Case Study 10** – The swimming pool is now in the flood test stage. The waterproofing membrane must be allowed to reach its full cure prior to flood testing. Full cure will vary by manufacturer and product type. The pool is filled at a rate of 1" (25 mm) per hour. Generally the water level will be continually monitored during the length of the flood test (typically 24 - 72 hours) to determine a vessel's 'water-tightness'. The water is then drained at a rate of 1" (25 mm) per hour.

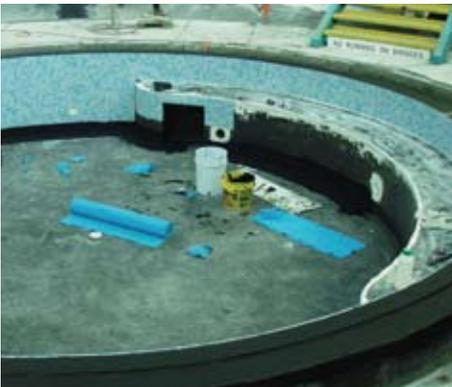

**Case Study 11** – The tile installation can now begin. Generally, work begins on the vertical areas first. A high strength liquid latex fortified thin set mortar (e.g. LATICRETE 254 Platinum; or, LATICRETE 4237 Latex Additive mixed with LATICRETE 211 Powder) suitable for submerged applications is used. Care is required when working over the waterproofing membrane.

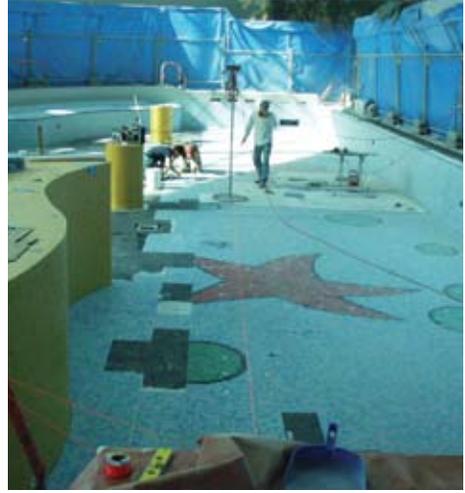


**Case Study 12** – The installation of the tile in the horizontal areas is now complete. Once the tiles are installed and grouted; the installation must cure for a full 14 days after the final grouting period at 70°F (21°C) if a latex fortified portland cement based grout (e.g. LATICRETE PermaColor™ Grout) is used or 10 days if an epoxy based grout (e.g. LATICRETE SpectraLOCK® PRO Grout\*) is used.

After the installation materials have fully cured, the water feature can be filled with water. Use the same water fill and drain rate of 1" (25 mm) per hour whenever a tiled water feature is filled and drained.



**Case Study 13** – The pool in its finished state and ready for the crowds.

\* United States Patent No.: 6881768 (and other Patents).



## Section 13 – Appendix



## 12.3 Swimming Pools / Fountains/ Water Features Frequently Asked Questions

### 1. What underlayments are acceptable to receive ceramic tile or stone in a pool or water feature?

There are several acceptable substrates for ceramic tile or stone in submerged applications. Among them are concrete, masonry surfaces, brick, block, stainless steel, and cement plaster.

### 2. How do I determine which size notch trowel to use for my tile or stone installation?

Check your bond to verify the appropriate continuous thin set mortar coverage. Wet area installations should achieve a minimum coverage of 95%. Back buttering the tile or stone will help achieve a greater percentage of coverage.

All tiles or stones (wall or floor) using a thin set mortar - up to 4" x 4" (100 mm x 100 mm) use a 1/4" x 1/4" (6 mm x 6 mm) square or loop notch trowel.

All tiles or stones (wall or floor) using a thin set mortar - up to 16" x 16" (400 mm x 400 mm) use a 1/4" x 3/8" (6mm x 9mm) square or loop notch trowel.

All tiles or stones (wall or floor) using a thin set mortar greater than 16" x 16" (400 mm x 400 mm) use a 1/2" x 1/2" (12 mm x 12 mm) square notch or a 3/4" (19 mm) loop notch trowel

### 3. How long must I wait before installing LATICRETE® 9235 Waterproofing Membrane or LATICRETE Hydro Ban™?

Most surfaces can be covered with no wait time. Some exceptions are:

New Concrete – minimum 14 days at 70°F (21°C)

Latex mortar beds – 72 hours at 70°F (21°C) or until sufficiently dry

Leveling or patching materials- see instructions for cure times of those products. Refer to How to Install LATICRETE® Membranes (WPAF.5) and LATICRETE Hydro Ban™ Installation Instructions (DS 663.5) for additional information.

### Related Documents:

LATICRETE Hydro Ban Installation Instructions (DS 663.5)

LATICRETE How to Install LATICRETE Membranes (DS WPAF.5)

### 4. How soon can I install tile over LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban?

As soon as membrane is dry to the touch. Usually 4–6 hours at 70°F (21°C) after last coat of liquid. Refer to How to Install LATICRETE Membranes (WPAF.5) or LATICRETE Hydro Ban Installation Instructions (DS 663.5) for additional information. However, if a flood test is required, LATICRETE 9235 Waterproofing Membrane requires a 7 day cure time at 70°F (21°C) before flood testing can commence. LATICRETE Hydro Ban requires a 2 hour cure time at 70°F (21°C) or higher and 24 hour cure time at 50°F (10°C) to 69°F (20°C) after second coat has dried prior to flood testing.

### Related Documents:

LATICRETE 9235 Waterproofing Membrane DS 236.0

LATICRETE Hydro Ban DS 663.0

LATICRETE Hydro Ban Installation Instructions DS 663.5

LATICRETE How to Install LATICRETE Membranes DS WPAF.5

### 5. What types of Warranty does LATICRETE offer for wet area applications?

LATICRETE offers 3 different warranties for installation of tile and stone in submerged applications. For more information on LATICRETE warranties please visit [www.laticrete.com](http://www.laticrete.com).

### Related Documents:

LATICRETE Product Warranty (1 Year) DS 230.13

LATICRETE 25 Year Systems Warranty DS 025.0

LATICRETE 10 Year Systems Warranty DS 230.12

## 6. How do I prepare a concrete substrate to receive ceramic tile or a waterproofing membrane?

Make sure that the existing concrete is clean, dry, structurally sound and free from any bond breaking or bond inhibiting materials. Bond inhibiting materials can include, but are not limited to, sealers, waxes, oils, curing compounds, dirt, grease, form releases, paint, old adhesives, laitance from over finishing, etc. If these materials are present on the concrete, they must be completely removed prior to any direct bond installations of tile or stone. Additionally, the industry tolerance for substrate flatness is to have no variance greater than 1/4" in 10' (6 mm in 3 m). Use a LATICRETE Latex Fortified Underlayment/Patching material to accomplish this. (e.g. LATICRETE 211 Powder mixed with LATICRETE 4237 Latex Additive; or, LATICRETE 254 Platinum for patching depths from a feather-edge to 1/2" (0–12 mm). Use LATICRETE 3701 Fortified Mortar Bed, or, LATICRETE 226 Thick Bed Mortar mixed with LATICRETE 3701 Mortar Admix to float walls and to screed floors. A slurry bond coat of LATICRETE 254 Platinum; or, LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive is required under dry pack screeds and bonded mortar beds.

### Related Documents:

Preparation of Concrete Slabs TDS 118

## 7. How do I prepare walls and floors for a thin set application?

Make sure that the existing surface is clean, dry, structurally sound and free from any bond breaking or bond inhibiting materials. Bond inhibiting materials can include, but are not limited to, sealers, waxes, oils, curing compounds, dirt, grease, form releases, paint, old adhesives, laitance from over-finishing, etc. If these materials are present on the concrete, they must be completely removed prior to any direct bond installations of tile or stone. Additionally, the industry tolerance for substrate flatness is to have no variance greater than 1/4" in 10' in 10' (6 mm in 3 m).

Use a suitable LATICRETE Latex Fortified Underlayment/Patching material to accomplish this. [e.g. LATICRETE 211 Powder gauged with LATICRETE 4237 Additive; or, LATICRETE 254 Platinum from a feather-edge to 3/8" (0–9 mm)].

### Related Documents:

Preparation of Wall and Floor Mortars for Thin Bed Installations TDS 146

Detail for installation of tile in concrete pools ES-P601

## 8. What adhesives are acceptable for installing tile over LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban in submerged applications?

LATAPOXY® 300 Adhesive

LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive

LATICRETE 254 Platinum

LATICRETE 3701 Mortar Admix mixed with LATICRETE 272 Mortar

LATICRETE 3701 Mortar Admix mixed with LATICRETE 317

### Related Documents:

LATICRETE 9235 Waterproofing Membrane DS 236.0

LATICRETE Hydro Ban DS 663.0

LATAPOXY 300 Adhesive DS 633.0

LATAPOXY 210 Adhesive DS 630.0

LATICRETE 211 Powder DS 239.0

LATICRETE 4237 Latex Additive DS 230.1

LATICRETE 254 Platinum DS 677.0

LATICRETE 272 Mortar DS 259.0

LATICRETE 317 DS 317.0

LATICRETE 3701 Mortar Admix DS 231.0

LATICRETE Installation Instructions for Membranes (DS WPAF.5)

LATICRETE Hydro Ban Installation Instructions (DS 663.5)

### 9. What approvals are available for LATICRETE® 9235 Waterproofing Membrane and LATICRETE Hydro Ban™?

#### Related Documents:

IAPMO Waterproofing Membrane Approval For Shower Pan/Waterproofing Membrane – File No. 3524 ([www.icc-es.org](http://www.icc-es.org))

ICC ES Evaluation Report – LATICRETE® Hydro Ban™ Shower Pan/Waterproofing Membrane – ESR-2417 ([www.icc-es.org/pmg](http://www.icc-es.org/pmg))

ICC PMG Listing – LATICRETE 9235 Waterproofing Membrane – PMG-1005

City of Los Angeles Approval for 9235 Shower Pan / Waterproofing Membrane

### 10. Will LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban control moisture or water from entering the underside of the tile system due to negative hydrostatic pressure or excessive moisture content?

No! LATICRETE 9235 Waterproofing Membrane and LATICRETE Hydro Ban are both designed to contain water from the positive side only. These products are not recommended where negative hydrostatic pressure or excessive moisture vapor transmission exists. The moisture vapor emission rate should not exceed 5 lbs./1,000ft<sup>2</sup>/24 hours (283 µg/s m<sup>2</sup>) as tested per ASTM F1869 or 75% RH as measured with in situ moisture probes (ASTM F2170).

#### Related Documents:

LATICRETE 9235 Waterproofing Membrane DS 236.0

LATICRETE Hydro Ban DS 663.0

LATICRETE Installation Instructions for Membranes (DS WPAF.5)

LATICRETE Hydro Ban Installation Instructions (DS 663.5)

### 11. How soon can I fill a water feature for use?

The installation must cure for a full 14 days after the final grouting period at 70°F (21°C) if a latex fortified portland cement based grout

(e.g. LATICRETE PermaColor™ Grout) is used, or 10 days if an epoxy based grout (e.g. LATICRETE SpectraLOCK® PRO Grout\*) is used.

#### Related Documents:

Installation of Tile in Swimming Pools TDS 192

### 12. What types of sealant are compatible with LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban?

Use LATICRETE Latasil along with LATICRETE Latasil 9118 Primer for submerged installations or in steam rooms

#### Related Documents:

Detail ES-WP300

LATICRETE Latasil™ DS 6200.1

LATICRETE Latasil 9118 Primer DS6528.1

LATICRETE Installation Instructions for Membranes (DS WPAF.5)

LATICRETE Hydro Ban Installation Instructions (DS 663.5)

### 13. How do I treat the drains when using LATICRETE 9235 Waterproofing Membrane or LATICRETE Hydro Ban?

You must use a 2-part clamping ring style drain. The LATICRETE waterproofing membranes must be installed down into the drain assembly and clamped down.

#### Related Documents:

Drawing WP301

LATICRETE Installation Instructions for Membranes (DS WPAF.5)

LATICRETE Hydro Ban Installation Instructions (DS 663.5)

### 14. If I find an air bubble or blister in the waterproofing membrane, what can I do?

When using LATICRETE 9235 Waterproofing Membrane cut out the bubble or blister back to sound and well-adhered membrane. Apply a liberal amount of waterproofing liquid overlapping the existing membrane by 6" (150 mm). Place the reinforcing membrane fabric into the liquid and immediately coat with additional

waterproofing liquid. Allow to dry for 2 hours and topcoat with a final application of waterproofing liquid. When using LATICRETE Hydro Ban, simply cut out the blister back to sound and well-adhered membrane and apply the membrane liquid in accord with the installation instructions overlapping the existing membrane by 6" (150 mm).

**Related Documents:**

LATICRETE 9235 Waterproofing Membrane DS 236.0

LATICRETE Hydro Ban DS 663.0

LATICRETE Installation Instructions for Membranes (DS WPAF.5)

LATICRETE Hydro Ban Installation Instructions (DS 663.5)

**15. Which latex fortified portland cement based thin set mortar do I use in Swimming Pools?**

LATICRETE 211 Powder mixed with LATICRETE 4237 Latex Additive; LATICRETE 254 Platinum; LATICRETE 272 Mortar mixed with LATICRETE 3701 Mortar Admix; or LATICRETE 317 mixed with LATICRETE 3701 Mortar Admix are outstanding choices for installing tile which will be used for submerged applications.

**Related Documents:**

Detail ES-P601

Installation of Ceramic Tile in Swimming Pools TDS 192

**16. Which latex fortified portland cement based thin set mortar can I use to Install glass mosaics in water features?**

For the conventional two-step process of thin-setting and grouting, use LATICRETE 211 Powder gauged with LATICRETE 4237 Latex Additive; or, LATICRETE 254 Platinum. Another option would be to use the one-step method of installation and grouting, using LATICRETE 1500 Sanded Grout mixed with LATICRETE 4237 Latex Additive. It is always a good idea to check with the glass mosaic manufacturer for information on the use and installation of their products in a pool, fountain, spa, or water feature.

**Related Documents:**

Installation of Glass Mosaic Tile TDS145

**17. What are the most common grout problems in swimming pools, and how do I avoid them?**

Poor installation technique can lead to many types of problems (e.g. shading, blotching, shrinkage cracks, powdering and efflorescence).

Improper pool water maintenance can also lead to significant grout problems. Please refer to Section 11 of this manual for more information.

The best way to avoid these problems is to use LATICRETE SpectraLOCK PRO Grout; LATICRETE PermaColor Grout; or, LATICRETE 1500 Sanded Grout gauged with LATICRETE 1776 Grout Enhancer.

For more information on how to prevent grout problems, please refer to TDS201 or TDS 212.

**Related Documents:**

LATICRETE Grout Troubleshooting Guide (TDS201)

LATICRETE SpectraLOCK PRO Grout Troubleshooting Guide (TDS 212)

LATICRETE SpectraLOCK PRO Grout DS685.0

LATICRETE SpectraLOCK PRO Grout Installation Instructions (685.5)

\* United States Invention Patent No.: 6881768 (and other Patents)

### 12.4 Glossary<sup>4</sup>

**ABRASION HAZARD** – A surface that presents an unreasonable risk of irritation to the skin upon contact.

**ACCESSIBLE** – Designed to include physically challenged users.

**ACID** – A liquid or dry chemical used to lower the pH and/or alkalinity of pool or spa water.

**ACIDIC** – Having a pH below 7.0. Opposite of base.

**ACID WASH** – A procedure using an acid solution to clean the interior surface of a pool, with subsequent neutralization of the acid.

**ACTION POOL** – A wave pool that generates standing waves in an assortment of patterns.

**ACTIVATED CARBON** – A charcoal-like material used to remove colors, odors and/or excess oxidizer from water.

**ACTIVITY POOL** – A pool designed primarily for play activity that uses constructed features and devices, including lily pad walks, flotation devices, small slides and similar attractions.

**ADMIXTURE** – A material other than water, aggregates or hydraulic cement which is used as an ingredient of grout or mortar and which is added immediately before or during it's mixing.

**AF** – Abbreviation for the alkalinity factor in calculating the saturation index of water.

**AGGLOMERATE TILE** – A man-made stone product generally consisting of either crushed marble, granite or quartz chips with a matrix of resins and mineral pigments.

**AGGRESSIVE WATER** – Water that is corrosive because it is low in pH and/or calcium hardness and/or total alkalinity.

**AIR CHANNEL** – A system for introducing a volume of air into hollow ducting built into a spa floor, bench or other location, activated by a separate air power unit (blower).

**AIR CONTROL** – A means for spas and hot tubs to regulate air flow in the air induction system, thereby increasing or decreasing hydrotherapy action.

**AIR INDUCTION SYSTEM** – A plumbing system that provides the source of air for the air/water mixture to a hydrotherapy jet.

**AIR PUMP ASSIST BACKWASH** – The compression of a volume of air in the filter chamber (by means of an air compressor) which, when released, rapidly decompresses and forces water through the filter chamber elements in reverse. This dislodges the filter aid and accumulated dirt, allowing it to be carried to waste.

**AIR SWITCH SYSTEM** – An isolated device that sends a pulse of air down a tube to remotely operate electrical equipment.

**ALGAE** – Microscopic plant-like organisms that contain chlorophyll.

**ALGAECIDE (Also Spelled Algicide)** – Any chemical or material that kills algae.

**ALGISTAT** – Any substance or agent that inhibits the growth of algae.

**ALKALI** – A term applied to bases, usually carbonates and hydroxides, which raise the pH and alkalinity when added to water.

**ALKALINE** – Having a pH above 7.0.

**ALKALINITY** – see Total Alkalinity.

**ALKALINITY FACTOR (AF)** – Used to calculate the Saturation Index of water.

**ALUM (Aluminum Sulfates)** – A compound used to cause suspended solids in water to form filterable masses (floculate).

**AMPHOTERIC** – Having the ability to serve as either an acid or a base.

**ANCILLARY FACILITY** – An area used in conjunction with a pool, such as a public locker, shower, bathroom or dressing area; equipment room; pool deck; or building space intended to be used by pool users.

**ANTIVORTEX DRAIN COVER (Antivortex Plate or Cover)** – A plate or cover that is affixed to the main outlet of a swimming pool or spa to prevent a vortex from forming as water passes through to the main outlet.

**AVAILABLE CHLORINE**—A rating of a chemical's total chlorine content, based on a comparison to elemental (gaseous) chlorine having 100 percent available chlorine.

**BACK-BUTTER** – The spreading of a bond coat to the back of tile or stone just before it is placed to improve coverage of the mortar.

**BACK PRESSURE** – Resistance to flow, normally expressed in pounds per square inch (kilograms per square centimeter).

**BACTERIA** – Single-celled microorganisms of various forms, some of which cause infections or disease.

**BACTERICIDE** – Any chemical that kills bacteria.

**BACKWASH** – The process of cleansing the filter medium and/or elements by the reverse flow of water through the filter.

**BACKWASH CYCLE** – The time required to backwash the filter medium and/or elements and to remove debris in the filter vessel.

**BACKWASH RATE** – The rate of flow water through the filter medium per unit of area (U.S. gallons per minute per square foot).

**BALANCE** – In pools and spas, refers to a condition of the water that is neither scaling nor corrosive.

**BALL VALVE** – A device that can partially or totally obstruct the flow of water, using a ball shaped diverter.

**BARRIER** – A means to limit, delay or restrict access to a pool, spa or hot tub (refer to ANSI/NSPI-8 Model Barrier Code for Residential Swimming Pools, Spas and Hot Tubs).

**BASE**—A chemical used to raise the pH and/or total alkalinity of pool or spa water. Opposite of acid.

**BASE DEMAND** – A measure of the amount of alkaline material required to raise the pH to a predetermined level. This can be accomplished by use of a base demand test, whereby a standard base is added by drops to the pH test solution until the desired pH is reached.

**BASIC** – Having a pH above 7.0. Opposite of acidic.

**BATHER** – Any person using a pool, spa or hot tub and adjoining deck area for the purpose of water sports, recreation, therapy or related activities. Also user.

**BATHER LOAD**—See USER LOAD.

**BEACH ENTRY or ZERO ENTRY** – A sloping entry starting above the waterline at deck level and ending below the waterline in a pool or spa. (Does not refer to sand only.)

**BEGINNER'S AREA** – In a pool, a water area that is three feet or less in depth.

**BLEACH (Sodium Hypochlorite)** – Also called liquid chlorine. A chlorine source typically having between 5- and 16 percent available chlorine.

**BODY COAT**—A layer of diatomaceous earth or similar material on a filter element that acts as the filtering medium.

**BODY FEED** – A controlled amount of diatomaceous earth that is continuously added to the filter element during the course of a filter run to help maintain filter porosity.

**BOND COAT** – A material used between the back of the tile or stone and the properly prepared substrate.

**BOND STRENGTH** – A bond coat's ability to resist separating from the tile and setting bed, usually measured in pounds per square inch (psi).

**BOOSTER PUMP SYSTEM** – A pump that is completely independent of the filtration and heating system, used to provide support for hydrotherapy jets, cleaning systems and gas chlorinators or special water features.

**BREAK IN GRADE**—Occurs when the slope of a pool floor changes to a greater slope.

**BREAKPOINT CHLORINATION** – The practice of adding a sufficient amount of chlorine to water to destroy the combined inorganic chlorine present. Normally, the amount added is 10 times the combined chlorine concentration.

**BRIDGING**—Build up of body coat on diatomaceous earth filter elements to the point that the body coats of two adjacent elements touch.

**BROADCAST** – A method of applying chemicals to a pool or spa by spreading them uniformly over the water surface.

**BROMIDE** – A salt that contains a bromide ion. Bromide becomes hypobromous acid when reacted with oxidizers such as chlorine, ozone or monopersulfates.

**BROMINE** – One of several chemicals that yield hypobromous acid when added to water.

**BROMINE FEEDER** – A device used to add or deliver bromine disinfectant at a controlled rate.

**BTU (British Thermal Unit)** – A unit of measurement used to define the capabilities of heaters. One BTU is capable of raising the temperature of one pound of water by 1°F (one liter of water by 1.2°C).

**BUFFER** – Any chemical that, when dissolved in water, will resist pH change. Also any chemical solution used to calibrate pH instruments.

**BYPASS VALVE** – A valve used to limit or adjust the amount of water flowing through a device in a bypass loop to divert flow to an alternate plumbing path.

**CALCIFICATION** – Formation of calcium carbonate on walls of pools or pipes, or in a filter or heater, due to precipitation of calcium carbonate.

**CALCIUM CARBONATE** – Insoluble calcium compound that is the major component of calcium scale. Also, a substance found in nature as limestone or marble.

**CALCIUM CHLORIDE** – A soluble white salt containing calcium ions and chloride ions, used to raise the calcium hardness of pool and spa water.

**CALCIUM HARDNESS** – A measure of the amount of calcium dissolved in water and expressed in parts per million (ppm) or mg/l as calcium carbonate.

**CALCIUM HYPOCHLORITE** – A solid white form of inorganic chlorine found in both granular and tablet forms (65–75% available chlorine). Because it is an alkaline compound, it will raise the pH of pool and spa water.

**CARBON DIOXIDE** – Common gas found in the air. Can be used to lower pH in a pool.

**CARDIOPULMONARY RESUSCITATION (CPR)** – A lifesaving technique involving both chest compressions to circulate blood and mouth-to-mouth breathing to restart a non-beating heart.

**CARTRIDGE** – A replaceable, porous element designed to retain suspended particles from water.

**CARTRIDGE FILTER** – A filter that uses a porous element to act as a filter medium.

**CATCH POOL** – A pool or designated section of a pool used as a terminus for water-slide flumes.

**CAUSTIC** – Sodium hydroxide, lye. In pools, an extremely high pH alkalizer. Generally refers to high pH.

**CAUTION (Signal Word)** – Indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury. May also be used to alert against unsafe practices. (Reference ANSI Z535 Series of Standards for Safety Signs and Colors.)

**CAVITATION** – The formation of partial vacuums when pump capacity exceeds the water replacement supply.

**CEMENT GROUT** – A cementitious mixture of cement, sand or other ingredients and water or latex additive to produce a water-resistant, uniformly colored material to fill the joints of tile.

**CENTRIFUGAL FORCE** – The outward force exhibited by a circular motion.

**CENTRIFUGAL PUMP** – A pump that circulates water using a shaft-mounted impeller powered by an electric motor or gasoline engine. The centrifugal force of the spinning impeller creates the flow through the pump.

**CF** – Abbreviation for the calcium hardness factor in calculating the saturation index of water.

**CHANNELIZATION** – The undesirable process whereby filter sand is permeated by tubes or channels of calcified or oily material, allowing water to pass freely, without filtration.

**CHECK VALVE** – A valve allowing flow in one direction and obstructing flow in the other.

**CHECKS (Surface)** – Spider-web patterns in a surface that do not go all the way through; not an open crack.

**CHELATING AGENT** – A chemical used to bind (sequester) metals dissolved in water, to prevent them from precipitating and staining pool surfaces.

**CHEMICAL FEED RATE INDICATOR** – A mechanism that indicates units (weight or volume) of chemical being dispensed. May require a direct reading or the use of a reference chart.

**CHEMICAL FEEDER** – A device (floating or mechanical) used to add a chemical to pool/spa water.

**CHEMICAL FEEDER OUTPUT RATE** – The weight or volume of active ingredients delivered by a chemical feeder, expressed in units of time.

**CHEMICAL RESISTANCE** – The resistance offered by products to physical or chemical reactions as a result of contact with or immersion in various solvents, acids, alkalis, salts, etc...

**CHILDREN'S POOL/RIDE** – A ride, flume ride or other slide attraction at a water theme park, designed primarily for the use of small children.

**CHLORAMINE** – A compound formed when chlorine combines with nitrogen-containing compounds, e.g., perspiration, ammonia. These compounds can cause eye and skin irritation, and have strong objectionable odors and very low sanitizing capability.

**CHLORINATOR** – A device used to add or deliver a chlorine disinfectant at a controllable rate. Chlorinators are designed for specific chlorine compounds and should only be used with the compounds for which they are designed.

**CHLORINE** – A chemical element that exists as a gas in its elemental form, or as a part of a chemical compound. Used as an oxidant and biocidal agent to disinfect pool and spa water.

**CHLORINE DEMAND** – The amount of chlorine necessary to oxidize all organic matter present in pool water at any given moment, or over a period of time.

**CHLORINATED ISOCYANURATES (ISOS)** – Sanitizer products that are self-stabilizing due to release of free available chlorine and cyanuric acid when they dissolve.

**CHLORINE NEUTRALIZER** – A chemical compound used to reduce chlorine in water, most commonly sodium thiosulfate.

**CHLORINE RESIDUAL** – The amount of available chlorine remaining in water after the chlorine demand has been satisfied.

**CIRCUIT BREAKER** – A device designed to open and close an electrical circuit manually, and to open a circuit automatically at a predetermined over-current level, thus providing protection to the wiring and electrical components.

**CIRCULATION EQUIPMENT** – The components of a circulation system.

**CIRCULATION SYSTEM** – A system of mechanical equipment and/or components designed to ensure even distribution of heat, chemicals and filtration of water throughout a pool. Includes filters, heaters, pumps, chlorinators, piping, inlets, drains, skimmers and other devices.

**CLARIFIER** – A chemical that coagulates and neutralizes suspended particles in water. See coagulant or flocculant.

**CLARITY** – The degree of transparency of pool water. Characterized by the ease with which an object can be seen through a given depth of water.

**COAGULANT** – A chemical, usually alum, used in pools to gather and precipitate suspended matter.

**COAGULATE** – To collect, via a chemical compound, suspended matter in pool, spa or hot tub water.

**COLDJOINT** – Any point in concrete construction where a pour was terminated and the surface lost its plasticity before work was continued.

**COLLECTOR (SOLAR)** – An assembly of components used to collect solar energy for heating.

**COMBINED CHLORINE** – The portion of the total chlorine in chemical combination with ammonia, nitrogen and/or organic compounds; mostly composed of chloramines.

**COMMERCIAL/PUBLIC POOL** – Any pool, other than a residential pool, that is intended to be used for swimming or bathing and is operated by an owner, lessee, operator, licensee, or concessionaire (regardless of whether a fee is charged or not). See ANSI/NSPI-1 for classifications.

**COMPRESSIVE STRENGTH** – A material's ability to withstand a load in compression.

**CONCRETE SHELL** – Various forms of concrete which, together with steel, form the structure of a pool or spa shell.

**CONTACT CONCENTRATION** – The concentration of a chemical flow of water. Depends on the rate of addition, the flow rate of the water and the efficiency of the mixing.

**CONTAMINANT** – An undesirable organic or inorganic, soluble or insoluble substance in water, including microbiological organisms. Examples: dirt, body oil, algae.

**COPING** – The cap on the wall that provides a finishing edge around a pool/spa often finished with tile or stone. Can be formed, cast in place, precast or prefabricated from metal or plastic materials, brick or stone. May be used as part of the system that secures a vinyl liner to the top of the pool wall.

**CORROSION** – The etching, pitting or eating away of a material.

**COVE** – The radius that joins the floor and wall of a pool/spa.

**COVER** – Something that covers, protects or shelters a pool, spa or hot tub.

**Safety Cover** – As defined by ASTM F1346 “Emergency Standard Performance Specification for Safety Covers and Labeling Requirements for All Covers for Swimming Pools, Spas and Hot Tubs.” It is a barrier (intended to be completely removed before entry of users) for swimming pools, spas, hot tubs or wading pools, attendant appliances and/or anchoring mechanisms that will – when properly labeled, installed, used and maintained in accordance with the manufacturer's published instructions – reduce the drowning risk for children under 5 years of age. Specifically, safety covers are meant to inhibit small children's access to the water and to provide for the removal of any substantially hazardous level of collected surface water. (These covers may be powered or manual.)

**Solar Cover** – A cover that, when placed on a pool or spa surface, increases the water temperature by solar activity and reduces evaporation.

**Thermal Cover** – An insulating cover used to prevent evaporation and heat loss from a pool or spa.

**Winter Cover** – A cover that is secured around the perimeter of a pool or spa that provides a barrier to debris when the pool or spa is closed for the season.

**CRACK (Surface)** – A repairable break in the surface; not major, not self-curing.

**CRACK (Structural)** – A break or split that weakens the structural integrity of the pool.

**CROSS CONNECTION** – An unprotected connection involving a domestic water supply and pool water, or other non-potable water, where a contamination of the domestic system could occur.

**CURING** – Maintenance of humidity and temperature of the freshly placed mortar or grout during some definite period following the placing or finishing, assuring acceptable hydration of the cement and proper hardening of the mortar or grout.

**CUSHION-EDGED TILE** – Tile on which the facial edges have a distinct curvature that results in a slightly recessed joint.

**DANGER (Signal Word)** – A visual alerting device in the form of a decal, label placard or other marking such as an embossing, stamping, etching or other process. It advises the observer of the nature and degree of the potential hazard(s) that can cause property damage, injury or death. Can also provide safety precautions or evasive actions to take, or other directions to eliminate or reduce the hazard. Aquatic safety signage shall conform to ANSI Z535 specifications.

**Signal Word** – To convey the gravity of the risk.

**Consequences** – What will likely happen if a warning is not heeded.

**Instructions** – Appropriate behavior to reduce or eliminate a hazard.

**Danger** – Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.

**Warning** – Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

**Caution** – Indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury. May also be used to alert against unsafe practices.

**DECKS** – The areas immediately adjacent to or attached to a pool or spa that are specifically constructed or installed for sitting, standing or walking. Generally made of concrete, wood or masonry.

**DEEP AREA** – Water areas exceeding five feet in depth.

**DESIGN RATE OF FLOW** – The rate of flow used for design calculations in a system.

**DIATOMACEOUS EARTH FILTER** – A filter that uses a coating of diatomaceous earth (DE) over a porous fabric as its filter medium.

**DIATOMITE** – The filtering medium of a diatomaceous earth filter composed of microscopic fossil skeletons of the diatom, a tiny freshwater plankton used to trap solids while allowing clear water to pass through the filter. Also known as diatomaceous earth.

**DIATOMITE FILTER ELEMENT** – A device used in a filter tank called a filter grid or element, coated with a fabric that traps diatomite on its surface.

**DIFFUSER** – A pump component that reduces velocity and increases static pressure of fluid passing through a system.

**DISCHARGE HEAD** – Resistance to water flow encountered on the discharge side of a pump, measured in feet of head. Each foot of water on the suction side of the pump is equal to one foot of head on the discharge side.

**DISINFECTANT** – Any chemical used to kill undesirable or pathogenic (disease-causing) bacteria.

**DISINFECTION** – The killing of pathogenic organisms with chemicals or other proven means, such as ozone, copper or silver.

**DIVE** – A free-fall entry as a planned acrobatic maneuver into the designated diving area of a pool.

**DIVING AREA** – The area of a swimming pool that is designed to be used for diving.

**DIVING BOARD** – A flexible board secured at one end to be used for diving.

**DIVING EQUIPMENT, COMPETITIVE** – Includes competitive diving boards and adjustable fulcrum-setting diving stands intended for competitive diving.

**DIVING PLATFORM** – A stationary platform designed for diving.

**DIVING STAND** – Any supporting device for a springboard or diving board.

**DOT-MOUNTED TILE** – Tile packaged in sheet format and held together by plastic or rubber dots between the joints.

**DPD (Diethylphenylene Diamine)** – A chemical reagent that specifically measures bromine or free available and total chlorine; produces a series of colors from pale pink to dark red.

**DRAFT HOOD** – Part of an indoor heater used to vent to the outside to prevent a down draft.

**DRY ACID (Sodium Bisulfate)** – A granular material used to lower total alkalinity and pH in water.

**DRY-SET MORTAR** – A mixture of cement with sand and additives imparting water retentivity, often is used as a bond coat for setting tile.

**DYNAMIC HEAD** – The resistance caused by the friction of the water flowing through an entire circulation system, including the plumbing and equipment and the head pressure measured from the suction and discharge side.

**ELBOW** – A plumbing fitting shaped at a 90° or 45° angle. Also known as an "ell."

**EFFECTIVE FILTER AREA** – The total surface area through which designed flow rate will be maintained during filtration.

**Cartridge Type** – The total effective filter area is the cartridge fabric area that is exposed to the direct flow of water, figured in square footage of fabric. This excludes cartridge ends, seals, supports and other areas where flow is impaired.

**Diatomaceous Earth (DE) Type** – The actual area of the filter element is the total effective area of the porous fabric septum, less any area of a septum support member greater than 1/4" wide contacting the septum during filtration.

**Permanent Medium Type** – The effective filter area is the filter surface that is perpendicular to the flow direction.

**Sand Filtration Type** – The effective filter area is the top surface area of the sand within the filter calculated in square inches or square feet.

**EFFECTIVE PARTICLE SIZE** – The theoretical size of sieve (in mm) that will pass 10 percent by weight of the sand.

**EFFLORESCENCE** – The residue deposited on the surface of a material by crystallization of soluble salts present in portland cement.

**EFFLUENT** – The outflow of water from a filter, pump or pool.

**EGRESS** – The means of exiting an area.

**ELECTROLYTIC CHLORINATOR** – A device that converts dissolved chloride salt (sodium chloride) into chlorine and its reaction products.

**ENCLOSURE** – A fenced-in, secured area.

**ENERGY (Electric)** – The amount of electricity consumed when power is used over a period of time, measured in kilowatt-hours.

**ENTRY POOL** – A pool at a water theme park that is provided at the entrance to a water slide or inner-tube ride.

**EPOXY ADHESIVE** – An adhesive system employing an epoxy resin and hardener.

**EPOXY GROUT** – A grout system employing an epoxy resin and hardener and powder.

**EPOXY MORTAR** – A system employing epoxy resins and hardener portions, often containing coarse silica filler and which is usually formulated where high strength is required or industrial and commercial installations where chemical resistance is of paramount importance.

**EQUIPMENT AREA** – An area used to house recirculation and disinfecting equipment and related appliances.

**EROSION** – **1.** The act of destroying or dissolving by slow disintegration or wearing away. **2.** In an erosion feeder, the way water dissolves the chemical being fed.

**EROSION FEEDER** – A device that dispenses a sanitizer by directing a flow of water past tables, briquettes or pellets.

**ETCHING** – Corrosion on the surface; the pitting or eating away of a material such as the surface of plaster (marcite).

**EVAPORATION** – The conversion of liquid molecules into vapor.

**EXPANSIVE SOIL** – Clay soil that absorbs moisture and swells, creating the potential for structure damage.

**FEET OF HEAD** – In a hydraulic system, resistance based on the equivalent height a column of water that causes the same resistance (100' of head equals 43 pounds per square inch). The total dynamic head is the sum of all resistances in a complete operating system.

**FENCE** – A boundary between a pool/spa area and the outside, intended to deter unauthorized entry from the outside. Not intended as a structural barrier to be sat, walked or climbed on.

**FERRIC IRON** – Compounds of iron that are insoluble in water and will precipitate.

**FEROUS IRON** – Compounds of iron that are soluble in water and will impart a clear green color.

**FILTER** – A vessel that removes undissolved particles from water by recirculating the water through a porous substance (a filter medium or elements).

**Cartridge Filter** – Uses a porous element that acts as a filter medium.

**Diatomaceous Earth Filter** – Uses a thin coating of diatomaceous earth (DE) over a porous fabric as its filter medium.

**Permanent Medium Filter** – Uses a filter medium (sand).

**FILTER AGITATION** – Mechanical or manual movement to dislodge the filter aid and dirt from the filter element.

**FILTER AID** – A powder-like substance such as diatomaceous earth or volcanic ash used to coat a septum-type filter.

**FILTER CARTRIDGE** – A filtering element, usually of fibrous material.

**FILTER CYCLE** – The operating time between cleaning or backwash cycles.

**FILTER ELEMENT** – A device within a filter tank designed to entrap solids and conduct water to a manifold, collection header, pipe or similar conduit and return it to the pool, spa or hot tub. A filter element usually consists of a septum and septum support, or a cartridge.

**FILTER MEDIUM** – A finely graded material (such as sand, diatomaceous earth, polyester fabric, anthracite, etc.) that removes solid particles from water.

**FILTER SAND** – A hard, silica-like substance free of carbonates or other foreign material and used as the medium in sand filters.

**FILTRATION** – The process of capturing suspended particles and clarifying water.

**FILTRATION FLOW** – The design rate of flow, in volume over time (gallons per minute, gallons per hour), through the filter system when installed per the manufacturer's instructions with a new, clean filter medium.

**FILTRATION RATE** – The rate of water flowing through a filter during a given period of time, expressed in U.S. gallons per minute per square foot of effective filter area. Also known as filtration flow rate.

**FLOAT COAT** – The final mortar coat over which a skim coat is applied.

**FLOAT VALVE** – A valve controlled by the level of a fluid.

**FLOATING** – A method of using a straightedge to align mortar with screeds.

**FLOCCULANT (Floc)** – A chemical substance or compound that promotes the combination, agglomeration or coagulation of suspended particles in water.

**FLOODED SYSTEM** – An underwater pump that does not require priming.

**FLOOR** – The interior bottom surface of a pool or spa.

**FLOOR SLOPE** – The slope of the pool floor, usually expressed in feet or inches of vertical rise per foot or inches of horizontal distance.

**FLOW** – The rate of the movement of water, typically in gallons per minute.

**FLOW METER** – A device that measures the rate of flow of liquid through piping.

**FLOW RATE** – The volume of liquid flowing past a given point in a specified time period. Usually expressed as U.S. gallons per minute (gpm) or gallons per hour (gph).

**FLOW RIDER** – Pool at a waterpark that uses wave sheet technology for body boarding or body surfing activity.

**FLOW SWITCH** – A safety device that prevents a heater from firing if water flow through the system is not adequate.

**FLUME** – A trough-like or tubular structure, generally recognized as a water slide, that directs the path of travel and rate of descent of the rider.

**FLUME SLIDE** – Slides of various configurations that are characterized by having deep riding channels, vertical and lateral curves, and high water flows, and accommodate riders using or not using mats, tubes, rafts and other transport vehicles. Included but not limited to family raft rides, inner-tube rides, body slides, speed slides, etc.

**FREE AVAILABLE CHLORINE** – That portion of the total chlorine that is not combined chlorine and is available as a sanitizer.

**FREEBOARD** – In a sand filter, the clear vertical distance between the top of the filter medium and the lowest outlet of the upper distribution system.

**FREEZE-THAW CYCLE** – Seasonal weather and temperature changes that can cause stress to a surface.

**FRICTION** – Resistance created by liquid passing along the inner surface of a conductor pipe and fittings.

**FRICTION HEAD** – Head specifically caused by friction or drag.

**GALVANIC ACTION** – The creation of electrical current by the process of electrochemical action of dissimilar metals in a liquid.

**GALVANIC CORROSION** – The deterioration of metal produced when two dissimilar metals are exposed to the electrical current produced by electrochemical action.

**GATE VALVE** – A device in a pipe that can partially or totally obstruct the flow of water, using an internal "gate" that moves in and out as the valve is operated.

**GFCI (Ground Fault Circuit Interrupter)** – A mechanism that cuts the current to an electrical device the moment a change in voltage occurs.

**GRAB BAR/RAIL** – A rail used to enter or leave a pool/spa.

**GRADE** – A predetermined degree of slope that a finished surface should have.

**GROUNDING** – Connecting or providing a conducting path to earth or a conducting body that serves in place of earth.

**GROUT** – A cementitious, epoxy or other material used for filling joints between tiles.

**GROUTING** – The process of filing tile joints with grout.

**GUNITE** – A pneumatically applied (sprayed) concrete that is a dry mixture of cement, aggregate and/or sand. Water is applied to the mix at the hose nozzle.

**GUTTER** – Overflow trough in the perimeter wall of a pool, a component of the circulation system.

**HAIR AND LINT STRAINER** – Readily removable, perforated or otherwise porous container used to catch coarse material. (See NSF definition.)

**HALOGEN** – Any of the active chemical elements fluorine, chlorine, bromine and iodine, used as disinfectant or oxidizers.

**HANDHOLD/HANDRAIL** – A device that is intended to be gripped by a user for the purpose of resting and/or steadying him/herself. Typically located within or without the pool/spa or as part of a set of steps or deck installed equipment.

**HARDNESS** – The amount of calcium and magnesium dissolved in water, measured by a test kit and expressed as ppm of equivalent calcium carbonate.

**HAZARD** – A condition or set of circumstances that has the potential of causing or contributing to injury or death.

**HEAD** – A measure of the amount of pressure or resistance in a hydraulic system, expressed in feet.

**HEAD LOSS** – The amount that flow reduces as head increases.

**HEADER** – A manifold in a heater that directs the flow of water into and out of the heat exchanger.

**HEAT EXCHANGER** – A device with coils, tubes or plates that transfers heat from air or a fluid to another fluid without intermixing them.

**HEAT LOSS** – The natural drop in water temperature as heat is transferred to the surrounding air.

**HEAT PUMP** – A refrigeration compressor, usually electrically driven, that is operated in reverse. To obtain heat, the evaporator side (cooling coil) is exposed to water, air or ground. The coil transfers the heat from this source to the condenser coil, where it discharges the heat to a pool or spa.

**HEATER** – An electric, fossil-fueled or solar device used to heat pool or spa water.

**Electric Heater** – Uses a heating element immersed in water.

**Fossil-Fueled Heater** – Uses natural, propane gas or fuel oil and an open flame to heat a heat exchanger.

**Solar Heater** – Uses the ultraviolet rays of the sun as a heat source. Other ways to categorize heaters:

\* Direct heaters heat the tubes in which water circulates.

\* Indirect heaters circulate steam or hot water inside a heat exchanger, through which pool water flows.

**HIGH LIMIT SWITCH** – A temperature control switch that can deactivate a control circuit at a preset temperature. Normally preset at the factory and nonadjustable; must be manually reset.

**HIGH PERMEABILITY ELEMENT** – Mechanically interlocked, nonwoven filter material designed to remove suspended solids.

**HOOP** – A circumferential constraint that prohibits the staves of a hot tub from separating. Also, a device used to secure two halves of a filter together. See band.

**HOOP CONNECTOR** – A tightening and connecting device.

**HOT TUB** – A spa constructed of wood with sides and bottom formed separately, and joined together by pressure from surrounding hoops, bands or rods; as distinct from spa units formed of plastic, concrete, metal or other materials.

**HYDRAULICS** – An engineering process used to pump, filter and return water to the pool that ensures effective circulation of water and chemicals and a lack of dead spots.

**HYDROCHLORIC ACID** – A very strong acid used in pools or spas for pH control and certain specific cleaning needs, a byproduct of adding chlorine to water. Use extreme caution in handling. Called muriatic acid when diluted. See also muriatic acid.

**HYDROGEN** – The lightest chemical element. A component of water and a frequent product of chemical reactions. Used as a measure of acidity and pH in its ionic form in solution.

**HYDROGEN PEROXIDE** – A compound of hydrogen and oxygen usually supplied in an aqueous solution, used as a disinfectant.

**HYDROSTATIC PRESSURE** – The upward pressure of a liquid, commonly ground water, on the bottom of an empty pool or spa.

**HYDROSTATIC RELIEF VALVE** – A fitting installed in the bottom of a main drain, designed to open automatically or manually to relieve upward ground-water pressure by allowing water to flow into the pool or spa.

**HYDROTHERAPY JET** – A fitting that blends air and water, creating a high-velocity turbulent stream of air-enriched water.

**HYDROTHERAPY SPA** – A spa unit having a therapeutic use, but which is not drained, cleaned or refilled for each user. Includes, but is not limited to, hydrotherapy jet circulation, hot water, cold water mineral baths, air induction bubbles or any combination thereof, industry terminology includes, but is not limited to, "therapeutic pool," "hydrotherapy pool," "whirlpool," "hot spa," etc. NSPI standards exclude facilities under direct supervision and control of licensed medical personnel.

**HYPOBROMOUS ACID** – The most powerful disinfecting form of bromine in water.

**HYPOCHLORINATOR** – A chemical feeder through which liquid solutions of chlorine bearing chemicals are fed into the pool water at a controlled rate. Types of hypochlorinators include: positive displacement, which are usually motor-driven; aspirator, which work off a pressure difference in the hydraulic system; and metering, which are connected to the pump suction and use a timing mechanism.

**HYPOCHLORITE** – Any of a family of chemical compounds including calcium hypochlorite, lithium hypochlorite, sodium hypochlorite, etc., used in various forms as chlorine carriers in pool and spa water.

**HYPOCHLOROUS ACID** – The most powerful disinfecting form of chlorine in water.

**IMPELLER** – The rotating vanes of a centrifugal pump; its action creates the flow of the water.

**IMPERVIOUS TILE** – Tile with water absorption of 0.5% or less. This type of tile is ideal for submerged installations.

**INFLUENT** – The water entering a filter or other device.

**INGRESS** – Means of entry into an area.

**INLET, RETURN** – See return inlet.

**INLET FITTING** – The fitting aperture through which water under positive pressure returns to a pool or spa.

**INSULATOR** – In electricity, any device that serves as a nonconductor, usually made of glass or porcelain.

**INTERMITTENT IGNITION DEVICE** – An electrical spark device used to ignite a gas heater.

**IODINE** – A chemical element that exists as a grayish-black granule in its elemental state, or as a part of a chemical compound. In the form of liquid iodine and in iodide compounds, a biocidal agent used to disinfect pool and spa water. Chlorine used with iodides releases elemental iodine.

**IONIZATION** – The process whereby a compound, in solution, separates into charged ions.

**ISOCYANURATES** – See Chlorinated Isocyanurates.

**JETS** – See hydrotherapy jet.

**KINETIC ENERGY** – The energy from the motion imparted to a liquid by the action of impeller vanes, causing the liquid to flow out of the pump casing and away from the impeller.

**LADDER** – "A-Frame" Ladder – An entry ladder that straddles an aboveground/on ground pool wall and is either removable (Type A) or has a built-in, entry-limiting feature (Type B).

**Double Access Ladder (Type A)** – An "A-Frame" ladder that straddles the pool wall of an aboveground pool and provides pool ingress and egress, and is intended to be removed when not in use.

**Limited Access Ladder (Type B)** – A removable "A-Frame" ladder that straddles an aboveground/on ground pool wall with a built in, entry-limiting provision for making the pool inaccessible when not in use (i.e., swing-up, slide-up, "pick off" or equivalent). Staircase

**Ladder (Type C)** – A "ground-to-deck" staircase ladder that allows access to an aboveground pool deck and has a built-in, entry-limiting feature. Used with a Type E "in pool" staircase ladder to provide a means of ingress and egress from the pool to the deck.

**In-Pool or Spa Ladder (Type D)** – An "in pool" ladder located in a pool or spa to provide ingress and egress from the deck. Staircase

**Ladder (Type E)** – An "in-pool" staircase ladder located in the pool to provide a means of ingress and egress from the pool to the deck.

**LAITANCE** – A layer of weak and non-durable material containing cement and aggregate fines, brought by bleed water to the top of wet concrete, the amount of which is generally increased by overworking or over manipulating concrete at the surface.

**LANGELIER INDEX** – A numerical calculation based on the Langelier water balance equation, which indicates whether water is corrosive or scaling. See also SATURATION INDEX.

**LATEX-PORTLAND CEMENT GROUT** – A combination of portland cement grout with a latex additive.

**LATEX-PORTLAND CEMENT MORTAR** – A mixture of portland cement, sand and either a liquid latex additive or dry, redispersible latex polymers used as a tile setting mortar.

**LATH** – Metal mesh which acts as a backing or reinforcing agent for the scratch coat or mortar.

**LIFELINE** – A rope line which is laid across a pool to designate a change in slope at the bottom, especially where deep water begins.

**LINE LEVEL** – A small spirit level that can be suspended from a string line. When the string line is level, the bubble will be centered within the tube.

**LINER** – See vinyl liner.

**LINT STRAINER** – A device attached to the front of a pump to which the influent line (suction line) is connected, used to entrap lint, hair or other debris that could damage the pump.

**LIQUID ACID** – A chemical used to lower pH and total alkalinity, most commonly muriatic acid.

**LIQUID CHLORINE** – Sodium hypochlorite.

**LIQUID PROPANE GAS** – The liquid form of propane gas, a heavy hydrocarbon that occurs naturally in petroleum.

**LITHIUM HYPOCHLORITE** – A solid, white, granular form of inorganic chlorine that has a pH of approximately 9 and contains an available chlorine content (ACC) of 35 percent.

**LOWER DISTRIBUTION SYSTEM (Under Drain)** – A device in the bottom of a permanent medium filter used to collect water during filtering and distribute it during backwashing.

**MAGNESIUM HARDNESS** – A measure of the amount of magnesium dissolved in water.

**MAIN DRAIN** – An outlet located at the bottom of a pool or spa that conducts water to the recirculating pump.

**MAKE-UP WATER** – Fresh water used to fill or refill a pool or spa. See also source water.

**MANIFOLD** – A pipe with several openings for making multiple connections.

**MANOMETER** – An instrument that measures vacuum or pressure differential across an orifice by means of a column of liquid, usually mercury. In pools, usually calibrated to show rate or flow of water in gallons per minute (gpm).

**MARBLE TILE** – Marble cut into tiles and available in several finishes; including polished, honed and split face.

**MARCITE** – See plaster.

**MASTER GRADE CERTIFICATE** – A certificate which states that the tile listed in the shipment and described on the certificate are made in accordance to industry standards.

**MECHANICAL SEAL** – A device used to prevent the passage of water in or out of a centrifugal pump at the motor shaft.

**MICRON** – One-millionth of a meter. Used to describe the size of particles that filters are capable of trapping.

**MICROORGANISM** – A microscopic plant or animal.

**MORTAR BED** – The layer of mortar on which a waterproofing membrane or tile is set.

**MOTOR** – A machine that converts electrical energy into mechanical energy. When electrical current is supplied to a series of wires (windings), a magnetic field is created that drives the rotor and shaft of a pump impeller.

**MUD** – A slang term for a mortar bed.

**MULTIPLE FILTER-CONTROL VALVE** – A multiport valve having a number of control positions for various filter operations, combining the function of two or more single valves in one unit.

**MULTIPORT VALVE** – A device that allows for the multidirectional control of the passage or flow of water through a system.

**MURIATIC ACID** – Used to lower pH and/or total alkalinity in pool and spa water. See also hydrochloric acid.

**NEW POOL and/or CONSTRUCTION** – The activity of building or installing a pool and/or spa structure and its component parts where no such structure has previously existed.

**NITROGEN** – An element introduced into the pool or spa via perspiration, hair spray, cosmetics, etc. Easily combines with chlorine to form chloramines.

**NONSWIMMING AREA** – Any portion of a pool where water depth, offset ledges or similar irregularities prevent normal swimming activities.

**NON-TOXIC** – Having no adverse physiological effect on human beings or other living organisms.

**NON-VITREOUS TILE** – Tile with a water absorption rate of more than 7.0%. Typically not suitable for submerged installations.

**NOTCHED TROWEL** – A trowel with a serrated or notched edge which is used for the application of a gauged amount of tile mortar or adhesive in ridges of a specific dimension.

**OPEN TIME** – The period of time during which the bond coat retains its ability to adhere to the tile and bond the tile to the substrate.

**ORGANIC MATTER** – In a pool or spa, material introduced to the water by users and the environment such as perspiration, urine, saliva, suntan oil, cosmetics, lotions, dead skin and similar debris.

**ORGANISM** – Plant or animal life. Usually refers to algae or bacteria-like growth in pool water.

**ORIFICE** – An opening, usually carefully calibrated in size, through which water flows.

**ORIFICE PLATE** – A disc, placed in a water flow line, with a concentric, sharp-edged circular opening in the center that creates a differential pressure used to measure flow and operates feeders and instruments or other hydraulic equipment.

**ORP (also called Redox)** – Oxidation reduction potential produced by strong oxidizing agents in a water solution. Derived from the oxidation level measured in millivolts by an ORP meter.

**OTO (Orthotolidine)** – A colorless reagent that reacts with chlorine or bromine to produce a series of yellow to orange colors, indicating the amount of chlorine or bromine in water. Effectively measures total chlorine.

**OUTLET** – An aperture or fitting through which water under suction is drawn from a pool, spa or hot tub.

**OUTLET, SUCTION** – See Suction Outlet.

**OVERFLOW SYSTEM** – A system for the removal of pool/spa surface water through the use of overflows, surface skimmers, and surface water collection systems of various design and manufacture.

**OXIDIZERS** – Products used to destroy organic waste in water.

**OZONE** – A gaseous molecule composed of three oxygen atoms, generated on site and used for the oxidation of water contaminants.

**OZONE, LOW OUTPUT GENERATING EQUIPMENT (Ozonator)** – A device that will produce ozone in air at a concentration of less than 500 ppm. Usually refers to ultraviolet (UV) generators.

**OZONE CONTACT CONCENTRATION** – A measure of the amount of ozone dissolved in pool/spa water.

**OZONE GENERATOR** – A device used to produce ozone.

**PATHOGENS** – Disease-producing microorganisms. **pH** – A value for the relative acidity or alkalinity of a substance, such as water, as indicated by the hydrogen ion concentration. Expressed on a scale of 0 to 14, 0 being most acidic, 7 being neutral and 14 being most basic.

**pH METER** – An instrument that measures pH by electrical conductivity across a membrane of an electrode.

**PHENOL RED** – A dye used in measuring pH.

**PILOT GENERATOR** – The component in a millivolt system that transforms heat from the pilot into electrical energy. Also referred to as a thermal coupling or thermocouple.

**PILOT LIGHT** – A small constant flame used to ignite gas at the first burner.

**Residential Pool** – Any constructed pool, permanent or non-portable, that is intended for noncommercial use as a swimming pool by not more than three owner families and their guests and that is more than 24" in water depth, and has a volume more than 250 gallons (refer to ANSI/NSPI-5 Standard for Residential Swimming Pools). Residential pools shall be further classified into types as indication of the suitability of a pool for use with diving equipment.

**Type O** – Any residential pool where the installation of diving equipment is prohibited.

**Type I-V** – Residential pools suitable for the installation of diving equipment by type. Diving equipment classified at a higher type is not prohibited from being used with a pool of

lesser type (i.e., Type III equipment with a Type II pool). Commercial /Public

**Pool** – Any pool, other than a residential pool, that is intended for swimming or bathing and is operated by an owner, lessee, operator, licensee or concessionaire, regardless of whether a fee is charged for use. References within the standard to various types of public pools (refer to ANSI/NSPI-1 Standard for Public Swimming Pools) are defined by the following categories:

**Class A: Competition Pool** – Any pool intended for use for accredited competitive aquatic events such as Federation Internationale De Natation Amateur (FINA), U.S. Swimming, U.S. Diving, National Collegiate Athletic Association (NCAA), National Federation of State High School Associations (NFSHSA), etc. The use of the pool is not limited to competitive events.

**Class B: Public Pool** – Any pool intended for public recreational use.

**Class C: Semipublic Pool** – Any pool operated solely for and in conjunction with lodgings such as hotels, motels, apartments, condominiums, etc.

**PITTING** – A form of etching.

**PLASTER** – A type of interior finish, made from a mixture of white cement and aggregate that will accept a tint or color; applied to a concrete pool or spa. Also called marcite or Marbleite.

**PLUMB** – Perpendicular to true level.

**POINT OF THE FIRST SLOPE CHANGE** – Shall be at a minimum water depth of two feet nine inches and at least six feet from the shallow end, except as stated in NSPI's Article 6.3.

**POOL** – Aboveground

**Pool – Type O** – A removable pool of any shape that has a minimum water depth of 36" and maximum water depth of 48" at the wall. The wall is located on the surrounding earth and may be capable of being disassembled or stored and reassembled to its original integrity. Diving and waterslides are prohibited (refer to ANSI/NSPI-4 Standard for Aboveground Residential Swimming Pools). In ground Swimming

**Pool** – Any pool whose sides rest in partial or full contact with the earth (refer to ANSI/NSPI-5 Standard for Residential Swimming Pools or ANSI/NSPI-1 Standard for Public Swimming Pools as applicable). On-Ground Residential Swimming

**Pool-Type O** – A removable pool package whose walls rest fully on the surrounding earth with an excavated area below the ground level. Diving and water slides are prohibited (refer to NSPI-4 Standard for Aboveground Swimming Pools). The slope adjacent to the shallow area shall have a maximum slope of 3:1, and the slope adjacent to the side walls shall have a maximum slope of 1:1.

**Permanently Installed Swimming Pool** – A pool that is constructed in the ground or in a building in such a manner that it cannot be readily disassembled for storage (refer to ANSI/NSPI-1 Standard for Public Swimming Pools or ANSI/NSPI-5 Standard for Residential In ground Swimming Pools as applicable).

**Class D: Other Pool** – Any pool operated for medical treatment, therapy, exercise, lap swimming, recreational play and other special purposes, including, but not limited to, wave or surf action pools, activity pools, splasher pools, kiddie pools and play areas. These pools are not intended to be covered within the scope of NSPI standards.

**Public Pools** – May be diving or non-diving. If diving, they shall be further classified into types as an indication of the suitability of a pool for use with diving equipment.

**Type VI–XI** – Public pools suitable for the installation of diving equipment by type. Diving equipment classified at a higher type is not prohibited from being used on a pool of lesser type (i.e., Type VIII equipment with a Type VI pool).

**Type N** – A non-diving public pool (no diving allowed).

**Splasher (Wader) Pools** – A pool that has a minimum water depth of 24" and a maximum water depth of 36".

**Wading Pool** – A pool that has a shallow depth used for wading. There are no requirements for residential wading pools (refer to NSPI-1 Standard for Public Swimming Pools for public wading pools).

**POOL USER** – Any person using a pool and adjoining deck area for the purpose of water activity such as swimming, wading, diving or other related activities.

**POT LIFE** – The period of time during which a material maintains its workable properties after it has been mixed.

**POTABLE WATER** – Any water, such as an approved domestic water supply, which is bacteriologically safe and otherwise suitable for drinking.

**PPM** – Abbreviation for parts per million, the unit of measurement used in chemical testing that indicates the parts by weight in relation to one million parts by weight of water. Essentially identical to the term milligrams per liter (mg/l).

**PRECIPITATE** – A solid material that is forced out of a solution by some chemical reaction and settles out or remains as a haze in suspension (turbidity).

**PRE-COAT** – The coating of filter aid on the septum of a diatomaceous earth-type filter at the beginning of each filter cycle.

**PRE-COAT FEEDER** – A chemical feeder designed to inject diatomaceous earth into a filter in sufficient quantity to coat the filter septum at the start of a filter run.

**PRE-FLOAT** – The term used to describe mortar that has been placed and allowed to harden prior to bonding tile to it with thin-set or adhesive.

**PRESSURE** – In a liquid, a form of energy proportional to the depth of a column of liquid. Expressed as pounds per square inch, feet of liquid or feet of head.

**PRESSURE CHECK** – A test for the rate of water flow; also a test for leaks in a system.

**PRESSURE DIFFERENTIAL** – The difference in pressure between two parts of a hydraulic system, such as the influent and effluent of a filter.

**PRESSURE GAUGE** – A gauge that measures the amount of pressure built up within a closed container, such as a filter.

**PRESSURE SWITCH** – A device that will not allow a heater to fire unless there is adequate water pressure in the system. See Flow Switch.

**PRIMING** – Refers to re-establishing the water flow by the recirculating pump.

**PSI** – Abbreviation for pounds per square inch.

**PUMP** – A mechanical device, usually powered by an electric motor, which causes hydraulic flow and pressure for the purpose of filtration, heating and circulation of pool and spa water. Typically, a centrifugal pump design is used for pools and spas.

**PUMP CAPACITY** – The volume of liquid a pump is capable of moving during a specified period of time against a given total head.

**PUMP CURVE** – A graph of performance characteristics of a given pump under varying power, flow and resistance factors. Used in checking and sizing a pump.

**PUMP STRAINER** – A device, placed on the suction side of a pump that contains a removable strainer basket designed to trap debris in the water flow with a minimum of flow restriction. Sometimes called a hair/lint pot or trap.

**PUNCTURE HAZARD** – Any surface or protrusion that is capable of puncturing a user's skin under casual contact.

**PVC (Polyvinyl Chloride)** – A thermoplastic resin commonly used for pool piping and plumbing components.

**QUATERNARY AMMONIUM (also Quats)** – Organic compounds of ammonia used as an algae stat and germicide.

**RATE OF FLOW** – The quantity of water flowing past a designated point within a specified time, such as the number of gallons flowing in one minute (gpm).

**RATED PRESSURE** – Pressure that is equal to or less than the pressure designated on the data plate of the equipment.

**REAGENTS** – The chemical agents or indicators used to test various aspects of water quality.

**REHABILITATION** – The activity of restoring all or part of a pool or spa structure and its components to the original design condition, including the rebuilding and/or replacing of worn and broken parts or components.

**REMOTE SWITCH** – Any switching device used to activate an apparatus from a distance.

**RESIDUAL** – The measurable sanitizer present in water.

**RESPONSE TIME** – The time between pool user distress and rescue by a lifeguard.

**RETURN INLET** – The aperture or fitting through which the water under positive pressure returns into a pool or spa.

**RETURN PIPING** – Effluent piping.

**REVERSE CIRCULATION** – A circulation system in which water is taken from the surface and returned through inlets at the bottom of the structure.

**RING BUOY** – A ring-shaped floating buoy capable of supporting a user.

**ROPE AND FLOAT LINE** – A continuous line, not less than 1/4" in diameter that is supported by buoys and attached to opposite sides of a pool to separate the deep and shallow ends.

**RUBBER FLOAT (Float)** – The rubber trowel used to force grout into the joints of a tile installation, remove excess grout from the surface and form a smooth grout finish.

**SALINITY** – The sodium chloride or salt content of water.

**SAND FILTER** – A filter that uses sand, or sand and gravel, as the filter medium.

**SATURATION INDEX** – A rating that indicates whether water will have a tendency to deposit calcium carbonate from a solution, or whether it will be potentially corrosive. Four factors are used in the computation: pH, total alkalinity, calcium hardness and temperature. When correctly balanced, water will be neither scale forming nor corrosive.

**SCALE** – The precipitate that forms on surfaces in contact with water whose calcium hardness, pH or total alkalinity level is too high.

**SCARIFY** – A mechanical means of roughing a surface to obtain better adhesion of mortar to the substrate.

**SCRATCH COAT** – A mixture of cement, sand and water or latex additive as the first coat of mortar on a wall or ceiling which is usually scratched or roughened so that the subsequent coat will bond properly.

**SEALANT** – An elastomeric material used to fill and seal expansion and control joints and allow for the horizontal and lateral movement.

**SEDIMENT TRAP** – A device for trapping sediment that is required on all gas-heater piping.

**SELF-PRIMING** – A rating given to centrifugal pumps to indicate that the pump is capable of operating above pool water level, after the initial filling with water.

**SEPTUM** – The part of a filter made of cloth, wire screen or other porous material on which the filter medium or aid is deposited.

**SEQUESTERING AGENT** – Synonymous with a chelating or metal complexation agent, reacts with potential stain-producing metal ions (i.e., copper, iron, etc.) to reduce staining of pool/spa surfaces and associated colored water.

**SERVICE FACTOR** – The degree to which an electric motor can be operated above its rated horsepower without danger of overload failure.

**SETTING BED** – The layer of mortar on which the tile is set.

**SHALLOW AREAS** – Areas of a pool or spa with water depths less than 5'.

**SHOCK** – Product used to treat microbial infestations and inorganic contaminants in water. Must be registered by EPA.

**SHOCK OXIDIZER** – Product used to destroy non-living organic and inorganic contaminants in water, which is neither a sanitizer nor algacide.

**SHOCK OXIDIZER TREATMENT** – The practice of adding a shock oxidizer product to water.

**SHOCK TREATMENT** – The practice of adding a shock product to water.

**SHOTCRETE** – A mixture of cement and sand that is applied to contoured and supported surfaces to build a pool or spa. Shot-crete is premixed and pumped wet to the construction site.

**SHUT-OFF HEAD** – The amount of head at which the pump can no longer circulate water.

**SIGHT BARRIER** – The available open space in any given or total fence area.

**SKIMMER (also Surface Skimming System)**

**Thru-wall** – A device installed in the wall of an in ground pool or spa or aboveground/on ground pool that allows for continuous removal of floating debris and surface water to the filter.

**Over-the-Wall** – A device installed over the wall of an aboveground/on ground pool that allows for continuous removal of debris and surface water to the filter.

**SKIMMER COVER** – A device or lid to close the deck opening to the skimmer housing.

**SKIMMER EQUALIZER PIPE** – The connection from the skimmer housing to the pool, spa or hot tub below the weir; sized to satisfy pump demand and prevent air lock or pump loss of prime.

**SKIMMER EQUALIZER VALVE** – The check valve on the equalizer line that opens to draw water when the water level inside the skimmer body drops below operating level, and remains closed during normal skimming.

**SKIMMER HOUSING** – The structure that attaches to or contains the skimmer weir, strainer basket, float valve and other devices used in the skimming operation. 13 – Appendix

**SKIMMER SYSTEM** – The waterline is at the midpoint of the operating range of the skimmers when there are no users in the pool/spa.

**SKIMMER WEIR** – The part of a skimmer that adjusts automatically to small changes in the water level to ensure a continuous flow of water to the skimmer.

**SLAKE** – Allowing the mixture of mortar, thin-set or grout to stand for a brief period of time after the ingredients have been thoroughly combined and before final mixing occurs. This enables the moisture in the mix to penetrate lumps in the dry components, making it easier to complete the mixing procedure.

**SLIP-RESISTING** – Refers to a surface that has been treated or constructed so as to significantly reduce the chance of a user slipping. The surface shall not be an abrasion hazard.

**SLOPE** – An inclined surface.

**SLURRY COAT** – A bond coat for installation of or onto a mortar bed.

**SLURRY FEED** – Diatomaceous earth continuously added to filter elements during the course of a filter run to help maintain filter porosity. Also body feed.

**SODA ASH (also Sodium Carbonate)** – A chemical compound in white powder form used to raise pH of water.

**SODIUM BICARBONATE (Baking Soda)** – A chemical compound in white powder form used to raise total alkalinity of water.

**SODIUM BISULFATE (also Dry Acid)** – A granule used to lower the pH and/or total alkalinity of water.

**SODIUM CARBONATE** – See soda ash.

**SODIUM DICHLORO-ISOCYANURATE (also Sodium Ichloro-S-Triazinetrione)** – An organic chlorine that in granular form has approximately 62 percent chlorine, and in dehydrate form has approximately 56 percent chlorine. Contains 58.7% stabilizer by weight and has a pH of 6.0.

**SODIUM HYPOCHLORITE** – The clear, liquid form of an inorganic chlorine compound obtainable in concentrations of 5- to 16% available chlorine.

**SODIUM THIOSULFATE** – A chemical compound used to destroy chlorine.

**SOFT WATER** – Water that has very low calcium and magnesium content – less than 6 grains per gallon (less than 100 ppm).

**SOOT** – A black, powdery, carbonaceous substance created by an improper air-fuel mixture in the combustion of fossil fuels. A byproduct of incomplete combustion.

**SOURCE WATER** – Water used to fill or refill a pool or spa. See also make-up water.

**SPA (also Hydrotherapy Spa)** – A hydrotherapy unit of irregular or geometric shell design.

**Permanent Residential Spa** – A spa in which the water-heating and water-circulating equipment is not an integral part of the product. Intended as a permanent plumbing fixture and not intended to be moved (refer to ANSI/NSPI-3 Standard for Permanently Installed Residential Spas).

**Public Spa** – Any spa, other than a permanent residential spa or residential portable spa, intended to be used for bathing and operated by an owner, lessee, operator, licensee or concessionaire, regardless of whether a fee is charged for use (refer to ANSI/NSPI-2 Standard for Public Spas).

**Residential Portable Spa (Two Types) – Non-Self-Contained Spa** – A spa in which the water-heating and water-circulating equipment is not an integral part of the product. Non-self-contained spas may employ separate components such as an individual filter, pump, heater and controls, or they may employ assembled combinations of various components (refer to ANSI/NSPI-6 Standard for Residential Portable Spas).

**Self-Contained Spa** – A spa in which all control, water-heating and water-circulating equipment is an integral part of the product. Self-contained spas may be permanently wired or cord-connected.

**SPLASH POOL** – A pool having a water depth not exceeding 18 inches, primarily intended for the use of small children. May include constructed play devices such as small, flume type waterslides.

**SPREAD** – The clear distance between the sides rails of a ladder.

**STABILIZER (also CYANURIC ACID, Isocyanuric Acid, Conditioner or Triazenetrione)** – A chemical that helps reduce the excess loss of chlorine in water due to the ultraviolet rays of the sun.

**STATIC COEFFICIENT OF FRICTION (C.O.F.)** – Slip resistance. The degree of slip resistance presented in a quantitative number that expresses the degree of slip resistance.

**STATIC HEAD** – Head loss caused by the weight of a standing water column to be moved; encountered on both the suction and discharge sides of a pump.

**STATIC SUCTION HEAD** – The vertical dimension between the pump center line and the level of the liquid being pumped when it is below the impeller plane, expressed in feet of head.

**STATIC SUCTION LIFT** – The vertical distance in meters (or feet) from the center line of the pump impeller to the pool water level.

**STEPS, RECESSED STEPS, LADDERS and RECESSED TREADS** – Means of pool and spa ingress and egress. These elements are intended to be used separately or in conjunction with one another.

**Step(s)** – A riser/tread or series of risers/treads extending down from the deck and terminating at the pool or spa floor. Includes recessed steps with risers located outside of user areas.

**Ladder** – A series of vertically separated treads or rungs connected by vertical rail members or independently fastened to an adjacent vertical pool wall (see ladder for definitions of particular ladder types).

**Deck Ladder** – Provides deck access from outside the pool or spa.

**Recessed Treads** – A series of vertically spaced cavities in the pool or spa wall, creating tread areas for step holes.

**STRAINER BASKET** – An easily removable, perforated or otherwise porous container used to catch coarse material in the pump lint strainer.

**SUBSTRATE** – The underlying support for ceramic tile installations.

**SUCTION HEAD** – Resistance to water flow encountered on the suction side of a pump, measured in feet of head. Reflects the vertical lift required by the pump's intake.

**SUCTION OUTLET** – An aperture or fitting, other than a skimmer, on the side wall of a pool or spa through which water under negative pressure (vacuum) is drawn from the pool or spa to the pump or circulation system.

**SUCTION PIPING** – Influent piping.

**SUPERCHLORINATION** – The practice of adding a sufficient amount of chlorinating compound to water to destroy chlorine demand compounds and any combined chlorine present. Generally, the level of chlorine added is 10 times the level of combined chlorine in the water. See also breakpoint chlorination.

**SURFACE SKIMMING SYSTEM** – Refers to perimeter-type overflows, surface skimmers and surface-water collection systems of various design and manufacture. See skimmer.

**SWIMMING AREA** – Any area of a pool more than three feet in water depth that is devoted to swimming.

**SWIMMING POOL** – Any structure intended for swimming or recreational bathing that contains water over 24" (610 mm) deep.

**SWIMMING POOL (Indoor)** – A swimming pool which is totally contained within a structure and surrounded on all four sides by the walls of the enclosing structure.

**SWIMMING POOL (Outdoor)** – Any swimming pool which is not an indoor swimming pool.

**TAMPER-PROOF** – Refers to equipment that requires the use of tools to alter or remove portions of the equipment.

**TEMPERATURE FACTOR (TF)** – Used when determining the Saturation Index.

**TEMPERATURE RISE** – The difference between the desired water temperature and the current water temperature.

**TEST KIT** – A device used to monitor specific chemical residual or demands in pool or spa water.

**THERMOSTAT** – A temperature-control device that cycles the heater on and off to maintain the desired temperature.

**TIME CLOCK** – A mechanical device that automatically controls the time periods that a pump, filter, heater, blower or other electrical device is in operation.

**TIME DELAY** – A time-controlled switch used to provide a rest period or to stop repeated false starts.

**TITRATION** – A method of testing the total alkalinity and calcium, and magnesium hardness, of pool, spa or hot tub water.

**TOTAL ALKALINITY** – A measure of the pH buffering capacity of water. Alkalinity is generally expressed in terms of the equivalent concentration of calcium carbonate in mg/l (or ppm).

**TOTAL ALKALINITY FACTOR (TA)** – Used when determining the Saturation Index.

**TOTAL CHLORINE** – The sum of both the free available and combined chlorines.

**TOTAL DISSOLVED SOLIDS (TDS)** – A measure of the total amount of dissolved matter in water, e.g., calcium, magnesium, carbonates, bicarbonates, metallic compounds, etc.

**TOTAL DYNAMIC HEAD** – See feet of head.

**TOXIC** – Having an adverse physiological effect on human beings or other living organisms.

**TRICHLORO-ISO-CYANURATE (also Trichloro-S Triazinetrione)** – A form of organic chlorine, most common in compressed form (tablets or sticks), that has 90 percent or more available chlorine, approximately 55.5 percent stabilizer by weight, and an approximate pH of 2.9. See also sodium dichloroisocyanurate.

**TURBIDITY** – A cloudy condition of water due to the presence of extremely fine particles in suspension that interfere with the passage of light.

**TURNOVER RATE** – The period of time (usually expressed in hours) required to circulate a volume of water equal to the pool/spa capacity.

**TWO-SPEED PUMP** – A centrifugal pump with a motor that operates at two different RPM speeds.

**ULTRA-VIOLET LIGHT** – A component of sunlight which can be generated artificially. It can stimulate many types of organic molecules to become chemically reactive and can decompose a variety of chemical species. Can be used as a sanitizer supplement to inactivate microorganisms.

**UNDERWATER LIGHT** – A fixture designed to illuminate from beneath the water surface.

**Dry Niche Light** – A light unit placed behind a watertight window in a pool, spa or hot tub wall.

**Wet Niche Light** – A watertight and water-cooled light unit placed in a submerged niche in a pool, spa or hot tub wall and accessible only from the pool.

**UPPER DISTRIBUTION SYSTEM** – A system designed to distribute the water entering a permanent medium filter while preventing movement or migration of the filter medium. Also properly collects water during filter backwashing unless other means are provided.

**URETHANE** – An elastomeric polymer with excellent chemical and water resistance. It can be difficult to install tile or stone directly to this type of membrane.

**USER** – Any person using a pool, spa or hot tub and adjoining deck area for the purpose of water sports, recreation, therapy or related activities.

**USER LOAD** – The number of people in the pool or spa area at any given moment or at any stated period of time.

**VACUUM** – The reduction of atmospheric pressure within a pipe, tank, pump or other vessel. Measured in inches of mercury. One inch of mercury equals 1.13' of head. The practical maximum vacuum is 30" of mercury, or 33.9' of head.

**VACUUM FILTER** – A filter, usually of diatomite type, through which water is pulled by a pump mounted on the effluent side of the filter.

**VALVE** – Any device in a pipe that will partially or totally obstruct the flow of water (as in a ball, gate or glove valve) or permit flow in only one direction (as in a check or foot valve).

**Bleeder Valve** – Allows air to be vented from a system.

**Multiport Valve** – Allows for multidirectional control of the flow of water through a system.

**Push-Pull Valve** – Allows for dual directional control of the flow of water through a system.

**VELOCITY** – The speed at which a liquid flows between two specified points, expressed in feet per second.

**VELOCITY HEAD** – The equivalent distance a liquid must fall to attain a given velocity. The amount of energy, expressed in feet of head, required to accelerate the liquid to a given velocity.

**WATERPROOFING MEMBRANE** – A covering applied to a substrate before tiling to protect the substrate and framing from damage by water.

**WATER PRESSURE SWITCH** – A switch that, from water flow, detects abnormally low pressures on a piece of equipment and can shut it off.

**WATTS VALVE** – A mechanical valve that opens with high pressure or high temperature, used as a safety device on fossil-fuel heaters.

**WEIR** – A device included with a through-the-wall or over-the-wall skimmer that controls the amount of surface water (flow) drawn into the skimmer and filtration system. See also skimmer weir.

**WET AREAS** – Surfaces that are either soaked, saturated, or regularly and frequently subjected to moisture or liquids (usually water).

**WET NICHE** – See underwater light.

**WINTERIZED LINER** – A plastic liner that is manufactured with sufficient plasticizers to withstand exposure to its lowest rated temperature of -20°F (-29°C).

**WINTERIZING** – The process of preparing a pool or spa for freezing weather. Includes chemical treatment of the standing water, plus physical and chemical protection against freezing of the pool or spa, and its equipment.

**WRINKLE** – A small ridge or crease in an otherwise smooth surface.

<sup>1</sup> <http://www.allbusiness.com/arts-entertainment-recreation/507693-1.html>

## 12.5 RESOURCE GUIDE – TRADE ORGANIZATIONS AND TECHNICAL RESOURCES

### Technical Design Manual

Direct Adhered Ceramic Tile, Stone and Thin Brick Facades Technical Design Manual  
Richard Goldberg, Architect AIA, CSI  
c/o LATICRETE International, Inc.  
1 LATICRETE Park North  
Bethany, CT 06524  
+1.203.393.0010  
www.laticrete.com

### Ceramic Tile Materials and Methods

Tile Council of North America, Inc. (TCNA)  
100 Clemson Research Blvd.  
Anderson, SC 29625  
+1.864.646.8453  
www.tileusa.com

Terrazzo, Tile & Marble Association of Canada (TTMAC)  
30 Capston Gate, Unit 5  
Concord, Ontario, Canada L4K 3E8  
+1.905.660.9640  
www.ttmac.com

Ceramic Tile Institute of America, Inc. (CTIOA)  
12061 West Jefferson  
Culver City, CA 90230-6219  
+1.310.574.7800  
www.ctioa.org

Tile Contractors Association of America (TCAA)  
4 East 113th Terrace  
Kansas City, MO 64114  
800.655.8453  
www.tcaainc.org

National Tile Contractors Association (NTCA)  
P.O. Box 13629  
626 Lakeland East Dr.  
Jackson, MS 39236  
+1.601.939.2071  
www.tile-assn.com

International Masonry Institute (IMI)  
The James Brice House  
42 East St.  
Annapolis, MD 21401  
+1.410.280.1305  
www.imiweb.org

### Natural Stone Methods and Materials

Marble Institute of America (MIA)  
28901 Clemens Rd.  
Westlake, OH 44145  
+1.440.250.9222  
www.marble-institute.com  
Masonry Institute of America  
22815 Frampton Ave.  
Torrance, CA 90501-5034  
800.221.4000  
www.masonryinstitute.org

### Thin Brick Masonry Materials and Methods

Brick Institute of America (BIA)  
11490 Commerce Park Dr.  
Suite 300  
Reston, VA 22091  
+1.703.620.0010  
www.bia.org

International Masonry Institute (IMI)  
The James Brice House  
42 East St.  
Annapolis, MD 21401  
+1.410.280.1305  
www.imiweb.org  
Masonry Institute of America  
22815 Frampton Ave.  
Torrance, CA 90501-5034  
800.221.4000  
www.masonryinstitute.org  
National Concrete Masonry Association (NCMA)  
13750 Sunrise Valley Dr.  
Herndon, VA 20171-4662  
+1.703.713.1900  
www.ncma.org

### **Concrete, Pre-Cast Concrete**

Portland Cement Association  
5420 Old Orchard Rd.  
Skokie, IL 60077  
+1.847.966.6200  
www.cement.org

Pre-cast/Pre-stressed Concrete Institute (PCI)  
209 West Jackson Blvd.  
Chicago, IL 60606  
+1.312.786.0300  
www.pci.org

Wire Reinforcement Institute (WRI)  
942 Main St.  
Hartford, CT 06103  
800.542.4974  
www.wirereinforcement.org

American Concrete Institute (ACI)  
P.O. Box 9094  
Farmington Hills, MI 48333-9094  
+1.248.848.3700  
www.concrete.org

### **Test Standards and Building Codes**

American Society for Testing & Materials  
International (ASTM)  
100 Barr Harbor Dr.  
P.O. Box C700  
West Conshohocken, PA 19428-2959  
+1.610.832.9585  
www.astm.org

Materials and Methods Standards Association  
(MMSA)  
P.O. Box 350  
Grand Haven, MI 49417-0350  
+1.616.842.7844  
www.mmsa.ws

International Code Council (ICC)  
4051 West Flossmoor Rd.  
Country Club Hills, IL 60478-5795  
888.422.7233  
www.iccsafe.org

United States Green Building Council (USGBC)  
1015 18th St., NW  
Suite 508  
Washington DC 20036  
+1.202.828.7422  
http://www.usgbc.org

American National Standards Institute (ANSI)  
1819 L St., NW 6th Floor  
Washington, DC 20036  
+1.202.293.8020  
ansi.org

International Organization for Standardization  
(ISO)  
1, rue de Varembé, Casa postale 56  
CH-1211 Geneva 20, Switzerland  
41 22 749 01 11  
www.iso.org

National Institute of Building Sciences (NIBS)  
1090 Vermont Ave., NW  
Suite 700  
Washington, DC 20005-4905  
+1.202.289.7800  
www.nibs.org

### **Sealants, Waterproofing and Adhesives**

Sealant, Waterproofing & Restoration Institute  
(SWRI)  
14 West 3rd St.  
Suite 200  
Kansas City, MO 64105  
+1.816.472.7974  
www.swrionline.com

Adhesive & Sealant Council, Inc.  
7979 Old Georgetown Rd.  
Suite 500  
Bethesda, MD 20814  
+1.301.986.9700  
www.ascouncil.org

### **Cement Plaster/Render**

International Institute for Lath & Plaster  
P.O. Box 3922  
Palm Desert, CA 92260-3922  
+1.760.837.9094  
www.iilp.org

**Expansion Joints**

Expansion Joints Manufacturers Association  
25 North Broadway  
Tarrytown, NY 10591  
Fax: 914.332.1541  
[www.ejma.org](http://www.ejma.org)

**Swimming Pools and Spas**

The Association of Pool and Spa Professionals  
(APSP)  
2111 Eisenhower Ave.  
Suite 500  
Alexandria, VA 22314-4695  
+1.703.838.0083  
Fax: 703.549.0493  
[www.apsp.org](http://www.apsp.org)  
Plumbing

American Society of Mechanical Engineers  
(ASME)  
Three Park Ave.  
New York, NY 10016-5990  
800.843.2763 (USA/Canada)  
001.800.843.2763 (Mexico)  
973.882.1170 (Outside North America)  
[www.asme.org](http://www.asme.org)







**Innovative Tile and Stone  
Installation Systems**

Corporate Headquarters:

LATICRETE International, Inc.

One LATICRETE Park North  
Bethany, CT 06524-3423 USA

1.800.243.4788

+1.203.393.0010

[www.laticrete.com](http://www.laticrete.com)

Asia Pacific: +852.2526.6660

Australia: +61.3.9933.6111

China: +86.21.5789.3300

Eastern Europe: +790.9661.1644

Europe: +34.96.649.1908

India: +91.40.3041.3100

Latin America: +1.203.393.0010

Middle East: +971.7.244.6396

South East Asia: +65.6515.3028

**DS-725.0-0810**

©2010 LATICRETE International, Inc.  
LATICRETE, LATAPOXY, SPECTRALOCK and the  logo are Registered Trademarks of LATICRETE International, Inc.

Microban is a registered trademark of Microban Products Company.

Kevalor is a registered trademark of Dupont Products Company.

GREENGUARD Indoor Air Quality Certified® Product.

Masonite is a registered trademark of Masonite International, Inc.

Liquid Nails is a registered trademark of Liquid Nails Products Company.

Buldex is a Registered Trademarks of Buldex, Inc., Ottawa, Kansas.

\* United States Patent No.: 6881768 (and other Patents).